 


T26

True Wireless Earbuds

User Manual

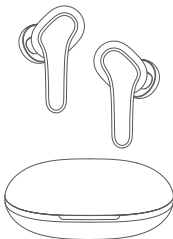



Thank you for purchasing our products. This manual addresses the safety guidelines, warranty and operating instructions. Please review this manual thoroughly before operating your device.

English Version

Package Contents.....	1
At a Glance.....	2
Earbuds LED Indicator Guide.....	3
Charging Case LED Indicator Guide.....	3
Using the Earbuds.....	4
Cleaning the Earbuds and Charging Case.....	8
Trouble Shooting.....	9
Specifications.....	12
SAFETY AND WARRANTY.....	13


Package Contents

  - ① Wireless earbuds × 1 pair (L / R)
- ② Charging case × 1
- ③ Ear tips × 3 pairs (S / M / L; M size ear tips pre-installed)
- ④ USB-C charging cable × 1
- ⑤ User manual × 1
- ⑥ Quick start guide × 1




At a Glance

 Charging Case

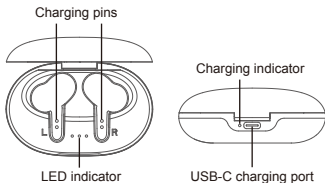

Earbuds

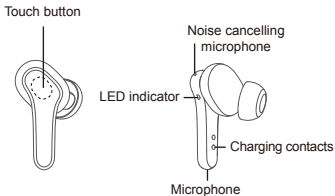 

Earbuds LED Indicator Guide

System State	Indicator Activity
Pairing	Flashes red and white alternately
Connected	Flashes white once every 8 seconds
Being charged	Solid red
Fully charged	Off
Low battery	Flashes red twice every 5 seconds with voice prompt

Charging Case LED Indicator Guide

Open the charging case to check its battery level.

Battery Level	Indicator Activity
60%-100% battery	The 3 indicators stay white for 3 seconds
20%-60% battery	The first 2 indicators stay white for 3 seconds
0%-20% battery	The first indicator stays white for 3 seconds
Low Battery	The first indicator flashes white 5 times

Note:

The charging indicator stays red when the charging case is being charged and goes off when fully charged.

Using the Earbuds

When you use the earbuds for the first time, remove the insulating films on the charging contacts of the earbuds.

Charge the earbuds

- 1) Put the earbuds into the charging case.
- 2) Close the case lid.

Charge the charging case

- 1) Plug the small end of the USB-C cable into the USB-C port of the charging case.
- 2) Plug the other end into a USB wall charger or computer (DC 5V) that is powered on.

Notes:

- It takes approximately 1.5 hours to fully recharge the earbuds.
- Fully charge both the earbuds and the charging case before the first-time using.
- The earbuds and the charging case charge simultaneously. The charging case can be used as a standalone charger.

Power on & off

Power on: Open the charging case.

Power off: Put the earbud(s) back into the charging case and close the lid.

Note:

When the earbuds are being charged in the charging case and the case is out of power, the earbuds will turn on automatically.

Pair

- 1) Make sure the earbuds and your Bluetooth device are next to each other or within 3 feet and there are no obstacles between.
- 2) Open the charging case. Earbuds are automatically on and enter pairing mode.
- 3) Turn on the Bluetooth of your Bluetooth device.
- 4) In the list of found Bluetooth devices in your Bluetooth device, choose "T26" to pair.

Notes:

- The earbuds will directly enter pairing mode the first time you turn them on.
- Each time you turn on your earbuds, they will automatically connect to your last successfully connected device if available within the Bluetooth range.
- When the earbuds are on but not paired with a Bluetooth device, they will be automatically off in 5 minutes.
- **Mono mode:** When Bluetooth connected, you can use either one of the earbuds only by putting the other one back into the charging case and closing the lid.

Button controls

Function	What to do
Play / Pause	Double-tap the touch button of either earbud.
Previous / Next track	Triple-tap the touch button of the left / right earbud.
Answer / End a call	Double-tap the touch button of either earbud.
Reject a call	Tap and hold the touch button of either earbud for 2 seconds.
Activate / Deactivate Siri or other voice assistant software	Tap and hold the touch button of the LEFT earbud for 2 seconds. Tap and hold the touch button for 2 seconds when using one earbud.

ANC function

Tap and hold the touch button of the **RIGHT** earbud for 2 seconds to enable/disable the ANC function.

Note:

You cannot use the ANC function when using one earbud.

Reset the earbuds

- 1) Put the earbuds back into the charging case and the earbuds indicators stay red.
- 2) Wait that the earbuds indicators flash red once.
- 3) Tap the touch buttons of both earbuds 5 times simultaneously and the indicator of the right earbud flashes white 3 times.

Cleaning the Earbuds and Charging Case

The earbuds and charging case may require periodic cleaning.

Earbud nozzles	Clean only with a dry, soft cotton swab or equivalent. Note: Never insert any cleaning tool into the nozzle.
Charging pins (on earbuds and case)	To prevent rusting, regularly clean with a dry, soft cotton swab or equivalent.
Charging case	Clean only with a dry, soft cotton swab or equivalent.

Trouble Shooting

Q: Pairing fails.

A:1) Put the earbuds back to the charging case and earbuds are being charged.

2) Take the earbuds out of the case and earbuds enter pairing mode.

3) Choose "T26" in your phone to pair.

If the pairing still fails, check the following points:

- Make sure the earbuds and your Bluetooth device are next to each other or within 3 feet and there are no obstacles between.
- There are no signal interference nearby (check the "Connection is not stable" part for signal interference conditions).
- Try to reboot your Bluetooth device.

Q: I paired the earbuds with my phone before, but I failed to pair them with my phone again.

A: Turn on the Bluetooth of your phone and in "MY DEVICES", choose "T26" and tap " " → "Forget This Device". Then pair the earbuds with your phone again.

Q: Connection is not stable.

A: Bluetooth signal is transmitted wirelessly and signals can be affected, which results in intermittent sound of earbuds, in the following conditions:

- The distance between the earbuds and your Bluetooth device is at the edge of the Bluetooth pairable distance.
- Transmitted signals encounter obstacles or human body blockage.
- There are high-power electronic devices nearby.
- There are other Bluetooth devices and are being turned on / off nearby.

To resume stable connection between the earbuds and your Bluetooth device, try to avoid the above conditions and do the pairing again following the steps in the pairing fails part.

Q: When playing music, the left and right earbuds cannot be synchronized.

A: Tap and hold the touch button of the RIGHT earbud for 2 seconds to enable / disable the ANC function and the two earbuds will be synchronized.

Specifications

Model	T26
Bluetooth Version	V5.0
Battery	35mAh (each earbud), 620mAh (charging case)
Charging Time	Approximately 1.5 hours (earbuds), 1.5 hours (charging case)
Waterproof Rate	IPX4
Input	DC 5V/1A
Playtime (varies by volume level and content)	Up to 5 hours per charge, 30 hours with charging case (ANC on) Up to 6 hours per charge, 36 hours with charging case (ANC off)
Bluetooth Range	10 m / 33 ft.
Supporting Protocols	A2DP / HFP / HSP / AVRCP
Working Temperature	-10°C to 40°C

SAFETY AND WARRANTY

Important safety instructions

- Use of earbuds will impair your ability to hear other sounds. Use caution while using your earbuds when you are engaging in any activity that requires your full attention.
- If you have a pacemaker or other electrical medical devices, consult your physician before using this product.
- This product is not a toy – never allow children to play with this product. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never try to dismantle the product yourself, or push objects of any kind into the products, as this may cause short circuits which could result in a fire or electric shock.
- None of the components can be replaced or repaired by users. Only authorized dealers or service centers may open the product.

- Avoid exposing your product to heat and humidity to protect against damage to the product or injury to you.
- Keep all products, cords, and cables away from operating machinery.
- If the product overheats, dropped or damaged, has a damaged cord or plug, or has been dropped in a liquid, discontinue use and contact us.
- Do NOT use in areas where there are explosive hazards.
- Do NOT submerge the product in water. Do NOT expose the product to moving water (e.g., from a faucet, etc.).
- Do NOT wear the earbuds while showering or bathing, or when participating in water sports, e.g., swimming, waterskiing, surfing, etc.
- Leaving the product in hot or cold places, such as in a closed car in the summer and winter conditions, will reduce the capacity and lifetime of the earbuds.
- Use of a power supply or charger that is not recommended or sold by power pack manufacturer may result in a risk of fire or injury.

- Do not use the charging case in excess of its output range.
- Do not use a charging case that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Dispose of the product according to local standards and regulations.

Remember: Always drive safely, avoid distractions and follow local laws!

Using the earbuds while operating a motor vehicle, motorcycle, watercraft or bicycle may be dangerous, and is illegal in some jurisdictions, just as use of the earbuds with both ears covered while driving is not permitted in certain jurisdictions. Check your local laws. Use caution while using your earbuds when you are engaging in any activity that requires your full attention. While engaging in any such activity, removing the earbuds from your ear or turning off your earbuds will keep you from being distracted, so as to avoid accident or injury. Do not take notes or read documents while driving.

WARRANTY

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty to all our devices as we continue to make amazing products. Please contact us if you have any questions about our devices.