

## **Troubleshooting Steps**

- Blades should be cleaned and oiled regularly, using the brush and oil provided.
- A lack of blade cleaning and oiling will lead to increases in noise and heat
- Clipper does not operate – ensure the battery is fully charged. Only use the transformer provided.