

How To Clean

How To Clean the Unit

- For best performance, clean the unit after each use. Do not expose the unit to water or excess moisture.
- Turn the unit OFF.
- Remove the cover and head from the unit.
- Wipe the unit with a clean dry cloth and replace the protective cover.

How To Clean Heads

- Rinse heads under warm water to remove any dust.
- Air dry heads before use and storage.
- Store heads in provided storage case.

Visit www.FlawlessBeauty.com to register your Finishing Touch Flawless™ Salon Nails device, and to sign up for special offers.

CONNECT • FOLLOW • DISCOVER



@FlawlessBeauty



Distributed by:

Wayne, NJ 07470
Made in China © 2020 Ideavillage
customerservice@ideavillage.com
FLWSALONNAILS020421MW

FINISHING TOUCH

FLAWLESS™ SALON NAILS

Great for Manicures & Pedicures

Instruction Guide

Thank you for your purchase of
Finishing Touch Flawless™ Salon Nails

Visit www.FlawlessBeauty.com
for FAQs and How To Videos.

What's Included



SAVE THESE INSTRUCTIONS



IMPORTANT SAFETY INSTRUCTIONS

When using an electrical product, basic precautions are required to always be followed, including the following:

Read all instructions before using this product

DANGER

To reduce the risk of electrical shock:

- Do not reach for the unit if it has fallen into water while charging. Unplug immediately from outlet.
- The power cord and the accessories connected to it are not for immersion or for use in shower.
- Always unplug product from the electrical outlet/adaptor after charging.
- Do not place or store product where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Unplug this product before cleaning.
- The battery used in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 200°F or incinerate.


WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when plugged in.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Do not allow children to use or play with product.
- Use this product only for its intended household use as described in this manual.
- Charge only with the charging cable provided with this product.
- Charging cable must only be supplied by a Class 2 USB charger or LPS Power Supply at voltage corresponding to the marking on the unit.
- Never charge this product when it has a damaged cord or plug, operate when it is not working properly, after it has been damaged, or after it has been dropped in water.
- Do not use this product with damaged or broken heads, as it has the potential to result in injury.
- Keep product, charging cord and USB power adapter away from heated surfaces.
- Always attach charging cable to product first then to compliant power adapter, then to outlet. To disconnect, remove adapter from outlet, then remove charging cable from unit.
- Appliance not intended to be used in, or around water.
- This appliance contains batteries that are non-replaceable.
- The battery is to be disposed of safely.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

C. Buff & Shine

Speed: Recommended Low or High Speed

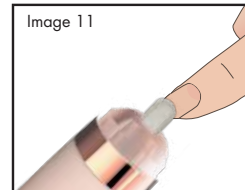

For: Buffing unpolished nails


- Leaving you with the perfect finish

How To Use: Fully insert head

- Gently move over the unpolished nail (Image 11)
- Nails are ready for polish if desired

D. Polish Prep


Speed: Recommended Low or High Speed

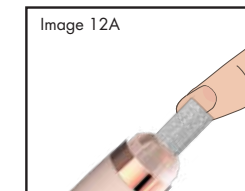

For: Prepping nails before polish

How To Use: Fully insert head

- Gently move over the nail (Image 12A & 12B)

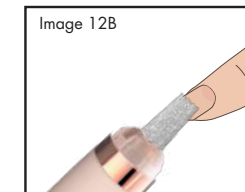

E. Cuticle Care


NOTE: Use this head on its side. Do not push the tip of the head into the nail bed.

Speed: Recommended Low Speed

For: Cleaning up your cuticles

How To Use: Fully insert head

- Gently move over the nail bed (Image 13)

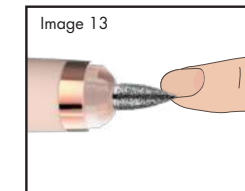

When finished, rinse and dry nails thoroughly

- Be sure to clean your unit and heads.
- See How To Clean section.




IMPORTANT: Read all instructions and warnings prior to use.

Getting Started

Charging/Recharging

NOTE: The unit will operate while charging.

- Prior to first use, fully charge unit (approximately 2 hours to fully charge).
- Locate the charging port at the bottom of the unit (Image 1).
- Insert small end (micro USB) of the charging cable (included) into the charging port (Image 2).
- Insert the large end (USB-A) into any USB compliant power adapter.
- The charging LED Indicator Light will illuminate while unit is charging (Image 3).
- When charging is complete, the LED Indicator Light will turn OFF.
- Remove the charging cable.

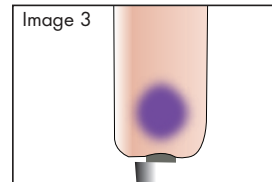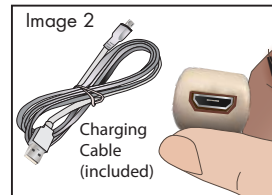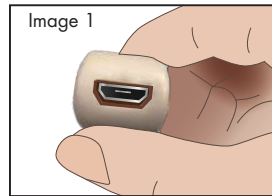




Getting to Know Your Finishing Touch Flawless™ Salon Nails

- Prior to first use, become familiar with the heads, speed modes, and directions.
- The unit has both Low/High speed modes and Forward/Reverse directions.
- **Only use on nails that are completely dry.**
- If there is a sensitive reaction, discontinue use immediately.
- Use on nails only – do not use on other body parts.
- Replace protective cover when not in use.
- Replace all heads to the storage case when not in use.

Getting Started (continued)

Speed Modes & Directions Use

- When switched ON, the top of the unit will illuminate.
- The horizontal line is the OFF position for the unit.
- It is recommended to always start on the Low setting.
- Turn the unit on by sliding the Power Switch to Low setting (Image 4).
- The first click upward to the single circle is the **FORWARD** Direction, Low Speed (Image 5).
- The second click upward to the double circles is the **FORWARD** Direction, High Speed.
- The first click downward to the single circle is the **REVERSE** Direction, Low Speed.
- The second click downward to the double circles is the **REVERSE** Direction, High Speed.
- Choose the setting that directs nail dust/debris away from your hand (Image 6).

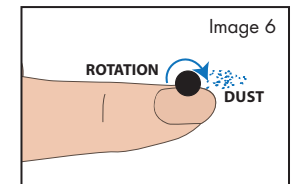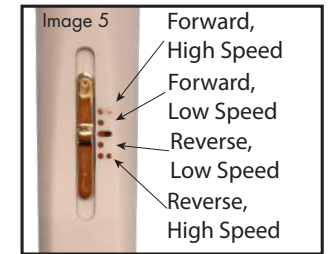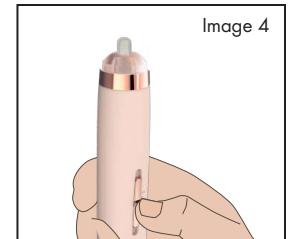

To purchase other Finishing Touch Flawless™ products or a USB compliant power adapter, visit www.FlawlessBeauty.com



How to Use

For best results, use light pressure and only on dry nails.

- If you experience a sensitive reaction, discontinue use immediately.


Installing/Removing the Heads

- Make sure the unit is turned OFF.
- Remove protective cover.
- To remove, pull the head straight out from the unit (Image 7).
- Place a new head into the unit and press down firmly (Image 8).
- Check that the new head is firmly in place (not loose or shaky) before turning the unit on.

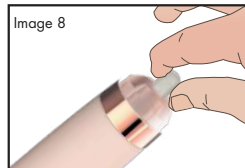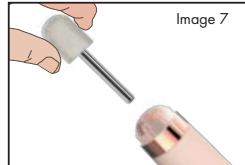

A. Shape & File

- **Speed:** Recommended Low or High Speed
- **For:** Filing unpolished nails
- **How To Use:** Fully insert head
 - Gently move over the tip of the nail to shape (Image 9)

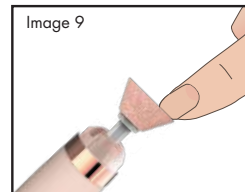


B. Grind & Smooth

CAUTION: This head uses a grinding motion. Always use with extreme caution especially on thin nails.

Speed: Recommended Low Speed

For: Removing gel polish
Removing ridges from the nail

- How To Use:** Fully insert head
- Gently move over the nail until polish is removed (Image 10)
 - Do not apply excessive pressure
 - Do not hold in the same place
 - Only use every 2 weeks to maintain a healthy nail surface

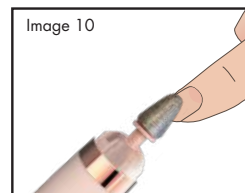

Nail Heads (Recommended Speed)

A. Shape & File (Low/High)



- For filing unpolished nails

B. Grind & Smooth (Low)



- Can help to remove gel polish

C. Buff & Shine (Low/High)



- Can be used to buff gel polish or unpolished nails
- Leaves your nail with a natural shine

D. Polish Prep (Low/High)



- This wider head is best used on larger nails
- Last step before polish

E. Polish Prep (Low/High)



- This narrow attachment is best used on smaller nails
- Last step before polish

F. Cuticle Care (Low)



- Use this head on its side.
- Do not push the tip of the head into the nail bed.

NOTE: Heads that are nicked, worn, or broken could cause damage to nails and should be replaced.

Heads last through several sessions depending on frequency of use and size of area. Replace heads as needed.

Visit www.FlawlessBeauty.com to purchase replacement heads.