

Installation guide



1. Press the valve and deflate the inner tube completely
2. Empty the tire air
3. Insert the tyre lever between the tyre and the rim
4. Put another lever a little further from the first one
5. Using both levers, detach a part of the tyre from the rim.
Then slide the lever and keep detaching the rest of the tyre
6. Take out the current inner tube
7. Inflate a new inner tube just a little and put it in. Keep one side of the tyre on the rim
8. Start from the valve and put the other side of the tyre into the wheel. Use lever if necessary
9. Inflate the inner tube checking that the whole tyre sits on the rim and the inner tube is fully inside