

SECURA®

Electric Wine Opener

USER MANUAL

Model: KP1-36N2

Color: Silver



SN: 4LU7

www.thesecura.com

Welcome to the Secura Family!

Congratulations on being the proud owner of your new Secura product. We believe in manufacturing only the highest quality kitchen, home and personal care products for our customers. We are a U.S.-based manufacturer and all our products meet strict standards for manufacturing, safety and performance.

We also believe in providing the best customer service and support in the industry. That is why we offer a 1 year warranty on this product that ensures your satisfaction - so you can enjoy it for years to come.

If you have questions or need assistance, please email CustomerCare@thesecura.com. For fastest response, please include product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

Your feedback and suggestions are also important to us, so please email them to us at CustomerCare@thesecura.com.

The Secura Team

SECURA[®]

Copyright 2015-2023 Secura, Inc. All rights reserved.

The material in this publication is protected under International and Federal Copyright Laws and Treaties, and as such, any unauthorized reprint or use of this material is strictly prohibited.

No part of this book may be reproduced or transmitted in any form without the written permission of the author, except for the inclusion of brief quotations in a review.

Reproduction or translation of any part of this work without the permission of the copyright holder is against the law.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	1
PARTS DESCRIPTION	3
OPERATING INSTRUCTIONS	4
CLEANING YOUR ELECTRIC WINE OPENER	5
DISPOSAL	6
CONTACT	6
MANUFACTURER'S LIMITED WARRANTY	7

Electric Wine Opener



To reduce the risk of fire, injury or electrical shock along with extending the life of your electrical appliances, please read and follow all of the information in this manual before using and save it for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS BEFORE USE

1. Do not operate electric Wine Opener with a damaged cord or plug, after the appliance malfunctions or if it is dropped or damaged in any manner. Contact Customer Service Center for examination, repair or electrical or mechanical adjustment.
2. To protect against risk of electrical shock, do not put the electric Wine Opener in water or other liquid. This may cause personal injury and/or damage to the product.
3. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
4. Do not use the electric Wine Opener for other than intent use.
5. This product is intended for normal domestic household use only.
6. When using or recharging the electric Wine Opener, keep your workspace clean and free from potential hazards.
7. For indoor use only. Do not expose the electric Wine Opener or charging unit to rain or other extreme conditions.
8. Never force the electric Wine Opener onto a bottle or attempt to speed up the mechanism. The electric Wine Opener will work best when it is operated at its natural speed.
9. Do not touch or adjust the electric Wine Opener's mechanism or the corkscrew spiral. Only hold the electric Wine Opener by its stainless steel housing.
10. Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove.
11. Only recharge the electric Wine Opener using the charging stand and power cord supplied.
12. Remove the plug from the socket by holding and pulling the connector. Never pull on the cord.
13. Do not attempt to open bottles if the switch is not working correctly.
14. Do not attempt to open the Electric Wine Opener or the charging stand. It has no serviceable parts.



CAUTION

1. Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and /or damage to the product or property.
2. Do NOT use the Wine Opener when the battery is low.



Always follow basic safety precautions when using any electrical products, especially when children are present.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

Electric Wine Opener

PARTS DESCRIPTION



1. Up/Down Switch
2. LED Light
3. Charging Stand
4. Electric Wine Opener
5. Foil Cutter
6. Adapter: Type A electrical plug, receptacle compatible with plug type A

* The appearance of the adapter may vary slightly.
The picture is for reference only.

OPERATING INSTRUCTIONS

We recommend that you charge your electric Wine Opener for 8 hours before using it for the first time. (NI-MH battery).

Please follow the instructions below for recharging your Electric Wine Opener:

Recharging your Electric Wine Opener

Plug one end of the adapter cord into the base of the charging stand and the other end into a main socket. Place the Electric Wine Opener into charging stand ensuring that it is firmly in position and that it is fully engaged with the recharging connection. You will notice that the LED light illuminates. It will take approximately 6-8 hours to recharge your electric Wine Opener. When your Electric Wine Opener is fully recharged it can be used to open approximately 30 bottles.

Operate Your Electric Wine Opener

The Electric Wine Opener is operated by one single switch. The switch has two functions. Press the "Down" switch to remove a cork from a bottle. After you have removed the cork from the bottle, press the "Up" switch to release a cork from the mechanism.

Before remove the cork you must remove any foil from the bottle using the foil cutter provided. (see Fig.1)



Figure 1

1. Place the Electric Wine Opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the Electric Wine Opener at an angle to the bottle it will not remove the cork properly. (Fig 2)
2. Hold the wine bottle securely with one hand so it does not spin. With the other hand, press the "Down" switch to begin removing the cork. The corkscrew spiral will turn in a clockwise direction and enter the cork, then gradually remove it from the bottle. When the Electric Wine Opener mechanism has stopped the cork has been fully removed from the bottle. (Fig 2)



Figure 2

Electric Wine Opener

WARNING: Never force the Electric Wine Opener onto a bottle or attempt to speed up the mechanism. The electric Wine Opener will work best when it is operated at its natural speed.



Figure 3

3. Lift the Electric Wine Opener away from the bottle. To remove the cork from the mechanism, simply press the "Up" switch. The spiral will turn in a counterclockwise direction and release the cork. (Fig 3)
4. Always return the Electric Wine Opener to the charging stand when finished with it. This will protect the mechanism while it is not in use.

Note:

It has been noted that the Electric Wine Opener may experience problems with a small percentage of plastic/synthetic corks and undersized corks, if in this case the cork should be removed manually.

Helpful tip:

When the battery is low, the opener may stop halfway before the cork is completely removed from the bottle, press the "Up" switch to release the cork. Wine opener must be recharged before using.

CLEANING YOUR ELECTRIC WINE OPENER

Electric Wine Opener should be wiped clean with a damp cloth or sponge and then wiped dry. NEVER immerse Electric Wine Opener in water. DO NOT place Electric Wine Opener in dishwasher.

CAUTION: Corkscrew spiral is sharp. Handle carefully.

DISPOSAL



When this appliance has reached the end of its life, please dispose of the unit properly.

This and other electrical appliances contain valuable materials that can be recycled.

Electronic waste may be harmful to our environment if not disposed of properly.

We ask that you follow your governing agency's rules and regulations when disposing of electronic appliances. Please find an authorized recycling facility near you.

CONTACT

If you have any questions or concerns not addressed in this user manual, please contact our Customer Service Department at 888-792-2360 (North America) or email us at CustomerCare@thesecura.com.

Please read the operating instructions before using this product.

Please keep the original box and packaging materials in the event that service is required.

SECURA®

Manufacturer's Limited Warranty

The Manufacturer of this product warrants to the original purchaser of this product that this product will be free from defects in material and workmanship under normal use and service for 1 year from date of purchase. Manufacturer will, at its option, repair or replace with a new or refurbished product. Providing a replacement product does not renew or extend the warranty period from the original date of purchase. The Manufacturer reserves the right, before having any obligation under this limited warranty, to inspect the product, and all costs of shipping the product for inspection and warranty service shall be borne solely by the purchaser.

For the fastest processing of a warranty claim, the Purchaser should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.

The manufacturer's limited warranty is valid only in accordance with the following conditions:

1. The product is purchased directly from manufacturer or an authorized reseller or distributor.
2. Only the original purchaser is covered by this warranty. This warranty is not transferable.
3. Product is for personal use only. This warranty is void if the product is used in a commercial or institutional establishment.
4. This warranty does not cover normal wear and tear or damage caused by misuse, abuse, negligence, accident, acts of nature, or unauthorized modification or repair.
5. Purchaser must present acceptable proof of purchase for the product.
6. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Secura, Inc.
CustomerCare@thesecura.com
Lake Forest, California

SECURA®

Secura Bestsellers

Secura Electric
Wine Opener



Secura 4-in-1 Electric
Milk Frother



Secura Electric Coffee
and Spice Grinder



Secura Automatic
Soap Dispenser



Secura Detachable Milk
Frother Upgraded



Secura French Press
Coffee Maker



Secura Mechanical
Visual Timer



Duxtop Portable 1800W
Induction Cooktop



Duxtop Professional
Stainless Steel Cookware



Secura Electronic
Visual Timer



Duxtop 1800W LCD
Induction Cooktop



Secura 1800W Electric
Deep Fryer



Secura, Inc.

888-792-2360 (North America)

CustomerCare@thesecura.com

Lake Forest, California

Designed in California

www.thesecura.com

For the fastest processing of a warranty claim, the owner should e-mail CustomerCare@thesecura.com and include the product name and model #, proof of original purchase, complete contact information, and detailed information about the issue, including pictures when applicable.