

# Swan

designed for life



Bean to Cup / Coffee to Go  
**Coffee Maker**

Model: SK65010N

**Helpline: 0333 220 6050**



## IMPORTANT INFORMATION – RETAIN FOR FUTURE USE

**Before use make sure to read all of the below instructions in order to avoid injury or damage, and to get the best results from the appliance. Make sure to keep this manual in a safe place. If you give or transfer this appliance to someone else, make sure to also include this manual.**

**In case of damage caused by user failing to follow the instructions in this manual the warranty will be void. The manufacturer/ importer accepts no liability for damages caused by failure to follow the manual, a negligent use or use not in accordance with the requirements of this manual.**

- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling, or cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- The coffee-maker shall not be placed in a cabinet when in use.
- Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



## IMPORTANT INFORMATION – RETAIN FOR FUTURE USE

- This appliance is intended to be used in households and similar applications such as: staff kitchen areas in shops, offices and other working environments; farmhouses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- Warning: Avoid spillage on the connector.
- Warning: Potential risk of injuries from misuse.
- The heating element surface is subject to residual heat after use.
- Regarding the instructions for cleaning the surfaces which come in contact with food, please refer to the paragraph “Cleaning and maintenance” of the manual.
- Before inserting the plug into the mains socket, please check that the voltage and frequency comply with the specifications on the rating label.
- Always plug the appliance into an earthed plug socket.
- Disconnect the mains plug from the socket when the appliance is not in use and before cleaning.
- Ensure that the mains cable is not hung over sharp edges and keep it away from hot objects and open flames.
- Do not immerse the appliance or the mains plug in water or other liquids. There is danger to life due to electric shock!
- To remove the plug from the plug socket, remove by the plug. Do not pull the power cord.
- Do not touch the appliance if it falls into water. Remove the plug from its socket and contact SWAN Customer Service.
- Do not plug or unplug the appliance from the electrical outlet with a wet hand.
- Never attempt to open the housing of the appliance, or to repair the appliance yourself. This could cause electric shock.



## IMPORTANT INFORMATION – RETAIN FOR FUTURE USE

- Never leave the appliance unattended during use.
- This appliance is not designed for commercial use.
- Do not use the appliance for other than intended use.
- Do not wind the cord around the appliance and do not bend it.
- If you want to make coffee several times consecutively, always switch off the device for about 5 minutes before operating again.
- Use the appliance on a flat, dry and heat resistant surface.
- Unauthorized extension cords are prohibited.
- When using the unit for the first time, it may emit a slight odour due to insulation and heaters and will disappear after a few minutes.
- Turn off the power after using the machine.
- Do not remove the protective case of the machine for any reason.
- Do not allow children or people with disabilities to operate the unit without strict supervision, and do not operate the unit without guidance.
- Never use the machine while barefoot or with wet hands.



## TECHNICAL DATA

Description: Bean to Cup / Coffee to Go Coffee Maker

Model: SK65010N

Input Voltage: 220~240 V

Frequency: 50/60Hz

Power consumption:

Coffee Maker: 600 Watts

Coffee Mill: 120 Watts





## GETTING TO KNOW YOUR COFFEE MAKER



### MAIN PARTS

- |                           |   |
|---------------------------|---|
| 1. Water tank cover       | 9. Stainless-steel cup with drinking lid      |
| 2. Water tank             | 10. Spoon (packed in the stainless-steel cup) |
| 3. Water level indication | 11. Filter holder                             |
| 4. Main body              | 12. Handle of the filter holder               |
| 5. Off =Red/On =Blue      | 13. Filter                                    |
| 6. Coffee powder button   | 14. Grinder blade                             |
| 7. Grind and brew button  | 15. Filter holder connector                   |
| 8. Tray                   |   |



### BEFORE FIRST USE

Before using for the first time, remove all packaging and any promotional labels.

- Open the water tank cover.
- Fill the water tank with cold water. Do not exceed the “MAX” line on the water tank.
- Close the water tank cover.
- Attach the filter holder to the filter holder connector of the appliance and turn to lock it.



- Put the stainless-steel cup on the tray.
- Plug in the appliance.
- Press the on/off button and then the coffee powder button to let the appliance start heating. The hot water will flow through the inside tube, washing the filter holder and the cup. Three beep sounds will be heard after the appliance finishes 1 cycle of cleaning. You can now start to prepare your fresh coffee.
- If needed, repeat above steps to clean the appliance 2 - 3 times to make sure the whole machine is well cleaned.

### USE WITH COFFEE POWDER

- Open the water tank cover.
- Fill the water tank with cold water. Do not exceed the “MAX” line on the water tank.
- Close the water tank cover.



## HOW TO USE



- Make sure the filter is correctly placed in the filter holder. Add the coffee powder into the filter using the spoon. (1-2 spoons recommended)
- Place the grinder blade inside the filter holder. Make sure it fits well. Use caution when handling.
- Attach the filter holder to the filter holder connector of the appliance and turn to lock it.
- Put the stainless-steel cup on the tray.
- Plug in the appliance.
- Press the on/off button and then press the coffee powder button to commence brewing the coffee.
- Three beep sounds will be heard after the appliance finished brewing. Your fresh brewed coffee is ready!

### USE WITH COFFEE BEANS

- Open the water tank cover.
- Fill the water tank with cold water. Do not exceed the “MAX” line on the water tank.
- Close the water tank cover.
- Make sure the filter is correctly placed in the filter holder. Add coffee beans into the filter using the spoon. (1-2 spoons recommended)
- Place the grinder blade inside the filter holder. Make sure it fits well. Use caution when handling.



## HOW TO USE

- Attach the filter holder to the filter holder connector of the appliance and turn to lock it.



- Put the stainless-steel cup on the tray.
- Plug in the appliance.
- Press the on/off button and then press the grind and brew button to let the appliance start heating. While grinding, the appliance will work intermittently. This is normal and better to ensure the grinding result.
- After grinding is finished, the appliance will automatically turn to brew mode and prepare your fresh coffee. Three beep sounds will be heard after the appliance finished brewing. Your fresh brewed coffee is ready!

### PLEASE NOTE:

- There is a safety micro switch on this machine. Make sure the filter holder is correctly locked. Otherwise, the machine will not work properly.
- When the machine is correctly assembled, a beep sound will be heard after being plugged in to remind you to confirm it is plugged in and ready to operate.
- Always check if the filter holder is properly locked and make sure the gap between the filter holder and the housing that is correct before each brewing.
- To brew good coffee, please use fresh drinking water.



## CLEANING AND MAINTENANCE

- After use, remove the filter holder from the appliance and place it under the faucet for rinsing.

Unlock the filter holder. Pour out the coffee residue inside. Take out the grinder blade and the filter from the filter holder. Use fresh water to clean each part completely. The filter holder and the filter are dishwasher safe. Use caution when handling blades

- Do not immerse the plug, power cord or the appliance in water.
- Wipe the appliance surface with a damp soft cloth, not a hard brush.
- The filter holder and other removable parts can be soaked in warm water or mixed with a specific proportion of suitable detergent for about five minutes. Rinse the parts thoroughly with water and dry before assembly.
- Descaling should be done regularly.
- Cleaning frequency: soft water; once every three months. Hard water; once a month.
- Descaling agent: Use **ONLY** descaling agents suitable for coffee machines. Do not use solid detergent.



## TROUBLESHOOTING

Problem	Solution
The appliance does not work and there is no power.	Check that the appliance's plug is plugged in properly. Make sure the filter holder is locked correctly.
The process of making coffee produces noise and a lot of steam.	The appliance needs descaling.
Coffee is not strong enough or too strong.	Check the ratio of water and coffee. (28g coffee beans/ powder; 450ml water.)
The appliance can be turned on but cannot make coffee.	Check that the filter holder is in place.
The appliance cannot be turned on.	Check that the filter holder is in place.



## DISPOSAL OF UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.recyclenow.co.uk](http://www.recyclenow.co.uk) for access to information about the recycling of electrical items. Please visit [www.weeeireland.ie](http://www.weeeireland.ie) for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





## WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.

Helpline: **0333 220 6050**

Find advice online: **[www.swan-brand.co.uk/support](http://www.swan-brand.co.uk/support)**

Affix your receipt here  
for safe keeping



[www.swan-brand.co.uk/support](http://www.swan-brand.co.uk/support)

Follow us online



Copyright © 2022

Swan Products Ltd. PO Box 3117, Stoke-on-Trent ST4 9GD