

IMPORTANT INFORMATION

IMPORTANT! Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your shelter. Do not use in any potentially windy or rainy weather.

Wind and rain can damage the E-Z UP® Instant Shelter® product and may also result in injury to you or others. Therefore, do not rely on shelter for protection in heavy or prolonged rain storms.

- The E-Z UP® Instant Shelter® product is designed as a temporary shelter. Do not leave up for extended periods.
- Use caution when handling the E-Z UP® folding frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use shelter in a lightning storm.
- Do not leave your E-Z UP® Instant Shelter® product unattended.
- Do not build fires within shelter enclosure.

WARNING: Keep all flame and heat sources away from all shelter fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Instant Shelter® products, follow these E-Z care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the E-Z UP® top and frame dry completely before closing or storing to avoid mildew.
- Frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before applying top.
- Use a seam sealer if top leaks or drips water. Available at most sporting goods and hardware stores.
- Slightly tighten bolts if frame becomes loose.



PRODUCT WARRANTY

INTERNATIONAL E-Z UP, INC., manufacturer of E-Z UP® Instant Shelter® products, warrants to the original purchaser who provides a dated sales receipt, from an Authorized Dealer, each part of the E-Z UP® Instant Shelter® product to be free from defects in material or workmanship for a period of **TWO YEARS** after the date of original purchase. This warranty applies only for normal and expected uses, as determined by the manufacturer. INTERNATIONAL E-Z UP, INC.'s obligation and liability under this warranty is limited to the repair or replacement (at its option) of the product or its parts, after its own review and examination.

RETURN ADVISORY - Before returning any part or product to INTERNATIONAL E-Z UP, INC. or its designated representative, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and INTERNATIONAL E-Z UP, INC. is not responsible for products damaged in transit.

CONDITIONS - This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

ezup.com

We Make Life E-Z!
INTERNATIONAL E-Z UP, INC.

1900 Second Street, Norco, California 92860 USA
(951) 279-0999 • Fax (951) 279-0888

ezup.com

Customer Service Hot Line
800-SHADE ME
8 0 0 - 7 4 2 - 3 3 6 3

OWNER'S MANUAL

E-Z UP®
INSTANT SHELTER®



"Sets Up in Seconds!"™

SIERRA™

10' x 10' (3.0 m x 3.0 m)
12' x 12' (3.7 m x 3.7 m)

With proper care, this shelter will deliver years of trouble free service. Please take a few minutes to read the following use and care instructions. If you have any questions or require assistance, please call.



Customer Service Hot Line
800-SHADE ME
8 0 0 - 7 4 2 - 3 3 6 3

ezup.com

WHAT'S IN THE BOX

Please read each step before you attempt to set up.
Save these instructions for future reference.

 
- 10' x 10' (3.0 m x 3.0 m) or 12' x 12' (3.7 m x 3.7 m) Sierra™ Frame
- 1 Recreational Grade Top* • 4 Piece Standard Spike Kit
- 1 Roller Bag (10' x 10' or 12' x 12' only)*

* Available in Shelter Package only

HOW TO SET UP

*Note: First Time Attachment Is Required.


Top and frame are shipped unattached to avoid damage. The first time you set up, the top must be attached to the frame with Quick Attachment Strips. Once top is attached, set up and take down are easily accomplished within seconds.

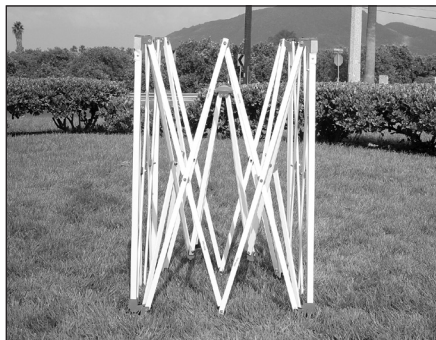


1. Place your E-Z UP® frame in the center of area to be shaded. With partner on opposite side, grasp outer legs, lift off the ground, and step backwards, stopping at full arms length.



 
- *2. Gently unfold the fabric top and place it over the open frame.

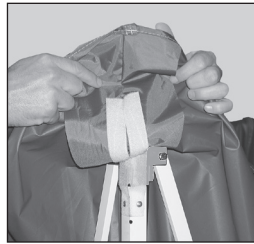

 - *3. Secure the top to the frame by pulling the valance down and matching quick attachment strips on the top with the strips on the frame. Push the strips firmly together at each corner.

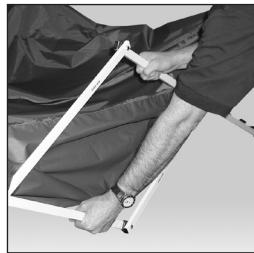

 4. Grasp the top and bottom of diamond-shaped area of trusses on opposite sides by "open" sticker. Slightly lift shelter up and push hands together while stepping backwards until shelter is fully opened. **Be careful not to pinch fingers.**

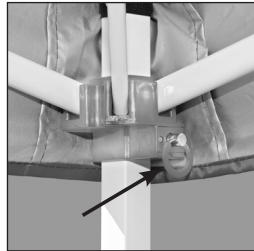

5. Engage the Pull Pin Auto Slider® at each corner by pushing up on slider with one hand while pushing down on top of leg with other hand. The pull pin will engage in hole. Repeat step on remaining legs.



6. Lift two adjacent outer legs and slide out inner legs until the toggle engages the inner leg. Lift remaining outer legs and pull out inner legs until pull pin engages the inner leg. **Use spikes or weight bags to secure in windy conditions.**

***Note:** Once top is permanently attached, only perform steps 1 and 4 - 6 to set up.

HOW TO TAKE DOWN



1. With a partner, lift two adjacent outer legs slightly, release the toggle and telescope inner legs into outer legs. Lift remaining outer legs, release the pull pin lock telescoping inner legs into outer legs.



2. Release pull pin slider at each corner by first lifting the valance of top. With one hand, push up on truss near slider to remove the weight of the shelter from the pull pin. Release slider by disengaging pull pin and push slider down.



3. With partner on opposite side, grasp top and bottom of diamond-shaped area of trusses by "close" sticker. Lift the shelter up slightly and shake it, while stepping towards partner until shelter is 3/4 closed.



4. Grasp adjacent outer legs and push shelter together until fully closed. **Be careful not to pinch fingers!** Store shelter in roller or carry bag.