

Pink Mouse Pad DIY Flattening Method

Reason Analysis: :

1. Mouse pads are flat when they leave the factory, but after long sea transport and storage, they may become curled and uneven, even heavy objects can't restore them to their original state.
2. Another reason is that the factory's light strip circumference is relatively larger than the rubber pad's, leading to unevenness after curling and shaping.


Steps:

Step 1: Peel off the bottom sticker on the back of the control switch - remove the screws and take out the controller





Step 2: Pull on one end of the strip and push the rubber pad to one side until the entire rubber pad is pushed flat, at which point the strip exposed at the controller will be longer than before.

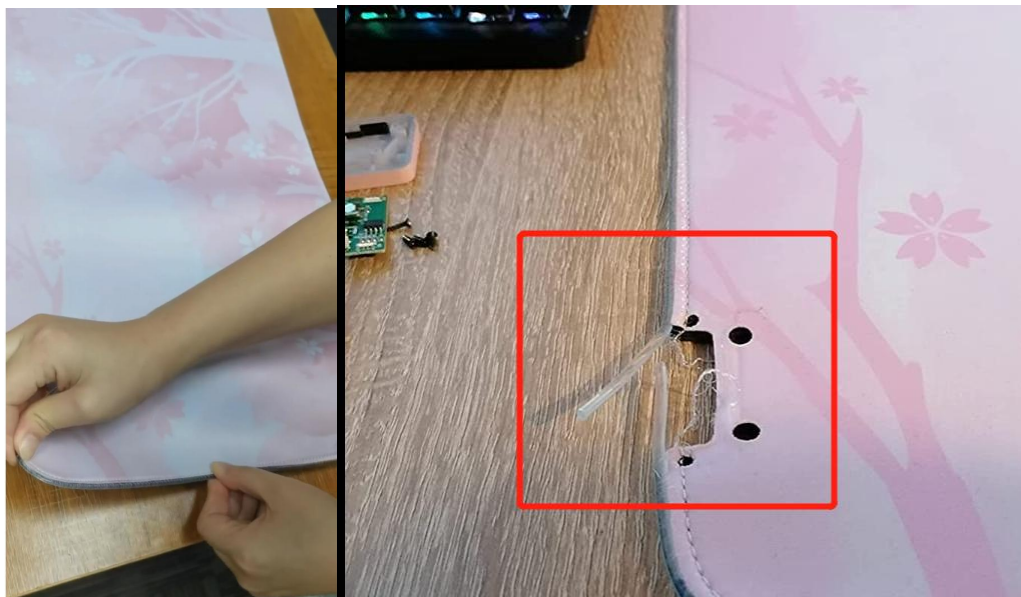

Step 3: Cut off the excess light bar according to the controller bay and install the control switch.



Smooth out the rubber mat and cut the light bar short after:

