

QUICK SET UP

The default Master Code is 123456

It is required that you change it to a code of your own before programming.

Blue light: programming status / Purple light flash&short beep: successful entry / Red light: error

Programming Code = PC USER Code = UC USER Fingerprint = UF

Detect Left / Right Hand Door Installation	   + 50 +  Blue light flashing	PC +  Purple light flash & short beep	1 +  Left 2 +  Right Purple light flash & short beep
Toggle Autolock On&Set Time Delay	   + 52 +  Blue light flashing	PC +  Purple light flash & short beep	05 +  Purple light flash&short beep
Toggle Autolock OFF	   + 52 +  Blue light flashing	PC +  Purple light flash & short beep	00 +  Purple light flash&short beep
Add New User Code	   + 80 +  Blue light flashing	PC +  Purple light flash & 2 short beep	New UC +  + New UC +  Purple light flash&2 short beep
Changing User Code	   + 10 +  Blue light flashing	Unwant UC +  Purple light flash & 2 short beep	New UC +  + New UC +  Purple light flash&2 short beep
Delete All User Code At once	   + 71 +  Blue light flashing	PC +  Purple light flash & 2 short beep	
Change Programming Code	   + 12 +  Blue light flashing	PC +  Purple light flash & 2 short beep	New PC +  + New PC +  Purple light flash&2 short beep
Add New Fingerprint	   + 80 +  Blue light flashing	PC +  Purple light flash&2 short beep, Blue light flashing	Fingerprint 5 times Purple light flash&2 short beep Blue light flashing
Delete Fingerprint	   + 70 +  Blue light flashing	PC +  Purple light flash & 2 short beep	
Toggle Mute Off/On	   + 42 +  Blue light flashing	PC +  Purple light flash & short beep	1 +  Toggle Mute Off 2 +  Toggle Mute On Purple light flash & short beep



Notes:

1. Beeps only sound when the Silent Mode is disabled.
2. If the indicators flash red light, it means your setting failed and it will require to re-enter master mode if you would like to continue your programming.