

AVerMedia

Live Gamer Portable

C875



English
Français
Español

Quick Guide

FCC NOTICE (Class B)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission Statement

NOTE- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

CAUTION ON MODIFICATIONS

To comply with the limits for the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be installed in computer equipment certified to comply with the Class B limits. All cables used to connect the computer and peripherals must be shielded and grounded. Operation with non-certified computers or non-shielded cables may result in interference to radio or television reception. Changes and modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la Class B est conforme à la norme NMB-003 du Canada.



The mark of crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.



Model No.: C875
P/N: 300AC875-D2R
Made in Taiwan

Disclaimer

All the screenshots in this documentation are only example images. The images may vary depending on the product and software version. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

Copyright


©2013 by AVerMedia Technologies, Inc. All rights reserved.

No part of this document may be reproduced or transmitted in any form, or by any means (Electronic, mechanical, photocopy, recording, or otherwise) without prior written permission of AVerMedia Technologies, Inc. Information in this document is subject to change without notice. AVerMedia Technologies, Inc. reserves the right to modify, change, improve or enhance its products and to make changes in the content without obligation to notify any person or organization of such changes. Please visit www.avermedia.com to get the updates of the operation and use of AVerMedia products. "AVerMedia" is a trademark and logo of AVerMedia Technologies, Inc. Other trademarks used herein for description purpose only belong to each of their companies. Made in Taiwan (Except Accessories). Picture shown may vary from actual product

Package Contents

- | | |
|---|-------------------------------|
| A. Live Gamer Portable | F. 3.5mm Audio Cable |
| B. Quick Installation Guide | G. PlayStation 3 Cable |
| C. Protective Bag | H. Mini USB Cable |
| D. HDMI Cable | |
| E. Component Video / Stereo Audio Dongle Cable | |

Hardware

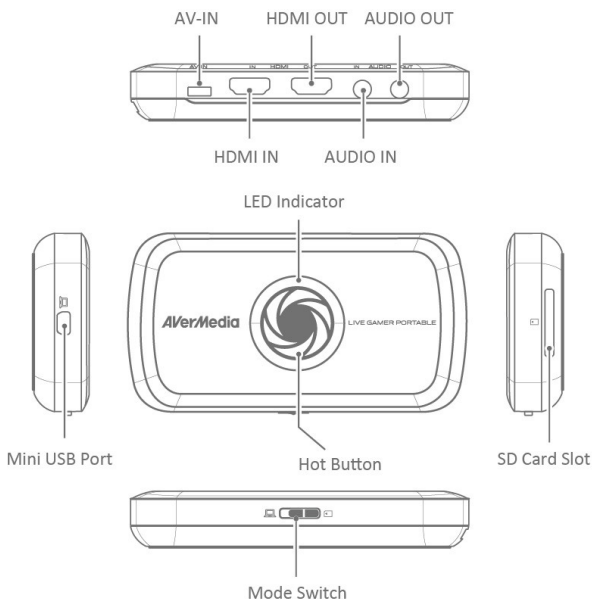


Installation (PC Mode)

Step 1: Slide the switch on the front of the device to the **LEFT**.
The LED indicator glows solid BLUE when the device is ready.

Step 2: According to your **video/audio source**, choose one of the connections below.


Step 3: Download and install the latest driver and **RECentral** from gamerzone.avermedia.com

Connect to Your Game Console – PlayStation 3 / XBOX

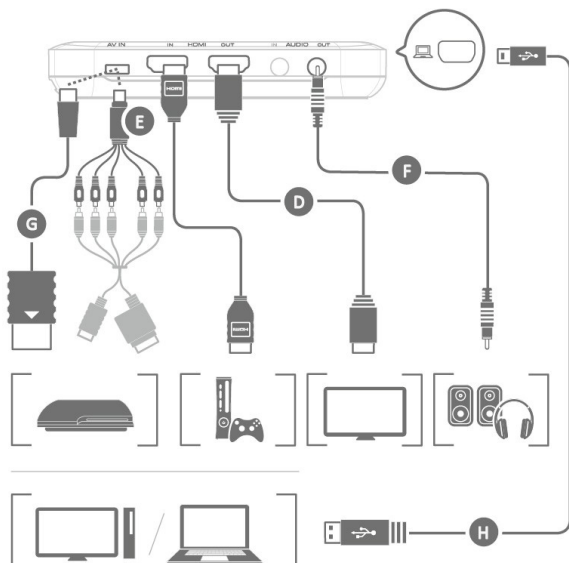

- Only the items marked with alphabets are supplied.
- It is optional to connect to speakers/headphone.

Connect to Your Gaming PC – Desktop / Laptop

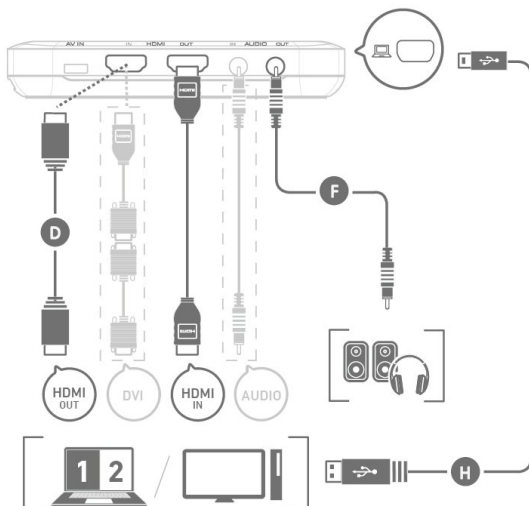

**PLEASE DO NOT USE HDMI SPLITTERS
TO BYPASS COPY PROTECTION.**



- When using a laptop, if you want to output source, please duplicate the displays to avoid no image on screen. To know more, please refer to the FAQ on gamerzone.avermedia.com
- To capture from the other computer, please connect the computer of your video source to the HDMI IN port on the **Live Gamer Portable**.
- For a computer without an HDMI Port, use a DVI to HDMI cable or converter for connection. Also connect your PC or laptop to the device (AUDIO IN) via the 3.5mm Audio Cable.

LED Indicators

Status	PC Mode	PC-Free Mode
Booting	Flashes Blue clockwise in circle	Flashes Red clockwise in circle
Standby	Glow solid Blue	Glow solid Red
Activating RECentral	Flashes Blue clockwise in circle at a quick pace	---
Recording	Glow Red with a breathing pattern	Glow Red with a breathing pattern
Streaming	Glow Blue with a breathing pattern	---
Warning	Flashes Red at a quick pace	
Error	Flashes Red/Blue alternatively at a quick pace	

Installation (PC-Free Mode)

Step 1: Slide the switch on the front of the device to the **RIGHT**. The LED indicator glows solid RED when the device is ready.




- For the first-time using, in order to get correct time displayed for recordings, please connect **Live Gamer Portable** to your computer on which the driver is installed under the PC Mode to auto update time.

Step 2: According to your **video/audio source**, choose one of the connections below.




- When two or more sources are hooked up at the same time, **Live Gamer Portable** will auto-detect the input source with priority order of 3.5mm Audio > Component > HDMI. To select HDMI as the input source, please remove the component cable.

Connect to Your Game Console - PlayStation 3 / XBOX

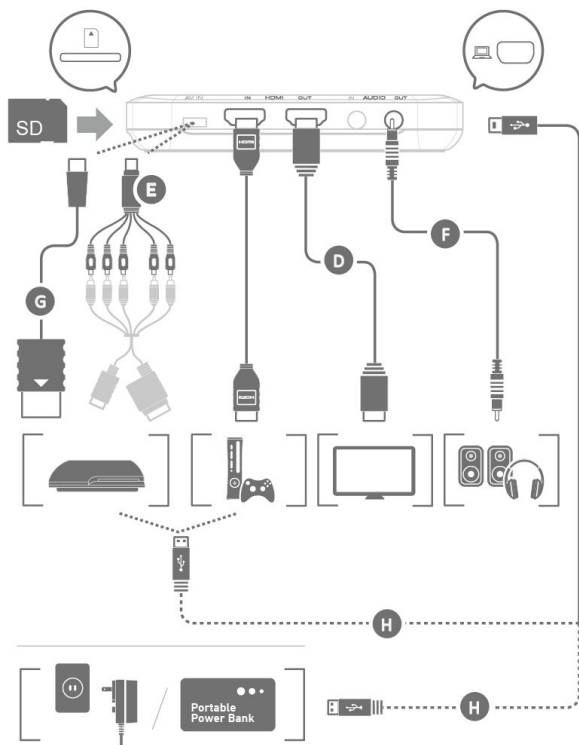

- Only the items marked with alphabets are supplied.
- It is optional to connect to speakers/headphone.

Connect to Your Gaming PC – Desktop / Laptop

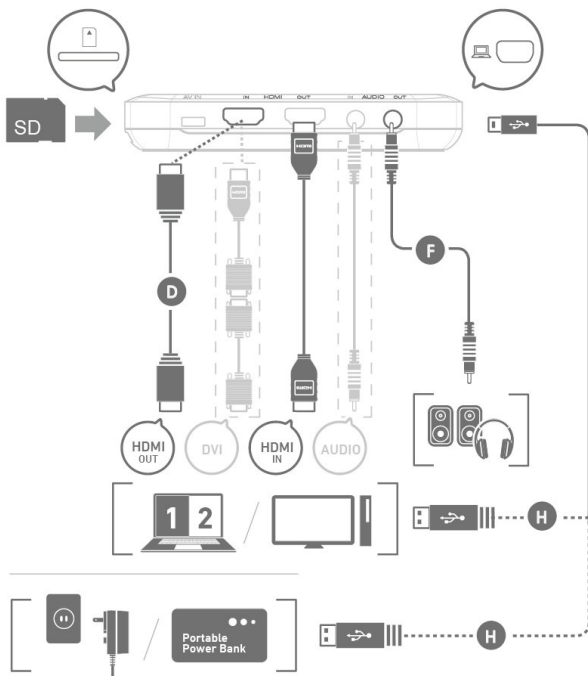


- When using a laptop, if you want to output source, please duplicate the displays to avoid no image on screen. To know more, please refer to the FAQ on gamerzone.avermedia.com
- For a computer without an HDMI Port, use a DVI to HDMI cable or converter for connection. Also connect your PC or laptop to the device (AUDIO IN) via the 3.5mm Audio Cable.

Contenu de la boîte

- | | |
|---|-------------------------------|
| A. Live Gamer Portable | F. Câble audio 3,5 mm |
| B. Guide d'installation rapide | G. Câble PlayStation 3 |
| C. Housse de protection | H. Câble mini USB |
| D. Câble HDMI | |
| E. Câble composante vidéo / clé audio stéréo | |

Matériel

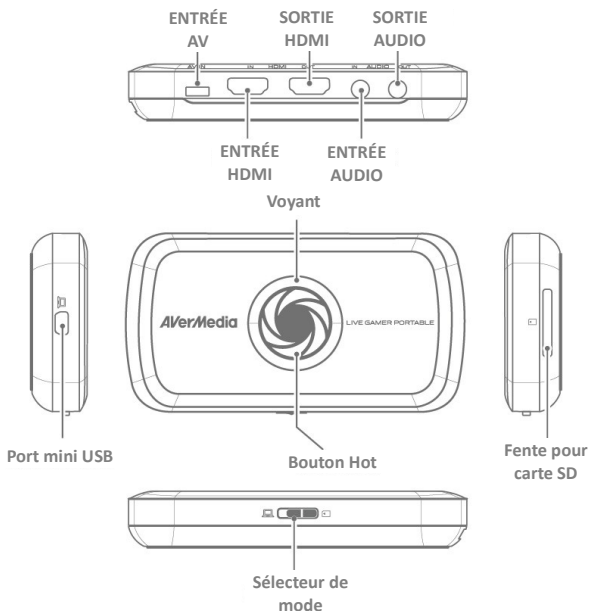


Installation (mode PC)

Étape 1 : Faites glisser le sélecteur à l'avant de l'appareil vers la **GAUCHE**.
Le voyant s'allume en BLEU, indiquant que l'appareil est prêt.

Étape 2 : Selon votre **source vidéo/audio**, choisissez l'une des connexions ci-dessous.


Étape 3 : Téléchargez et installez le plus récent pilote et **RECentral** depuis gamerzone.avermedia.com

Connexion à votre console de jeux – PlayStation 3 / XBOX 360

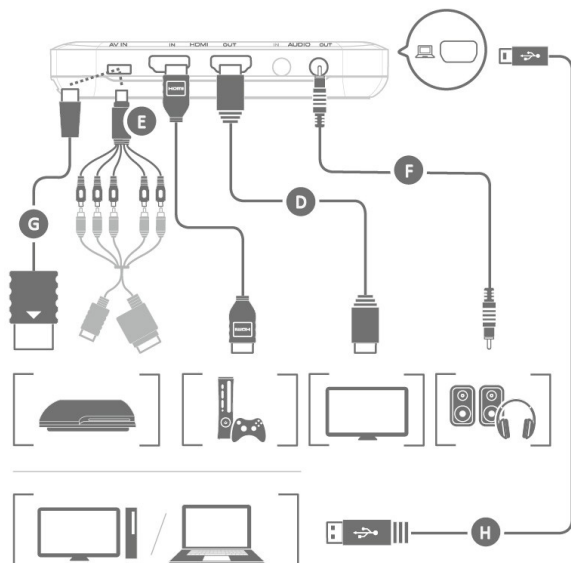

- Seuls les éléments indiqués avec des lettres sont fournis.
- La connexion aux hauts-parleurs/écouteurs est facultative.

Connexion à votre PC de jeux – Ordinateur de bureau/portable

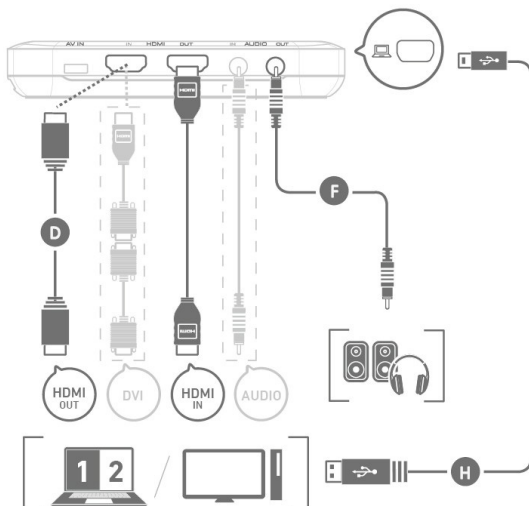

- Si vous utilisez un portable et que vous voulez une source de sortie, dupliquez l'affichage pour éviter de ne pas avoir d'image à l'écran. Pour plus d'information, consultez la FAQ sur gamerzone.avermedia.com
- Pour une capture à partir d'un autre ordinateur, branchez l'ordinateur où se trouve la source vidéo au port d'entrée HDMI de **Live Gamer Portable**.
- Pour un ordinateur sans port HDMI, utilisez un câble DVI/HDMI ou un adaptateur pour le branchement. Branchez également votre ordinateur à l'appareil (ENTRÉE AUDIO) à l'aide d'un câble audio 3,5 mm.

Voyants

Statut	Mode PC	Mode sans PC
Initialisation	Clignote en bleu en cercle vers la gauche	Clignote en rouge en cercle vers la gauche
En veille	Allumé en bleu	Allumé en rouge
Activation de RECentral	Clignote rapidement en bleu en cercle vers la gauche	---
Enregistrement	Allumé en rouge sur un un rythme respiratoire	Allumé en rouge sur un un rythme respiratoire
Diffusion en flux	Allumé en bleu sur un un rythme respiratoire	---
Avertissement	Clignote rapidement en rouge	
Erreur	Clignote rapidement en rouge et bleu	

Installation (mode sans PC)

Étape 1 : Faites glisser le sélecteur à l'avant de l'appareil vers la **DROITE**. Le voyant s'allume en ROUGE, indiquant que l'appareil est prêt.




- Pour la première utilisation, afin que l'heure juste s'affiche pour les enregistrements, branchez **Live Gamer Portable** à l'ordinateur sur lequel le lecteur est installé au mode PC pour ajuster automatiquement l'heure.

Étape 2 : Selon votre **source vidéo/audio**, choisissez l'une des connexions ci-dessous.




- Lorsque deux sources ou plus sont branchées en même temps, **Live Gamer Portable** détectera automatiquement la source d'entrée dans l'ordre de priorité suivant : audio 3,3 mm > Composante > HDMI. Pour sélectionner HDMI comme source d'entrée, débranchez le câble composante.

Connexion à votre console de jeux – PlayStation 3 / XBOX 360

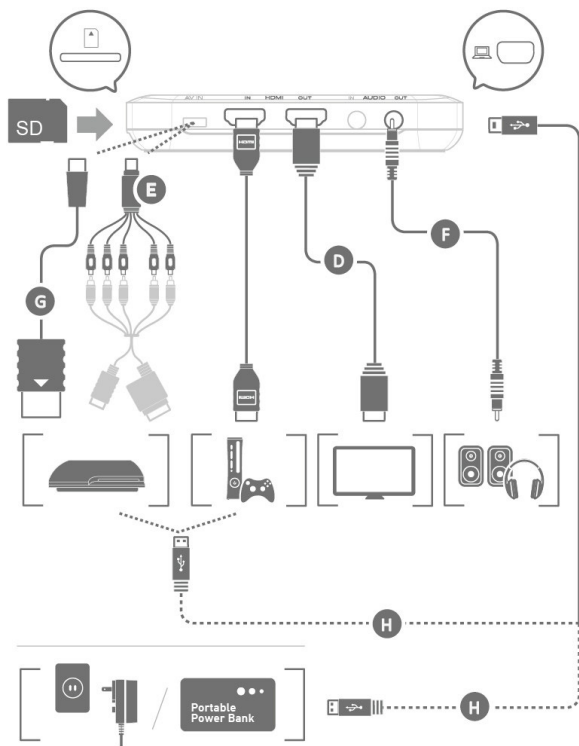

- Seuls les éléments indiqués avec des lettres sont fournis.
- La connexion aux hauts-parleurs/écouteurs est facultative.

Connexion à votre PC de jeux – Ordinateur de bureau/portable

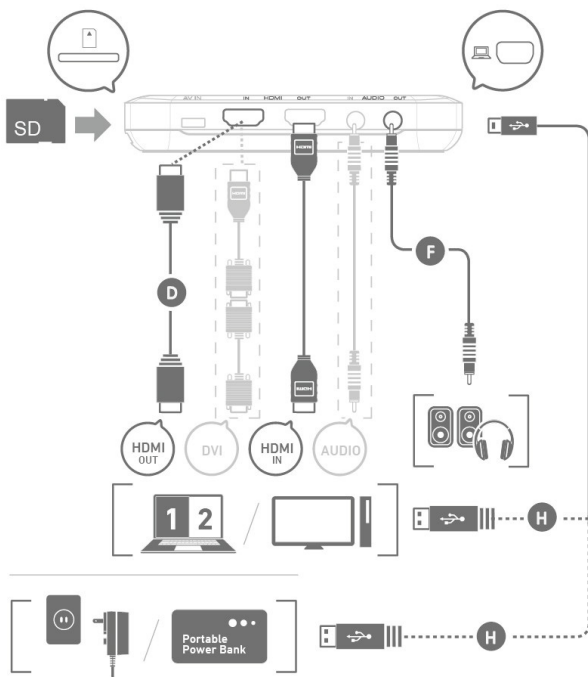


- Si vous utilisez un portable et que vous voulez une source de sortie, dupliquez l'affichage pour éviter de ne pas avoir d'image à l'écran. Pour plus d'information, consultez la FAQ sur gamerzone.avermedia.com
- Pour un ordinateur sanst port HDMI, utilisez un câble DVI/HDMI ou un adaptateur pour le branchement. Branchez également votre ordinateur à l'appareil (ENTRÉE AUDIO) à l'aide d'un câble audio 3,5 mm.

Contenido de la caja

- | | |
|--|------------------------------------|
| A. Live Gamer Portable | F. Cable de audio de 3,5 mm |
| B. Guía de instalación rápida | G. Cable para PlayStation 3 |
| C. Funda protectora | H. Cable mini USB |
| D. Cable HDMI | |
| E. Cable adaptador de video componentes / audio | |

Hardware

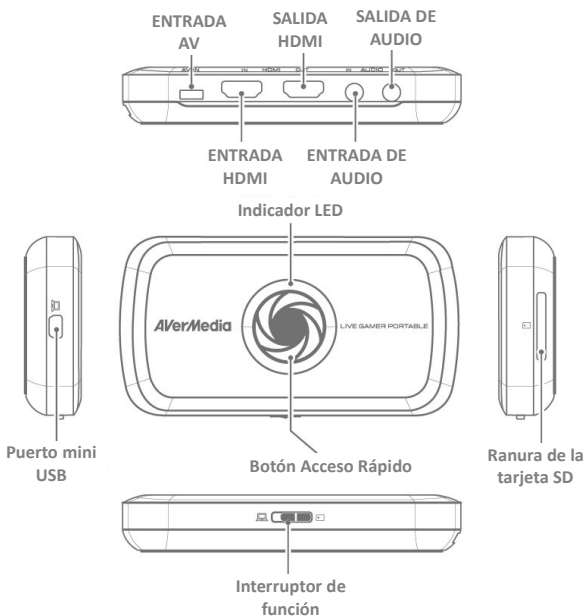

Instalación (modo PC)


Paso 1: deslice el interruptor de la parte delantera del dispositivo hacia la **IZQUIERDA**.

El indicador LED se iluminará en color azul cuando el dispositivo esté listo.

Paso 2: en función de la **fuentes de vídeo/audio**, elija una de las conexiones que se muestran a continuación.


Paso 3: descargue e instale el último controlador y software **RECentral** de la página web gamerzone.avermedia.com

Conexión a videoconsola – PlayStation 3 / XBOX 360

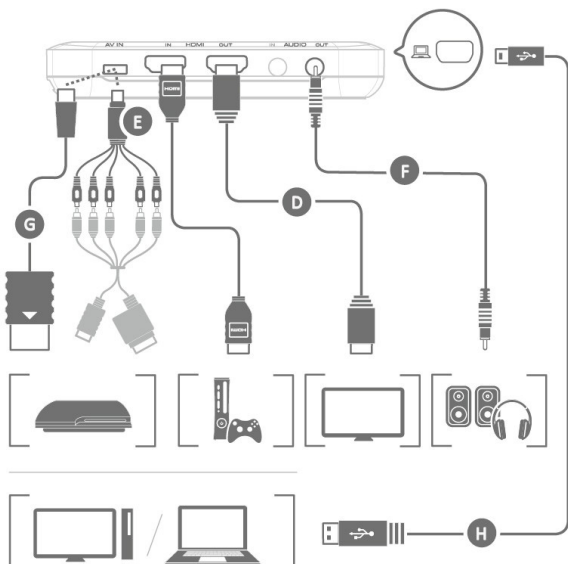

- Solo se suministran los elementos marcados con una letra.
- Si lo desea, puede conectarlo a los altavoces/auriculares.

Conexión al PC – Sobremesa / Portátil

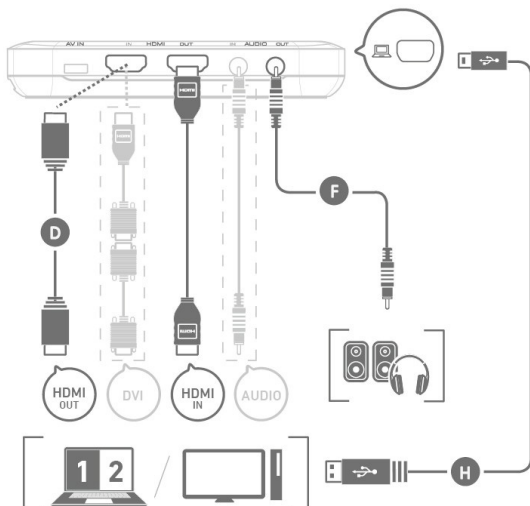

- Si desea mostrar la fuente cuando esté utilizando un portátil, duplique las visualizaciones para asegurarse de que se muestran imágenes en la pantalla. Para obtener más información, consulte las preguntas frecuentes en la página web gamerzone.avermedia.com
- Para realizar capturas desde el otro equipo, conecte el equipo de la fuente de video al puerto ENTRADA HDMI en el **Live Gamer Portable**.
- Para un equipo sin puerto HDMI, utilice un cable o un convertor DVI a HDMI para realizar la conexión. También puede conectar el PC o el portátil al dispositivo (ENTRADA DE AUDIO) con el cable de audio de 3,5 mm.

Indicadores LED

Estado	Modo PC	Modo sin PC
Iniciando	Parpadea en azul en círculos de derecha a izquierda	Parpadea en rojo en círculos de derecha a izquierda
En suspensión	Se iluminará en color azul	Se iluminará en color rojo
Activación de RECentral	Parpadea en azul en círculos de derecha a izquierda rápidamente	---
Grabación	Se ilumina en rojo de manera pausada	Se ilumina en rojo de manera pausada
Transmisión	Se ilumina en azul de manera pausada	---
Advertencia	Parpadea en rojo rápidamente	
Error	Parpadea en rojo/azul alternativamente de forma rápida	

Instalación (modo sin PC)

Paso 1: deslice el interruptor de la parte delantera del dispositivo hacia la **DERECHA**. El indicador LED se iluminará en color ROJO cuando el dispositivo esté listo.




- La primera vez que utilice el dispositivo, con el fin de que se muestre la hora correcta para las grabaciones, conecte el **Live Gamer Portable** al equipo donde esté instalado el controlador en el modo PC para actualizar la hora automáticamente.

Paso 2: en función de la **fuentes de vídeo/audio**, elija una de las conexiones que se muestran a continuación.




- Cuando dos o más fuentes se enlacen al mismo tiempo, **Live Gamer Portable** detectará automáticamente la fuente de entrada con el orden de prioridad de Audio de 3,5 mm > Componente > HDMI. Para seleccionar HDMI como la fuente de entrada, quite el cable de componente.

Conexión a la videoconsola – PlayStation 3 / XBOX 360

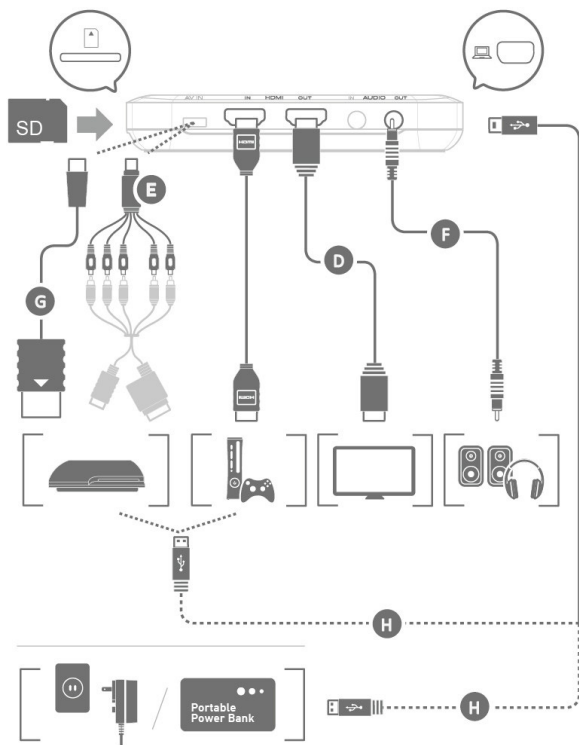

- Solo se suministran los elementos marcados con una letra.
- Si lo desea, puede conectarlo a los altavoces/auriculares.

Conexión al PC – Sobremesa / Portátil

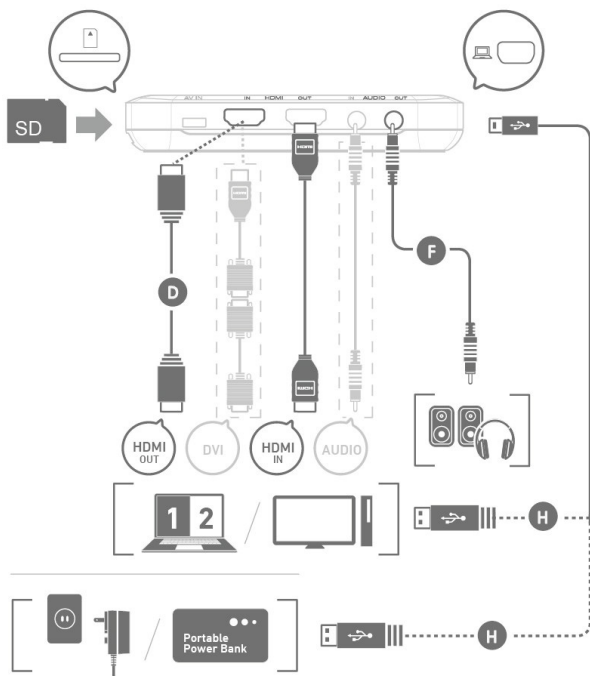

- Si desea mostrar la fuente cuando esté utilizando un portátil, duplique las visualizaciones para asegurarse de que se muestran imágenes en la pantalla. Para obtener más información, consulte las preguntas frecuentes en la página web gamerzone.avermedia.com
- Para un equipo **sin** puerto HDMI, utilice un cable o un convertor DVI a HDMI para realizar la conexión. También puede conectar el PC o el portátil al dispositivo (ENTRADA DE AUDIO) con el cable de audio de 3,5 mm.