


FAQS


G502 LIGHTSPEED Weight Customization, Receiver Storage, and POWERPLAY

1. The upper weight door can be opened by pulling on its right edge.
2. 4x 2-gram weights can be added.
3. The lower weight and receiver storage cover can be opened by pressing inwards at the bottom of the cover with the thumb and pulling it out with the other hand.
4. 2x 4-gram weights can be added inside the receiver storage cover.
5. The receiver storage cover and weights can be replaced by the POWERCORE adapter available with the POWERPLAY wireless charging system (sold separately).

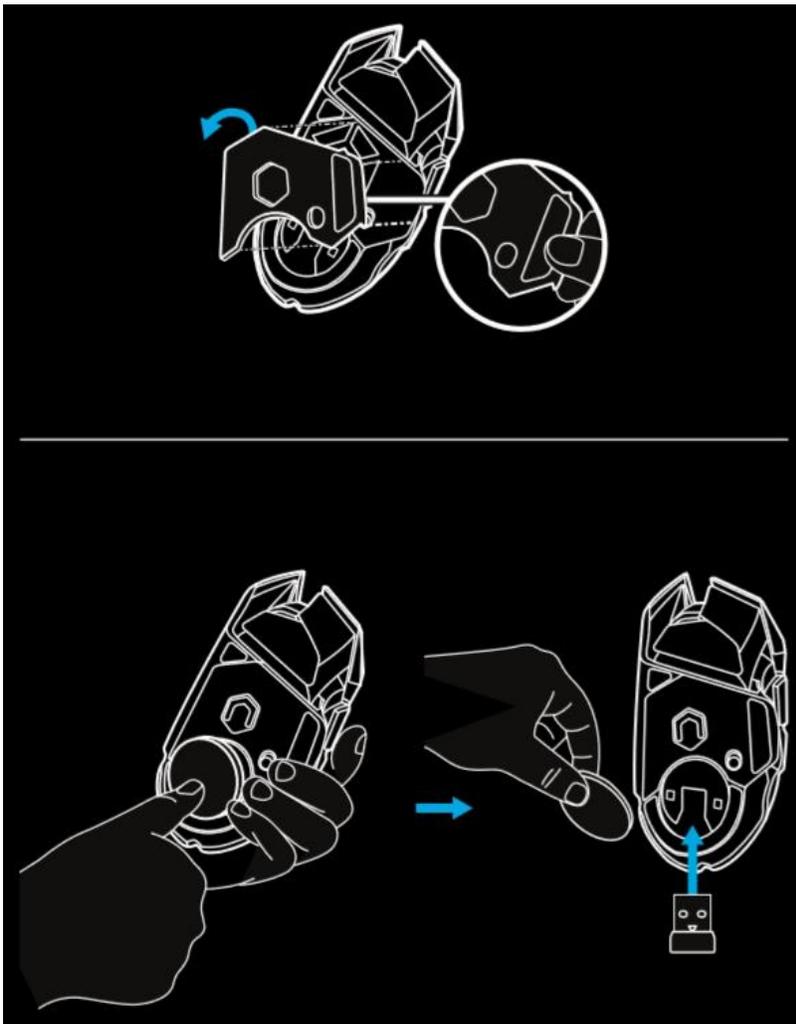


G502 LIGHTSPEED Charging/Data Over Cable

Plug your mouse in via the provided USB charging cable when the battery is low. G502 LIGHTSPEED is also compatible with the Logitech G POWERPLAY wireless charging system, sold separately.

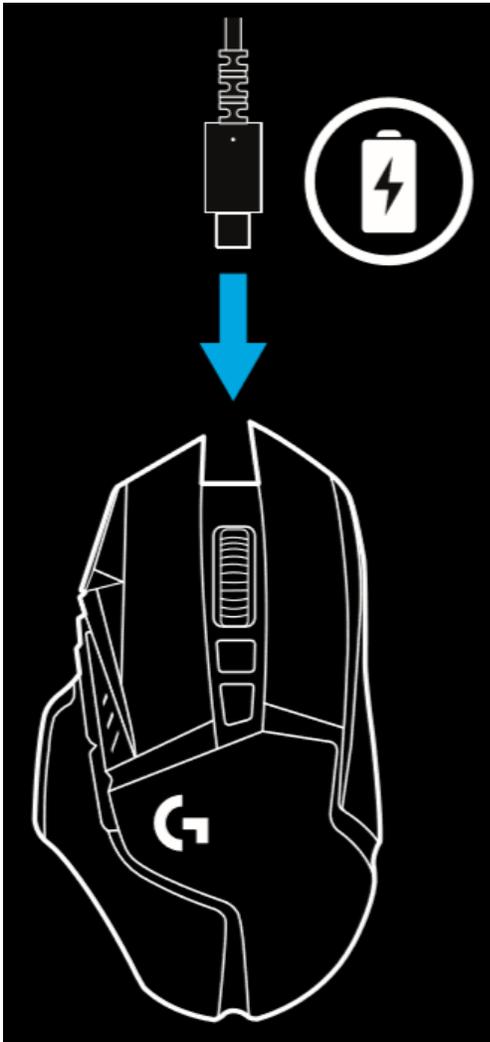


G502-LIGHTSPEED-Setup-Instructions

1. A wireless receiver attached to the USB adapter can be found in the accessory box Plug one end of the cable into your PC, and the other end into the USB adapter and receiver – The receiver can also be used plugged directly into your PC However, using the cable and adapter when in wireless mode is recommended and allows for better connectivity and easy access to the cable for recharging.

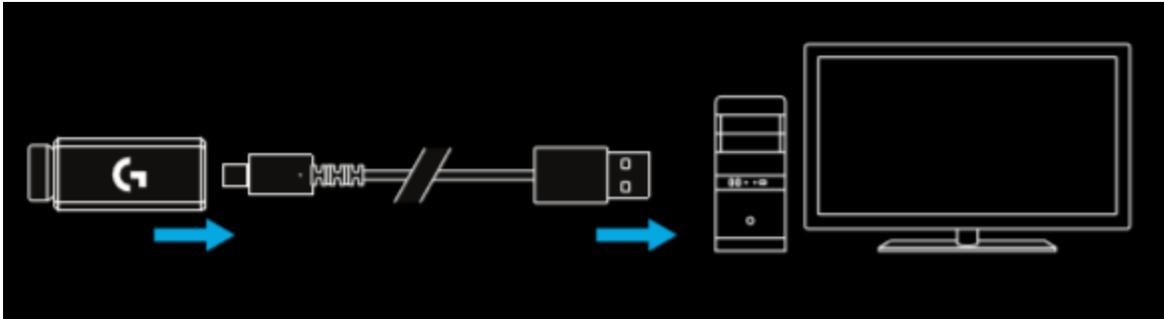


2. Turn mouse on via the switch on the bottom of the mouse

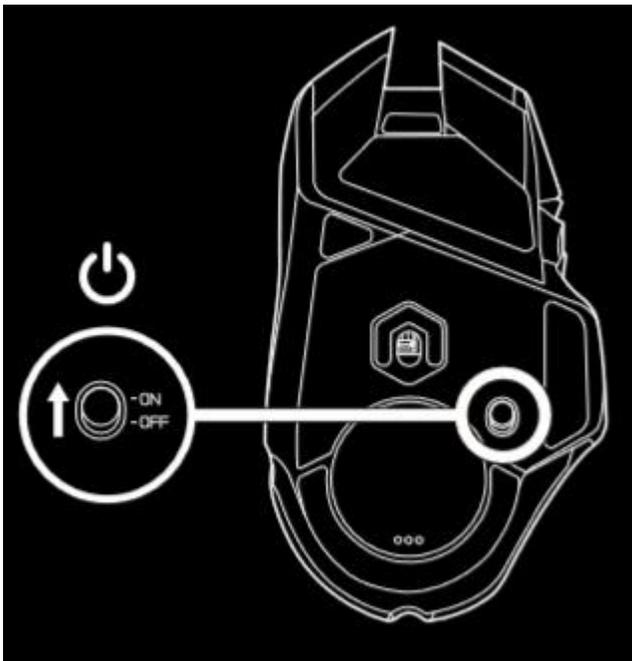

3. Download Logitech G HUB gaming software



4. To charge, disconnect the cable from the adapter and plug into the front of the mouse. Your mouse will operate in data-over-cable mode whenever it is plugged in directly to a PC USB port. Full charge from empty requires around 2 hours plugged in to a PC USB port.

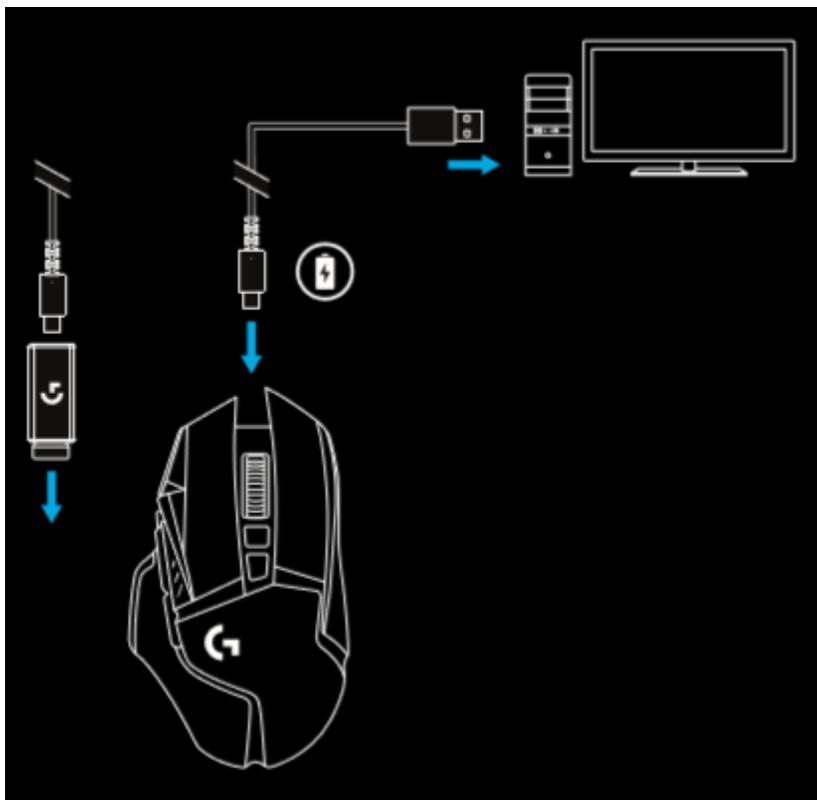


Tips:

- Keep the mouse and receiver 2 m+ away from wireless routers or other 2.4GHz wireless

devices to minimize environmental noise

– G502 LIGHTSPEED has a wireless range of up to 10 meters To ensure optimal performance in noisy wireless environments, and to keep the charging cable easily accessible, it is recommended to keep the receiver within 20 cm of the mouse

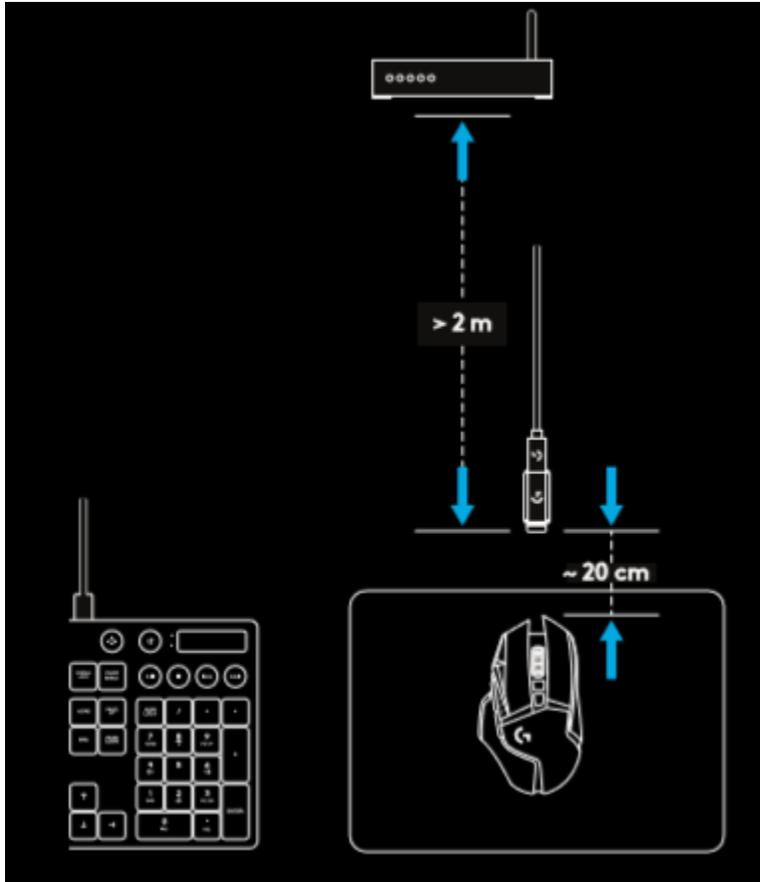

G502 LIGHTSPEED 11 Fully Programmable Buttons

G502 LIGHTSPEED 11 Fully Programmable Buttons

1. Left click (Button G1)
2. Right click (Button G2)
3. DPI up (Button G8)
4. Scroll left (Wheel tilt left)
5. Scroll right (Wheel tilt right)
6. DPI down (Button G7)
7. Middle click (Button G3)
8. DPI shift/Sniper button (Button G6)
9. Wheel mode toggle button (not programmable)
10. Forward (Button G5)

11. Battery status (Button G9)
12. Back (Button G4)
13. Upper weight door(bottom of mouse)
14. On/Off switch (bottom of mouse, not programmable)
15. Lower weight and receiver storage door (bottom of mouse)

