

# Tips from the Chef

COSORI®



## Preheating

To produce crisp and evenly cooked food, always preheat your air fryer oven. Just choose the temperature you want, and let it heat up for the automatically-adjusted time. When the timer goes off, the oven is ready to start cooking.



## Cleaning the Crumb Tray

Clean the crumb tray at the bottom after using. Accumulated grease and crumbs can overheat and catch fire.



## Unplug

Your air fryer oven is a powerful appliance. To save energy, unplug it when you're done cooking.



## Accessorize

You can step up your baking by investing in cupcake pans, bread pans, ceramic souffle cups, and anything you'd use for a full-size oven.



## More Isn't Always Better

Don't let your oven get cramped. Putting too much food in the oven or in the air frying basket can cause uneven cooking.



## Wrapping Up

Line the accessories with foil, parchment paper, or baking paper to protect the coating on the trays, to catch grease, and to provide easy cleanup. Wrap food in foil for easier baking.

**WARNING:** Fit foil as securely as possible. Paper must be secured by placing food on top of it.



## Always Use Mitts

Be careful not to burn your skin. Every part of the oven, including the outside surface, is hot during and after cooking. Make sure to wear gloves or mitts when handling accessories.



## Thawing Meat

Wait for meat to reach room temperature before you cook it. This allows the inside and outside of the meat to cook evenly.



## Keep the Oven Door Closed

Avoid opening the oven door for more than 2-3 seconds to check on your food. The oven temperature will drop significantly, and your food may turn out undercooked.



# Quick Reference Guide

Thank you for your purchase!

(We hope you love your new smart air fryer oven as much as we do.)



join

the Cosori Cooks Community on Facebook  
[facebook.com/groups/cosoricooks](https://facebook.com/groups/cosoricooks)



explore

our recipe gallery  
[www.cosori.com/recipes](https://www.cosori.com/recipes)



enjoy

weekly, featured recipes  
made exclusively by our in-house chefs



## CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

Email: [recipes@cosori.com](mailto:recipes@cosori.com)

Toll-Free: (888) 402-1684














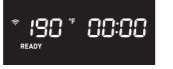




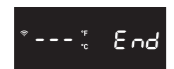



M-F, 9:00 am-5:00 pm PST/PDT

Show off what you're cooking. Join us online! [facebook.com/groups/cosoricooks](https://facebook.com/groups/cosoricooks)



## SHORTCUT SHEET

Please check the manual for complete details on operating your Cosori Smart Air Fryer Oven.

PREHEAT	WITHOUT SHAKE	WITH SHAKE	MANUAL	KEEP WARM
				
Select <b>Preheat</b>	Once the oven is preheated	Once the oven is preheated	Once the oven is preheated	Select <b>Keep Warm</b>
				
Adjust <b>Temp*</b> to desired setting	Add food to the oven	Add food to the oven	Add food to the oven	Adjust <b>Temp/Time</b> to desired setting
				
Press <b>Start/Pause</b>	Choose a <b>Preset</b>	Choose a <b>Preset</b>	Adjust <b>Temp/Time</b> to desired setting	Press <b>Start/Pause</b>
				
Oven will beep and screen will show <b>READY*</b> when done	Press <b>Start/Pause</b>	Press <b>Start/Pause</b>	Press <b>Start/Pause</b>	
<i>*Note: Time will adjust automatically to the Preheat temp.</i>				
	Oven will beep and screen will show when cooking is done	<b>SHAKE</b> when prompted (oven will beep and <b>(SHAKE)</b> icon will flash)	Oven will beep and screen will show when cooking is done	
				
		Oven will beep and screen will show when cooking is done		

## CONTROLS QUICK REFERENCE CHART

- You can adjust the time and temperature anytime during cooking (except while preheating).

<b>Adjusting Temperature</b>	Press <b>TEMP/TIME</b> knob once. The temperature will blink repeatedly. Turn <b>TEMP/TIME</b> knob.
<b>Adjusting Time</b>	Press <b>TEMP/TIME</b> knob twice. The time will blink repeatedly. Turn <b>TEMP/TIME</b> knob. <b>Note:</b> If you were adjusting temperature, press <b>TEMP/TIME</b> knob once to switch back to time.
<b>Switching Temperature Units</b>	Press and hold <b>TEMP/TIME</b> to switch the temperature from Fahrenheit to Celsius and vice versa.



- To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.
- Open the VeSync app. **Sign Up** or **Log In**.
- Follow the in-app instructions to add your oven.

## TROUBLESHOOTING

### Why isn't my air fryer oven connecting to the VeSync app?

- During the setup process, you must be on a secure 2.4 GHz WiFi® network. Confirm that the network is working correctly.
- Make sure the WiFi password you entered is correct.
- Turn on Bluetooth® on your phone (for Android users, make sure Location is turned on as well).
- Make sure your oven and phone are within 30 ft / 10 m of each other.
- Reset the oven and try connecting again.

### My air fryer oven is offline.

- Make sure the oven is plugged in. The oven may appear to be offline if it is unplugged, or if the outlet does not have power.
- Refresh the VeSync menu by swiping down on the screen.
- Make sure your router is connected to the internet and your phone's network connection is working.
- Follow these steps:
  - Delete the oven from the VeSync app.
  - Reset the oven. See the online manual for details.
  - Reconfigure your oven with the VeSync app.
  - When the oven is online again, upgrade its firmware.

**Note:** Power outages, internet outages, or changing WiFi routers may cause your oven to go offline.