 


Air Mattress

Model: EAM-ET1 & EAM-EQ1

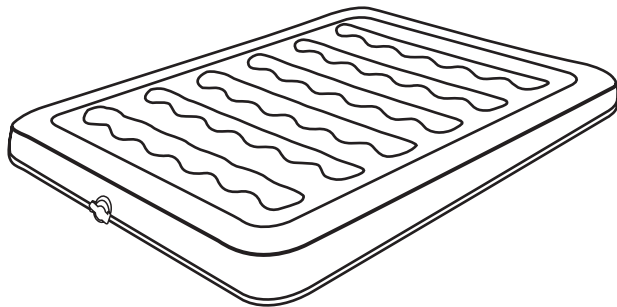

Thank you for purchasing the **EAM-ET1/EAM-EQ1 Air Mattress** by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**. We hope you enjoy your new air mattress!

Table of Contents

Package Contents	3
Specifications	4
Safety Information	5
Function Diagram	8
Initial Setup	9
Operation	9
• Inflating	9
• Deflating and Storing	10
Care and Maintenance	12
• Cleaning	12
• Keeping the Mattress Firm	12
• Preventing Leaks	13
• Repairing Leaks	13
Troubleshooting	14
Warranty Information	15
Customer Support	16

Package Contents

1 x Air Mattress
1 x Mattress Storage Bag
2 x Vinyl Plastic Repair Kits
1 x User Manual
1 x Information Card
1 x Warranty Card
1 x Air Pump
1 x AC Charger
1 x DC Charger
1 x Air Pump Carry Bag

Specifications

Model	EAM-ET1	EAM-EQ1
Dimensions	Twin 75 x 39 x 9 in / 91 x 99.1 x 22.9 cm	Queen 80 x 60 x 9 in / 203 x 152 x 22.9 cm
Max Weight Capacity	450 lb / 204.1 kg	650 lb / 294.8 kg

Note: The included air pump is rated at 0.55 psi / 3.8 kPa. You can also use another airbed pump rated at 0.4-0.55 psi / 2.7-3.8 kPa.

Safety Information

To reduce the risk of personal injury, please read and follow all instructions and safety guidelines in this manual.

WARNING

Risk of suffocation:



Never allow an infant 15 months or younger to sleep on an inflatable mattress. Infants can suffocate on an under-inflated or deflated mattress, on bedding, or by being trapped between the mattress and another surface.

- Children over 15 months old may sleep on this inflatable mattress **only** if there is at least a shoulder-width space between the mattress and any vertical surface (such as walls or furniture) to avoid entrapment.
- **Always** keep the mattress fully inflated when using.

WARNING

Risk of burns, fire, and other injury:



Keep mattress and cord away from heat sources or heated surfaces. **Do not** smoke on the mattress.



Do not stand, walk, or jump on this mattress.



This mattress is not a life-saving device. It is not a flotation device and is not intended for use in water.



Do not expose to sun, rain, or other complex climates for a long period of time. **Do not** expose to harsh outdoor conditions. **Do not** use in wet or damp areas. When camping, use without shelter **only** for a brief period of time. Use in sheltered conditions such as inside a tent or vehicle.

- Close supervision is necessary when this mattress is used by or near children, invalids, or disabled persons.
- **Only** use this mattress as described in this manual. **Do not** use attachments not recommended by Etekcity.
- **Do not** use this mattress if it is damaged or not working properly. Contact **Customer Support** (see page 17).
- Keep away from flammable materials (such as curtains) while inflating.
- Keep air valves free of lint, hair, and other small objects.
- **Do not** insert any foreign object into any opening.

 WARNING



Risk of burns, fire, and other injury (cont.):

- **Do not** operate where aerosol (spray) products are being used or where oxygen is being administered.
- **Do not** use this mattress to support video equipment such as televisions or computer monitors.
- **Do not** use high pressure or compressed air inflation systems with this mattress, and **do not** use devices that blow hot air (such as hair dryers) to inflate this mattress.
- **Do not** exceed the weight limit for the mattress (see page 4).
- Not for commercial use. Household use **only**.

SAVE THESE INSTRUCTIONS

Function Diagram

1. Air Mattress (felt side facing up)
2. Two-Part Air Valve
3. Outer Valve
4. Inner Valve

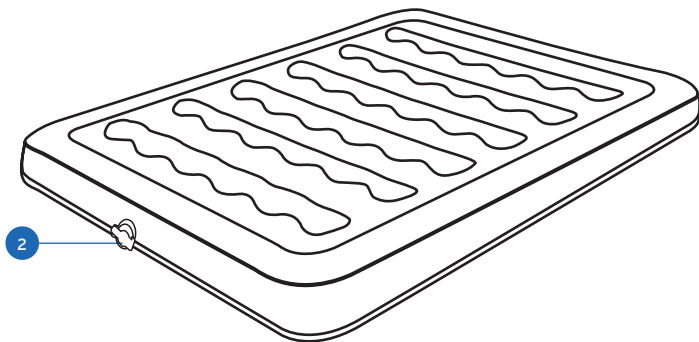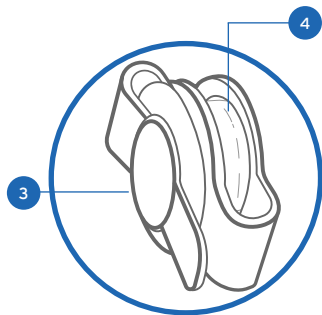

Initial Setup

1. Remove the mattress from its packaging. Unfold the mattress and place it with the felt side facing up.
2. Inflate the mattress (see page 9).
3. Let the mattress rest for 8-12 hours before sleeping on it for the first time. Optionally, allow the fully-inflated air mattress to air out for several days in a well-ventilated room.
4. Allow the mattress to air out for 2-3 days in a well-ventilated room.

Note: PVC material may have a strong smell when new. This smell is normal and non-toxic. The mattress materials have passed US CA Prop 65 tests on lead, cadmium, and phthalates.

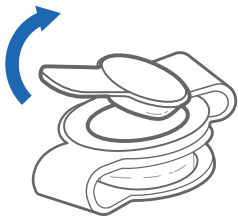


Figure 1.1

Operation

Inflating

1. Pull the tab to open the outer air valve. Connect the included air pump to the valve. [Figure 1.1]
2. Inflate to the desired firmness. Disconnect the air pump and close the air valve.

Note: Inflation will take about 2 minutes for the twin-sized mattress, and about 3 minutes for the queen-sized mattress. Time may vary based on the environmental temperature and air pump's pressure rating.


3. Lie on the mattress to test the firmness.
4. Optionally, adjust the firmness by either continuing to inflate the mattress or by letting some air out.
5. Make sure the air valve is completely closed. If there is a hissing sound or air coming from the valve, it is not fully closed.

Deflating and Storing

1. Fully open the inner air valve and allow the mattress to fully deflate. [\[Figure 2.1\]](#)
2. Make sure the mattress is clean and dry.
3. Lay mattress with the felt side facing up. Fold the mattress. [\[Figures 2.2 - 2.5\]](#)

Note: *Fold the mattress loosely. Avoid sharp bends, corners, and creases, as these can damage the mattress.*

4. Place the mattress inside the storage bag and store in a cool, dry place. [\[Figure 2.6\]](#)

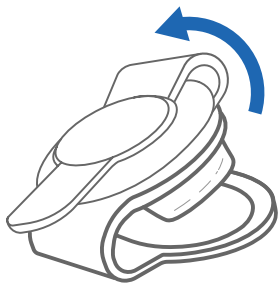

[Figure 2.1](#)

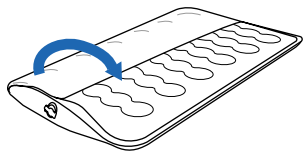 


Figure 2.2

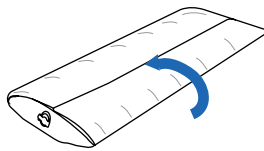 


Figure 2.3

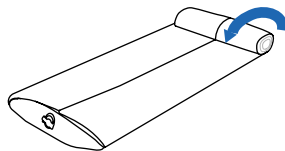 


Figure 2.4

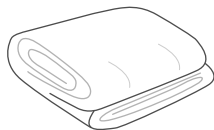 


Figure 2.5

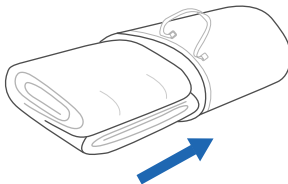


Figure 2.6

Care and Maintenance

Cleaning

- **Only** clean the mattress with a soft dry cloth or mild soap and water. Lay the mattress flat to dry after cleaning.
- **Do not** immerse in water. This will damage the mattress.

Keeping the Mattress Firm

- This mattress is made of flexible PVC vinyl material, which will naturally stretch during use. All air mattresses will lose some firmness or slightly deflate over time. Use the included pump to add air to the mattress for 10-20 seconds to restore firmness.
- During the first few uses, the mattress will stretch more than usual and require a small amount of inflation after each night.

- Air temperature will affect the internal pressure of an air mattress. Inflate or deflate the mattress as needed.
 - If the temperature goes down (such as on a cold night), the air in the mattress will compress, and the air bed will become softer.
 - If the environmental temperature goes up (such as on a hot day), the air in the mattress will expand and become firmer.

Preventing Leaks



Keep mattress away from sharp objects and rough surfaces.



Keep away from pets, as their claws will damage the mattress.

- **Do not** place any air mattress against a wall or similar surface. The friction from rubbing against a wall may damage an air mattress' flexible surface. Nails in the wall may also damage the mattress.
- **Do not** over-inflate. This will shorten the lifespan of the air mattress.
- **Do not** expose to extreme temperatures (hot or cold).
- Avoid putting too much pressure on small parts of any air mattress. This includes sitting or sleeping on the edge of the mattress for several hours, and standing or walking on the mattress.
- Fold the air mattress correctly (see page 11).
- When camping, keep off of rough objects or surfaces that may damage the mattress.

Repairing Leaks

Use the included vinyl plastic repair kits to repair leaks.

Note:

- *If your mattress has lost only a small amount of air, there may not be a leak (see **Keeping the Mattress Firm**, page 12).*
- *The repair kits will not work on the felt parts of the mattress.*

1. To locate the leak, fully inflate the mattress. Spray or wipe mild soapy water on the mattress. Air bubbles will form at the leak area.
2. Deflate the mattress.
3. Thoroughly clean the damaged area. Allow to dry for at least 10 minutes. The area must be completely dry before patching, or the patch will not work.
4. Cut the vinyl patch to the required size for the damaged area.
5. Remove patch from the paper backing. Press firmly over the damaged area. Optionally, use a smooth, heavy object to weigh down the patch.
6. Wait 20 minutes before inflating.

Troubleshooting

My mattress has a chemical smell.

- Place the mattress in a well-ventilated area and let it air out for several days.

Note: *The chemical smell, and all mattress materials, are non-toxic. This is normal. The mattress materials have passed US CA Prop 65 tests on lead, cadmium, and phthalates.*

My mattress deflated fully after sleeping on it once.

- Make sure the air valve is completely closed before using. If there is a hissing sound or air coming from the valve, it is not fully closed.
- Look for any punctures in the mattress. Use the included patch kit to seal the punctures (see page 13).
- Your mattress may be damaged or defective. Contact **Customer Support** (see page 16).

My mattress deflated by a small amount (10-15%).

- If your air mattress is new, then fully inflate and deflate the mattress once. This should fully stretch out the PVC vinyl material and the mattress should remain firm throughout the night.
- This is normal with extended use (see **Keeping the Mattress Firm**, page 12).

If your problem is not listed, please contact **Customer Support** (see page 16).

Warranty Information

Product	<i>EAM-ET1 Twin Air Mattress / EAM-EQ1 Queen Air Mattress</i>
For your own reference, we strongly recommend that you record your order number and date of purchase.	
Order Number	
Date of Purchase	

TERMS & POLICY

Etekcity Corporation ("Etekcity") warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekcity agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

If the product has been modified from its original condition;

If the product has not been used in accordance with directions and instructions in the user manual;

To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;

To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcity;

To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;

To damages or defects exceeding the cost of the product.

Etekcity will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Etekcity's warranty extends only to products purchased from authorized sellers that are subject to Etekcity's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via support@etekcity.com. DO NOT dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Customer Support

If you encounter any issues or have any questions regarding your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

Customer Support

Etekcity Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Mon-Fri, 9:00 am-5:00 pm PST/PDT

**Please have your invoice and order number ready before contacting Customer Support.*

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY

Etekcity Corporation hereby declares that this equipment is in compliance with the FCC Part 15 Subpart B. The declaration of conformity may be consulted in the support section of our website, accessible from www.etekcity.com

Notes

Connect with us @Etekcity





A2-21L06