





ONIVA®
a Picnic Time brand


Outdoor Director's Chair #810-17 Instructions

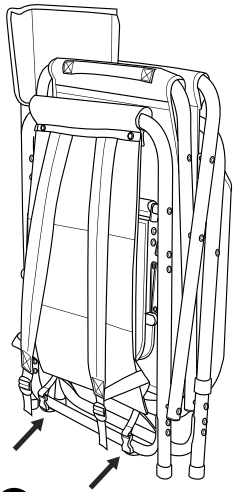


1 Unfasten backpack flap clips

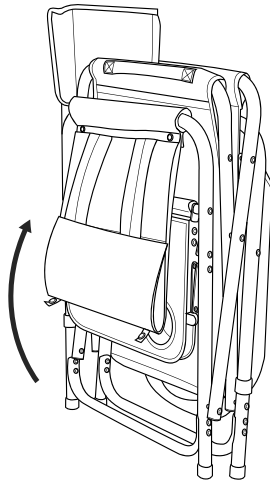


2 Fold backpack flap upward in thirds

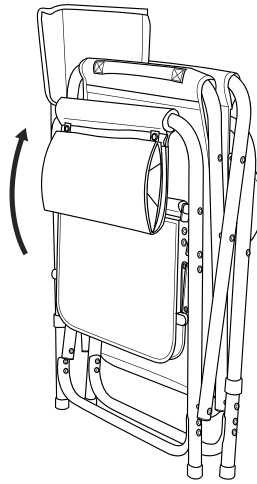


3 Fasten folded backpack flap to snaps at top

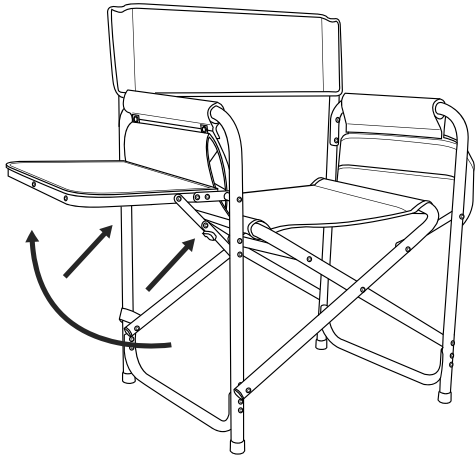



4 Lift side table and "lock" front and back supports in place

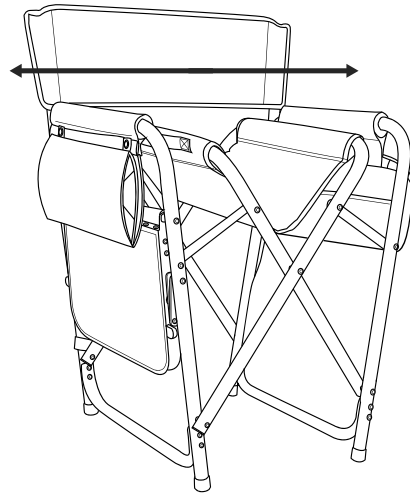

5 Pull armrests apart to open

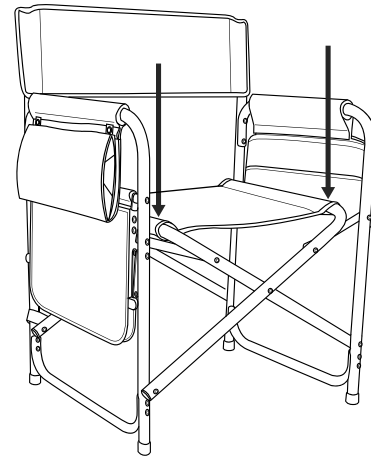

6 Press firmly downward to left and right sides of seat to "lock" into open position

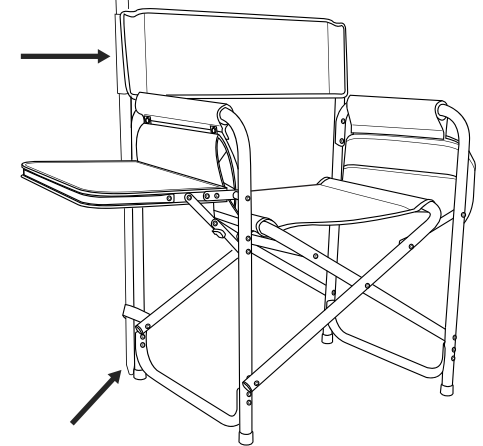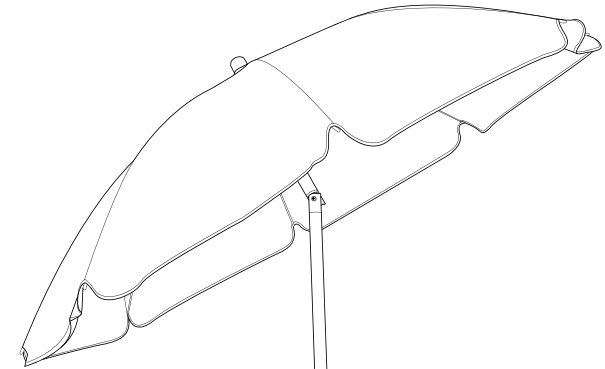

7 Loops on chair back and leg provide optional umbrella function