



Instruction Manual

*10*10ft Pop up Canopy Tent*

Making The Best Outdoor
Furniture For You



MADE IN CHINA

Product Specifications

SIZE (AT BASE) 10 x 10ft	CANOPY FRAME Powder-Coated Steel
SIZE (Canopy Top) 10 x 10ft	TOP CLOTH FABRIC Oxford polyester fiber with an upgraded silver-plated PU lining
SHADED AREA 100 sq ft	PACKLIST 1. 10 x 10 Ft Canopy top tarpaulin x 1 2. Canopy Sidewall x 3 3. Canopy Sidewall with Zipper x 1 4. 10 x 10 Ft pop up Canopy frame x 1 5. Wheeled roller bag x 1 6. Tent Stakes x 8 & Ropes x 4 7. Weight bags x 4 8. Instruction Manual x 1
PACKAGE SIZE 162*25*25.5 CM	
PACKAGE WEIGHT 24.7 KG	
TARPAULIN MATERIAL Oxford Cloth	

THE LATEST TECHNOLOGY IN THE INDUSTRY

- Double line sewing & Reenforced stress sewing prevent water penetrate from seams,100% waterproof.
- The pop up tent includes waterproof sealing tape to prevent water from pooling in wet conditions.

Caution

1. When adjusting the height, please place your fingers above the button to avoid getting stuck during setup and take down.(Be careful not to pinch your fingers)
2. Do not setup the canopy in rainy or windy weather.
3. In unattended situations and in bad weather, the tent should be taken down ; this product is not intended to withstand extreme/high winds or bad weather.
4. Do not use fire near the gazebo or place it near a heat source.
5. Do not install the gazebo on uneven ground.
6. When installing the gazebo, you need to ensure that the frame is locked and that the tent is properly secured with a heavy object or sandbags.
7. 4 rings for binding the rope to secure your tent down in case of wind.
8. Footing with Stake Hole: Ensure Firmly Secured in Windy or Rainy days.
9. Ropes and ground nails for added stability & Stable with weighted sandbags,so achieve a more wind-resistant and more stable effect.
10. Attach the legs with Velcro Straps: Each wall with velcro straps connect the canopy leg to make it strong enough & Sticky Velcro: Velcro starps with buckle to fix wall to leg.

Tips

STORAGE



Before storing the canopy, make sure that the parts are not wet or damp, so as not to cause mold. Use protective bag when not in use.

CLEANING



Clean the canopy and mesh with mild detergent and water.

INSTALLATION



Do not open the gazebo roughly. Improper force may result in damage to the parts or connectors.

 
MAINTENANCE



Wind and rain conditions :
Use rope and ground pegs.
Rainstorm weather : It is not recommended to use it outdoors.

How To Set Up

It is recommended that two or more people complete the installation of the pop-up canopy tent. Follow these instructions and be careful to avoid getting your fingers caught in any moving parts when opening and closing the frame.

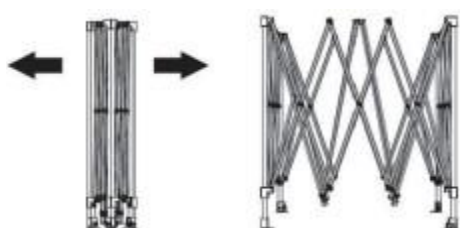

Step 1: Pull out the canopy frame

A. Place the canopy frame in the center of the area that needs shade.

B. With your partner on the other side of the frame, grab both outer legs and lift the frame slightly off the ground, then pull the frame back so that it opens to 3/4 of its full opening size, then place the frame back on the ground.

NOTE: Do not open the gazebo violently; improper force may cause damage to the brackets or connectors.

 
 


Step 2: Attaching the Pop up canopy top

A. Unfold the Pop up Gazebo top and on top of the Pop up Gazebo frame.

B. Secure the Pop up Gazebo top to the comers of the canopy frame using the Velcro.


If the cloth does not seem to fit, you need to adjust the degree of opening of the tent frame.

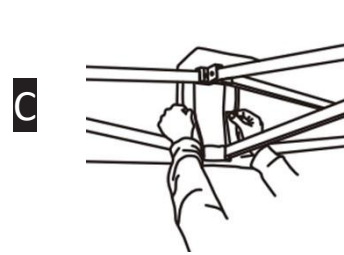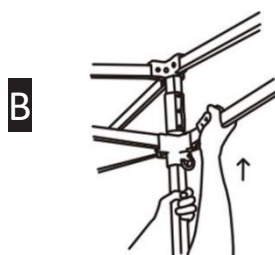

Step 3: Locking the frame


A. 2 people stand in a diagonal position and pull the frame horizontally until fully extended.

 B. Hold the vertical leg with one hand and push it up with the other hand to snap it into place. Repeat this procedure on the other legs.(Lift all the corners upward until they click and the snap goes into the positioning hole.)C. Install the reinforcement device of the top cloth and the cross bar.

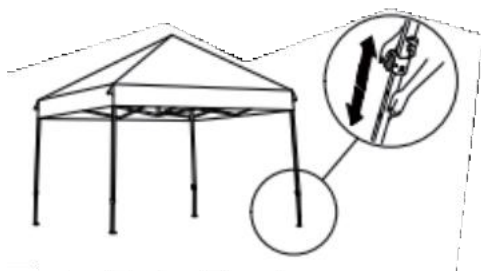

Step 4: Adjust the canopy height

 Press the red button on each leg and push the leg up or down to adjust the height of the gazebo(3 height available).

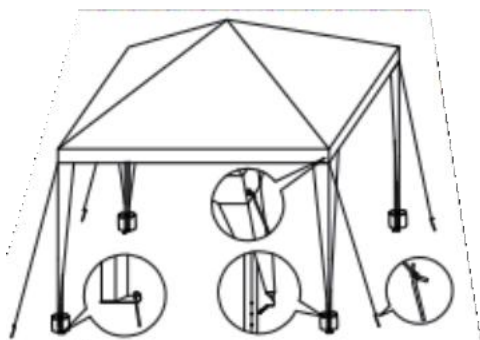


Step 5: Secure the canopy in place

A. There are 4 rope loops at the corners of the roof for tying weatherproof ropes to secure the tent. Tie the ropes to the rings, straighten the ropes, tie a stake to the other end of the rope, and then insert the stake into the floor/dirt.

B. Footing with Stake Hole for drilling holes in the concrete to hold the canopy in place, pushing stakes through the pegs on each leg footboard into the soil/-floor and then tying weight bags to the side poles to secure the tent.

C.Ropes and ground nails for added stability & Stable with weighted sandbags,so achieve a more wind-resistant and more stable effect.

 straps around the

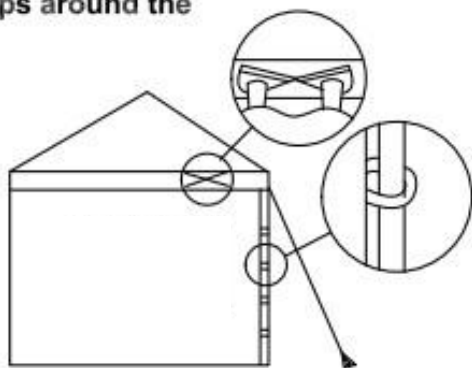

Step 6: Hanging the Sidewalls (Sidewalls or no sidewalls,open one one side,covered on all 4 sides or the front open-The Choice is Yours)

A.Attach the removable sidewalls by wrapping the Velero straps around the leg frames.

B.1 x Sidewalls With Rust proof zipper: Sidewalls with zippers as doors for easy opening & closing

How To Take Down

Step 1

Unwind Velero Straps,
Detach the sidewalls and
the Canopy top tarpaulin.
Just fold it.

Step 2

Removing the
stake and Lower the
tent height.

Step 3

Unlocking the frame

Step 4

2 people stand diagonally,
and push inward until fully
closed.(be careful not to
pinch your fingers).And
Folding the frame.

Step 5

Put the frame and the
canopy back to the
Portable Roller Bags.

TIPS: Before storing the canopy, make sure the parts are not wet or damp to avoid causing mold. And put the parts into the Roller Bags.



The Canopy Tent installation video in the purchase of product details page, you can directly click to view, or search for homdox in youtube/Facebook, watch the installation video.

