

 


Read the back before use
Quick Start Guide




Quick Start Guide

- 1 Remove the protective film on the robot and docking station

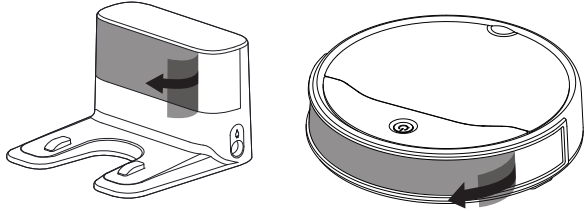


- 2 Install the side brushes

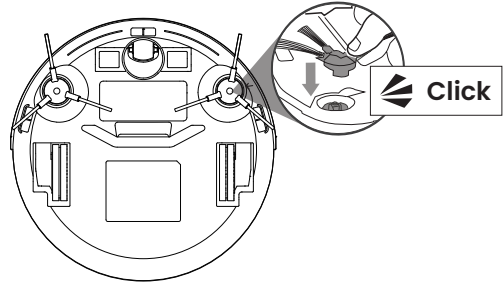 

- 3 Placement of the docking station / connection of power supply

 Place the docking station against the wall on a flat surface. Ensure there are no items within 0.5m to the left or right and 1.5m in front to avoid blocking the charging signal. Avoid having reflective objects, such as floor mirrors, near the docking station to prevent signal reflection.

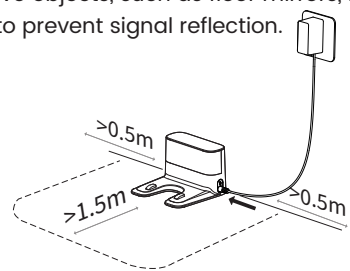


- 4 Charging

Place the robot with its button side facing the docking station. When the button light starts to blink, it indicates correct placement. (As shown below)

The robot will turn on automatically if charging while powered off.

 
- ⦿ A purple blinking light indicates the battery is below 50%.
- ⦿ A blue blinking light indicates the battery is above 50%.
- ⦿ No light means the battery is fully charged.

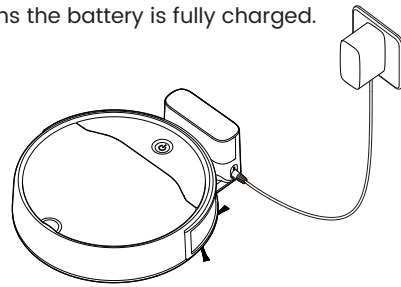

- 5 Tidy up the room


1. Please remove any fragile and miscellaneous items from the floor (such as vases, plastic bags, etc.) to prevent the robot from being obstructed or causing damage to valuable items in the home due to minor collisions.

 2. Do not use the robot in areas without protective barriers (like open balconies). Ensure balcony doors are closed, or use a sturdy physical barrier to prevent accidental falls that could cause injury or property damage.

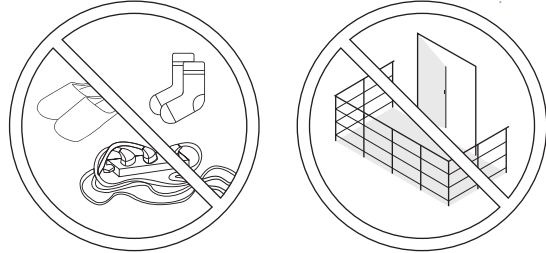

- 6 Start cleaning

 Press the button to have the robot start the cleaning task from the docking station.

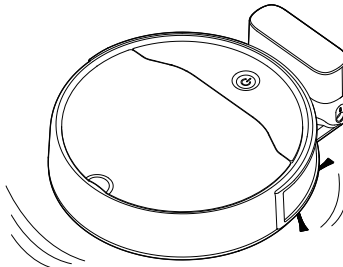

- 7 App download and configuration

Scan the following QR code, and then download and install App as prompted.

Make an appointment to clean your home twice a day.



Warm tips:

* After the App is installed, please follow the page guide to complete account registration, login and sweeper network.

* For the first time, the sweeper will automatically enter the network state when it is turned on, and the device will be automatically scanned when you click "Add Device" in the App.

* The robot only supports 2.4GHz Wi-Fi network.

- 8 How to use buttons

Hold for 3 seconds : **Turn on**

Fast press : **Start/Pause**

 
Fast press twice : **Auto-recharge**

Hold for 6 seconds : **Enter network pairing mode**

(Networking operation: Press and hold for 6 seconds and release when you hear two beeps, the light will blink and the robot will enter the networking mode, please open the App for networking and pairing).

Hold for 12 seconds : **Turn off**

(a long "beep" indicates power off)

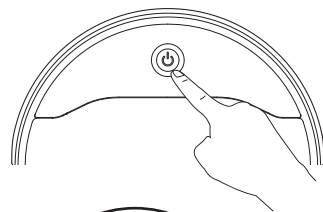

- 9 Indicator Meaning

Robot status	Indicator status
Cleaning	Blue light on
Pause/standby	Blue light on
Charging	Purple/Blue Breathing
Low battery-automatic return and charge	Red light on
Cleaning complete-automatic return and charge	Purple light on
Enter network pairing mode	Blue light flash
Distribution Network Success	Blue light on
Error	Red light on/flash

Pantone
319 C

产品型号: M310	比例要求: 1: 1
物料名称: 快捷指南盖板 (英文)	印刷要求: 专色印刷+过哑膜
物料尺寸: 356*298mm	物料编号: 904-1091-0000
物料材质: 300g双铜纸	版本号: V01 (12.22)
变更记录:	