


# Bonsenkitchen

## Coffee Grinder

Operation Instructions

Model: CG8901

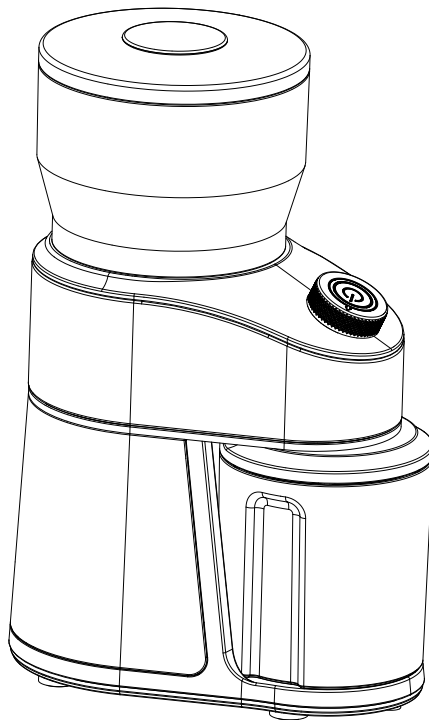

[www.bonsenkitchen.com](http://www.bonsenkitchen.com)



# Contents

|                                     |     |
|-------------------------------------|-----|
| IMPORTANT SAFEGUARDS .....          | 1-2 |
| PACKAGE CONTENTS .....              | 3   |
| KNOW YOUR COFFEE GRINDER .....      | 3   |
| TECHNICAL DETAILS .....             | 4   |
| BEFORE USING COFFEE GRINDER .....   | 4   |
| USING YOUR COFFEE GRINDER .....     | 4-5 |
| CLEANING AND MAINTENANCE .....      | 5   |
| TROUBLESHOOTING .....               | 6   |
| WARRANTY CLAIM PROCEDURE .....      | 7   |
| ENVIRONMENT FRIENDLY DISPOSAL ..... | 7   |

# IMPORTANT SAFEGUARDS

1. Read all instructions carefully before using this product.
2. Basic safety precautions should always be followed when using electrical products, especially when children are present.
3. **WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE RELOCATING, SERVICING, OR CLEANING IT.**
4. This product is intended for grinding coffee beans to brew coffee for human consumption.
5. Do not use the product for any other purpose.
6. Keep the product out of the reach of children and pets. This product is not intended for use by children. Close adult supervision is necessary when this product is used near children.
7. Do not leave the product unattended while in use. Always unplug the product from the electrical outlet when not in use.
8. Always place the product on a flat, steady, stable surface.
9. Keep the Power Cord and product away from heated surfaces.
10. Do not place this product in or expose it to water or other liquids.
11. Do not use attachments not recommended or sold by the product manufacturer as a risk of fire, electrical shock, or serious personal injury may result.
12. To avoid the risk of serious personal injury or damage to the product, keep hands, hair, other body parts, clothing, and utensils away from the grinding blades while operating the product.
13. Plug the product into a standard 120V~ electrical outlet.
14. Never plug the product into an electrical outlet unless it is completely assembled and the Lid is securely in place.
14. Never plug the product into an electrical outlet unless it is completely assembled and the Lid is securely in place.

15. Before removing the Lid, unplug the product from the electrical outlet blades have completely stopped. And make sure the grinding.
16. Do not plug or unplug the product into/from the electrical outlet with a wet hand.
17. Do not allow the Power Cord to hang (i.e., over the edge of a table or counter) where it tripped over or pulled.
18. Disconnect the plug (do not pull on the Power Cord) from the electrical outlet.
19. Unplug the product from the electrical outlet prior to putting on or removing parts.
20. Never operate this product if it has a damaged Power Cord or plug, is not working properly, has been dropped, damaged, or if the Motor Housing has been exposed to water or other liquids. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing. Return the product to a service center for examination and repair.
21. This product is intended for indoor, non-commercial,

**HOUSEHOLD USE ONLY.** Do not use outdoors.

## **NOTE:**

**A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. If a longer cord is required, extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is used:**

- (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product;**
- (2) the extension cord should be arranged so that it will not drape over the countertop or tabletop where it can accidentally be pulled on or tripped over by children or pets.**


# PACKAGE CONTENTS

## 1 Coffee Grinder

### 1 Operating Instructions

Check the delivery contents for completeness immediately after unpacking.  
Remove all packaging materials and plastic film from the appliance.

# KNOW YOUR COFFEE GRINDER

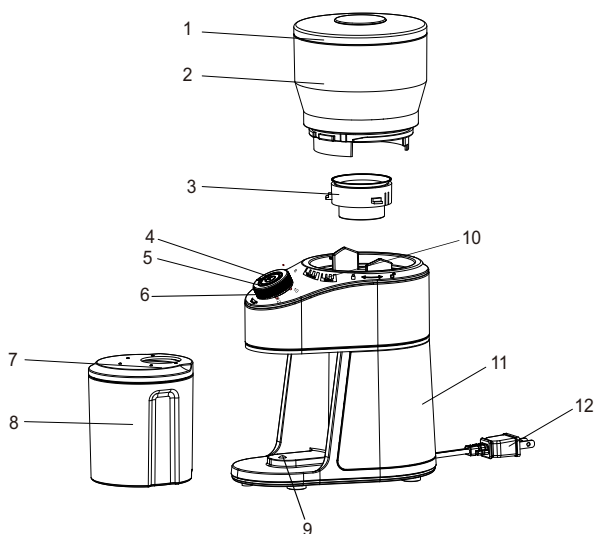

1. Hopper lid

2. Hopper

3. Upper grinding disc, removable

4. Power button

5. Power indicator

6. Cup number dial with scale

7. Collecting container with lid

8. Collecting container

9. Collecting container fixing buckle

10. Grinding level dial with scale

11. Motor housing

12. Power cord with power plug

# TECHNICAL DETAILS

120V~ 60Hz 200W

## BEFORE USING COFFEE GRINDER

Before using the coffee grinder for the first time, thoroughly clean the Lid, the Hopper, the Motor Housing, the Container Lid, and the Container and then thoroughly dry them. Remove any foreign objects or debris from the Container and Hopper before each use.

## USING YOUR COFFEE GRINDER

1. Securely attach the Hopper and Lid onto the Motor Housing.
2. Pour the coffee beans into the Hopper.

### NOTE:

- The Hopper have a capacity of 230g.
- Do not fill the coffee grinder beyond the brim of the Hopper.

3. Securely attach the Container and Container Lid into the Motor Housing.

### NOTE:

- The Container have a capacity of 90g.
- Do not fill the ground coffee beyond the max line of the Container.

4. Place the appliance on a clean, flat and heat resistant surface.
5. Insert the Power Cord With Plug into a wall outlet.
6. Use the dials for setting the desired number of cups.
7. Removable the Upper grinding disc for setting the desired grinding grade.

8. Press the power switch down to turn on the product. When the coffee beans is ground as desired, the coffee grinder will be automatically shut off, please unplug the power cord from the outlet.

## **NOTE:**

**After grinding beans continuously for many times, the product will stop working as it has overheat protection. Don't worry, the product will resume working after it is cool down.**

9. Pull out the collection container, remove its lid and pour the coffee, e.g. in a coffee box. Clean the device as described under **CLEANING AND MAINTENANCE**.
10. Turn the Hopper a little clockwise to loosen it and remove it.
11. Clean the removable components with a cleaning brush, blow it out or under running water. Make sure that all parts are dry before assembly.  
The assembling is done in reverse order.

## **CLEANING AND MAINTENANCE**

### **CAUTION:**

**- Ensure the product is unplugged from the electrical outlet before cleaning it.**

1. Always clean the product immediately after each use.
2. Wash the Lid in warm, soapy water; then rinse and dry thoroughly.
3. Wipe clean the inside of the Container and Motor Housing with a soft, damp cloth; then thoroughly dry them.

### **CAUTION:**

**- Do not immerse the Motor Housing into water or other liquids.**

1. Do not use abrasive cleaners or scouring pads to clean the product.
2. Do not oil or sharpen the grinding blades.
3. Store the product in a cool, dry place.

# TROUBLESHOOTING

If there are any problems during operation, please refer to the following table. If problems cannot be solved as indicated under Solution, please contact your manufacturer.

| PROBLEM                                 | CAUSE                                                                                                        | SOLUTION                                                                                                                                                                                               |
|-----------------------------------------|--------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Product does not work                   | <ul style="list-style-type: none"><li>• Interrupted power supply.</li><li>• Product is overheated.</li></ul> | <ul style="list-style-type: none"><li>• Check the power supply.</li><li>• The product is not suitable for continuous operation. Unplug and let the product cool down for approx. 20 minutes.</li></ul> |
| Product feels warm/hot during operation | <ul style="list-style-type: none"><li>• Continuous operation.</li></ul>                                      | The product is not suitable for continuous operation. Unplug and let the product cool down in order to avoid overheating.                                                                              |

## WARRANTY CLAIM PROCEDURE

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (S/N: 12345) available as proof of purchase.

You will find the item number as a sticker on the rear or bottom of the appliance. If malfunctions or other defects occur, please contact our customer service listed either by telephone or by email.

If you request any further assistance, please contact us:

Customer service: **1-888-965-8032**

[support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)

## ENVIRONMENT FRIENDLY DISPOSAL

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and health way.



Register your product at **[www.bonsenkitchen.com](http://www.bonsenkitchen.com)**  
to get more perks!



Follow us @bonsenkitchen

**Bonsen Electronics Inc.**

📍 : 5805C Peachtree Corners East  
Norcross, GA, 30092

☎ : 1-888-965-8032

✉ : [support@bonsenkitchen.com](mailto:support@bonsenkitchen.com)