

mompush®

COMPACT FOLD DOUBLE STROLLER

S3101-ND



 mompush_stroller  mompush_stroller

 support@mompush.com

www.mompush.com



Before returning this product to the store! Let's see if we can assist you!

- **Not sure how to assemble our product?**

Please contact our Support team for assistance at support@mompush.com.
To better assist you, please have your Model# available.

- **If you are missing a piece or have a damaged part**

Please contact our Support team for assistance at support@mompush.com.
To better assist you, please have your order number available.

- **Warranty**

In order to protect your investment, don't forget to register your product.
Please visit <https://www.mompush.com/pages/product-registration>
to register your product.

- **Please note**

Unauthorized third party sales are not covered under our Manufacturer Warranty.

WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death. **Avoid serious injury from falling or sliding out. Always use restraint system.** Your child's safety depends on you. Proper stroller use cannot be assured unless you follow these instructions. **DO NOT USE STROLLER UNTIL YOU READ AND UNDERSTAND THESE INSTRUCTIONS. KEEP INSTRUCTIONS FOR FUTURE USE.**

IMPORTANT SAFETY INFORMATION:


How to Keep Your Child Safe While Using this Stroller

- **Adult assembly required.**
- **Never leave your child unattended while in stroller.** Accidents can happen quickly while your back is turned. You must always keep your child in view while your child is in the stroller, even when sleeping. Do not use this product as a bed. Your child may become tangled in straps or pads and suffocate.
- **Always use restraint system to keep child from standing up or falling out of the stroller.**
- **Always lock the stroller open before allowing your child in or near the stroller. This prevents injuries caused by stroller collapsing.**
- Only use this stroller with children who weigh less than 15kg and are no more than 40 inches (1 meter) tall. Use by larger children may damage the stroller or cause a hazardous, unstable condition to exist.
- **Always set the wheel brakes when stroller is not moving, especially on an incline.** This prevents the stroller from rolling away.

What to Avoid While Using this Stroller

- **Always balance the weight of the stroller evenly.** To prevent the stroller from becoming unstable, do not place parcels or accessory items on the stroller canopy, seat, or over the handle. Do not allow children to play with or hang onto the stroller.
- **Never use this stroller on stairways or escalators.**
- **This is not an exercise stroller!** Do not use this product while running, jogging, in-line skating, or participating in other athletic activities.
- **Take care when folding and unfolding to prevent finger pinching.**
- **Make sure children are clear of any moving parts** if you adjust the stroller; otherwise, they may be injured.
- **DO NOT** allow children to climb into stroller unassisted. Stroller may tip over and injure child.
- Only use replacement parts and accessories supplied by the manufacturer.
- **DO NOT put child in either basket.**
 - To prevent the stroller from becoming unstable or tipping, do not put more than 2kg in each basket.
 - Product may become unstable if a storage bag other than the one recommended by the manufacturer is used.
 - Maximum weight for items in the cup holder is 0.45kg.

TO OPEN STROLLER

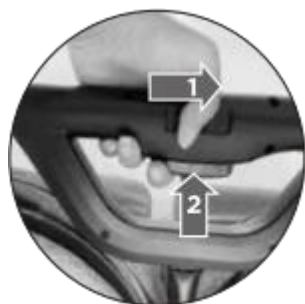

① Slide Right + ② Squeeze



③ Push



④ Lift

Release locking latch of stroller by pushing handle into stroller, then slide button on handle with thumb, and squeeze lever under handle and lift.

TO INSTALL CUP HOLDER



Insert the cup into the hole which is in the side of the handle.

TO ASSEMBLE STROLLER



Lift leg rest frames up.



Pull fabric of leg rests over the leg rest frames. Wrap fabric over cross tube.



Snap
Encastrar

Snap both sides into place. Ensure leg rest triggers are fully enclosed and visible through openings in fabric.

TO ADJUST LEG REST



LEG REST POSITIONS:


- 1 Used to ensure compatible car seats fit snugly (right side of stroller only);
- 2 & 3 Use according to child's comfort.

Pull up both triggers on underside of leg rest to adjust position down.

TO ADJUST SEAT

WARNING

To avoid finger entrapment or pinching, do not adjust the seat back while child is in the stroller. To avoid head entrapment, always fasten the canopy to the seat back when using the stroller in the reclined position.

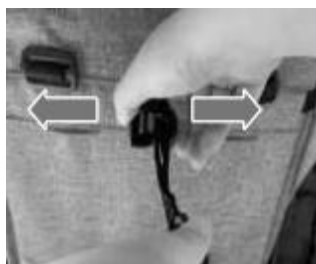

Squeeze clip and pull down or up to adjust seat.

TO OPERATE BRAKES



Push down firmly to lock.




Pull up to unlock.


TO SECURE CHILD IN STROLLER SEAT



When securing or removing child, lock foot brake to keep stroller from rolling.

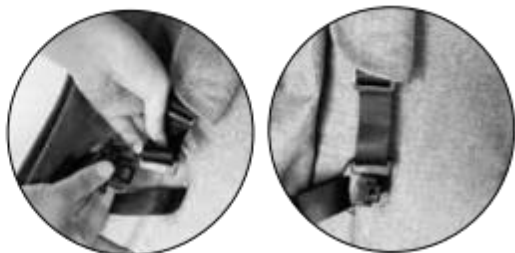

Slide shoulder strap clips onto each waist strap buckle.

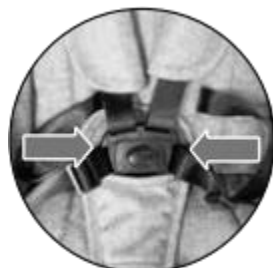


“Click”

Insert both waist buckles into the center mount on the crotch strap and fasten.

To undo restraint system buckles, press center button to release.

TO ADJUST SHOULDER AND WAIST STRAPS

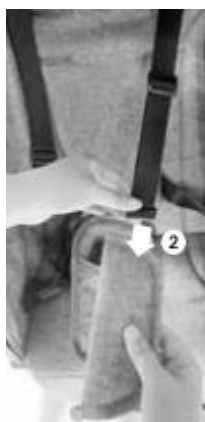

Adjust shoulder straps and waist strap as needed, and put restraint sleeves back on.

TO ADJUST CANOPY


PEEK-A-BOO WINDOW



Pull canopy forward to extend or back to collapse.



TO FOLD STROLLER

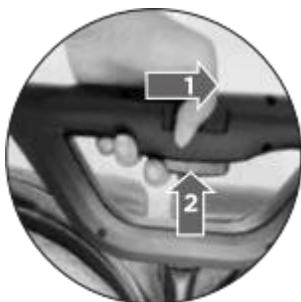

1
Slide Right

+

2
Squeeze



Push handle down and fold stroller.



Lock stroller by pushing stroller handle toward seat.

CARE & MAINTENANCE

- Clean metal parts with a damp cloth and wipe dry.
- Spot clean fabric with mild soap and water solution.
- If stroller becomes wet, wipe with a soft cloth to prevent rusting on metal frame.
- When storing stroller, never stack other items on top of or in it; this may damage the stroller.
- Periodically check for worn parts, loose screws, torn materials or stitching.
- Replace any damaged parts immediately.

REPLACEMENT PARTS LIST

- 1 CANOPY
- 2 STROLLER FRAME
- 3 RESTRAINT SLEEVES
- 4 CROTCH PAD
- 5 BASKET
- 6 FRONT WHEEL
- 7 REAR WHEEL ASSEMBLY
- 8 CUP HOLDER



LIMITED WARRANTY

mompush® warrants this product to be free of defects in materials and workmanship, as follows: For a period of ONE YEAR from the date of purchase, mompush will repair or replace, at its option, the defective product. If you have a problem or are not satisfied with this product, please contact the mompush Services center.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. CONTOURS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of warranties set forth above, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. We sincerely thank you for your purchase of this mompush product. To obtain warranty service, please contact us via email at support@mompush.com. If the product is returned to mompush Services center for repair or replacement, it must be shipped prepaid and adequately insured. For further information visit www.mompush.com

PERSONAL RECORD CARD

Once in a while, we are less than perfect and one of our products with a problem reaches a customer. In most cases, we can solve your problem with replacement parts. Please contact us before you return one of our products to the store.

If you have a question about your product, please have the following available when you call:

- Product model number
- Date of manufacturing

You can find the Model Number and Date of Manufacture on a sticker located on the rear stroller leg, or sewn on the back of the seat. Having this information ready will expedite your service call.

Please direct any comments, questions or replacement part requests to:
mompush Services center.

1075 Mount Vernon Ave. Riverside, CA 92507

e-mail: support@mompush.com

Model / Style Number: _____

Date of Manufacture: _____

Date of Purchase: _____

mompush[®]

Designer style.
Unbeatable value.

 mompush_stroller  mompush_stroller

 support@mompush.com

www.mompush.com