 


MANUAL — MLR010019N | MLR010554N | MLR010555N | MLR010556N

≡Mueller

ELECTRIC COFFEE GRINDER

WITH POWERFUL
GRINDING CAPACITY

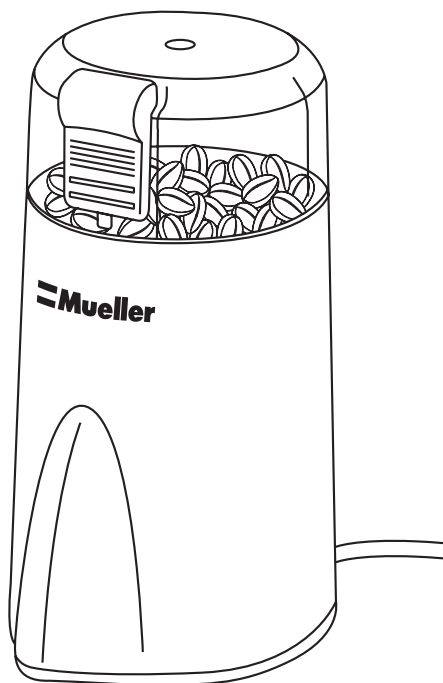

IMPORTANT SAFETY INSTRUCTIONS

CAUTION!

Do not immerse the unit in water. To protect against electrical shock, do not put any parts in water or other liquid.


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions thoroughly before use.
- Do not use the appliance for anything other than its intended use.
- This appliance is only to be used indoors.
- Check Grinding Hopper for presence of foreign objects before using.
- Avoid contacting moving parts. Do not remove the transparent window Lid while the grinder blades are in motion.
- During grinding, if the coffee stops spinning, shake the Grinder while holding the Lid closed.
- Inspect blade and blade assembly before and after use. If damaged, do not use and contact Manufacturer or authorized repair facility for assistance.
- Do not grind more than 2.12 oz (60 g) of coffee. Before grinding the next batch of coffee, wait 30 minutes to cool down the mill.
- The applicable voltage is AC 120 V, 60 Hz. For safety reasons, it is not appropriate to connect multiple devices to one power outlet.
- Never leave the product connected to the power source without supervision. Even when use is interrupted for a short time, or when it is left unattended, remove plug from outlet. To unplug, grasp the plug and pull from the outlet. Never pull from the Power Cord.
- Always disconnect the appliance from the power supply before assembling, disassembling, or cleaning it.

- Inspect the power cable before each use. Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defective product yourself because it can lead to electric shock. Any repair that was done incorrectly can cause hazardous situations for the user.
- If the power cable or plug is damaged, the product should be returned to the manufacturer, its service agents, or similarly qualified persons.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug should fit in a polarized outlet only one way. If the plug does not fully fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way. Do not let cord hang over edge of table or counter or touch hot surfaces.
- To provide additional protection, it is recommended to install Residual Current Device (RCD) in the power circuit, with residual current rating not more than 30 mA. Contact a professional electrician in this matter.
- Never expose the product to direct sunlight or rain, etc. Never use the product in humid conditions.
- Never put the product on or close to the hot or warm surfaces or the kitchen appliances like the electric oven or gas burner. Never use the product close to combustibles.
- Do not wash the body of the Grinder under running water or immerse it in water.
- Do not operate the Grinder with an empty Grinding Hopper or tank. Add coffee beans before use. Do not overfill the Grinding Hopper or tank.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision and instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

OVERVIEW OF PARTS

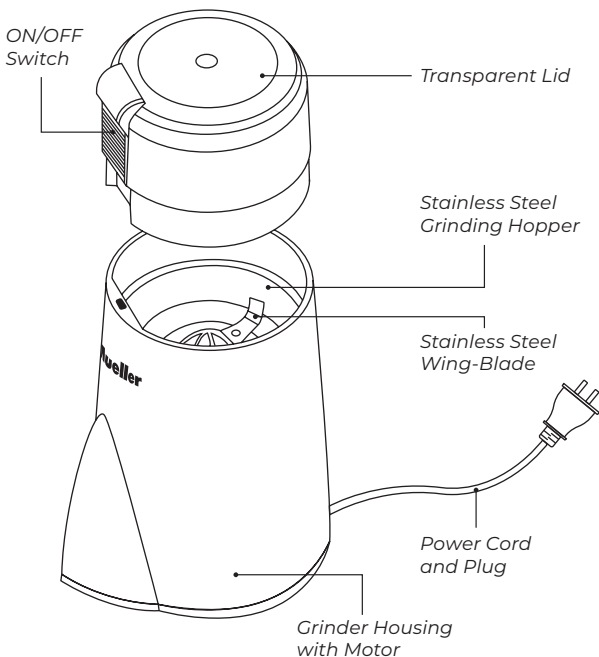


BEFORE FIRST USE

- Wipe the Grinding Hopper, Wing-Blade, and Lid with a damp cloth.
- Parts must be completely dry before using.
- Before connecting the product to the power supply, check that the power supply voltage and current rating corresponds with the power supply details shown on the product rating label.

EASY STEPS

STEP 1


Plug in then remove the Lid.

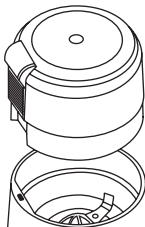

STEP 2


Put coffee beans inside the Grinding Hopper. Do not fill above the rim.

NOTE: Grinder capacity: up to 2.12 oz (60 g).

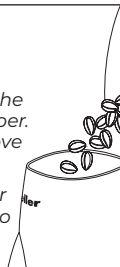

STEP 3

Close the Lid.

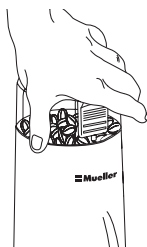


STEP 4

To operate, press and hold the On/Off button for up to 20 seconds. Release when done.


NOTE: Change grinding time to adjust grounds (coarse to fine). See next page for more.

NOTE: You can stop grinding any time by releasing pressure on the On/Off button.

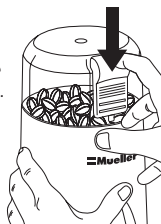


STEP 5

Unplug. Next, invert the Grinder and gently tap grounds into the Lid. Carefully remove the Lid (with Grinder still upside down). Pour the ground powder from the Lid into your coffee filter.

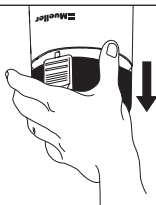

CAUTION!

Do not operate the appliance for more than 20 seconds at a time. Let the appliance cool down for 30 minutes before resuming operation.

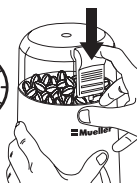

COFFEE BEST PRACTICES

Bean Quantity	Ground Coffee (Tablespoons)	Yields (5 oz cup)
1.5 scoops	3 tbsp (1.5 oz)	2 cups
2.5 scoops	5 tbsp (2.5 oz)	4 cups
3 scoops	6 tbsp (3 oz)	6 cups
4 scoops	8 tbsp (4 oz)	8 cups
5 scoops	10 tbsp (5 oz)	10 cups
5.5 scoops	11 tbsp (5.5 oz)	12 cups

NOTE: This Grinder grinds up to 2.12 oz (60 g) coffee beans. Avoid putting the coffee bean exceeding the level of the bowl top edge, overfilling could cause grinding powder uneven. We recommend unplugging the grinder when not in use.

GRINDING SUGGESTIONS

- Grinding fresh coffee beans right before brewing will produce the best flavor.
- We do not recommend reusing coffee grounds.
- Pre-ground beans will keep their aroma for about 7–8 days. Coffee sealed in a cool place may retain its aroma longer. Do not store ground coffee in fridge or freezer.
- Adjust the grind times according to your coffee brew type using the chart below. Experiment with grind size to suit your personal preference. Smaller batches of beans will use less grind time.

NOTE: Use less grind time for smaller batches of coffee beans.



Coarse Grind
French Press & Percolator



8–10 Seconds



Medium Grind
Automatic Drip Coffee



10–15 Seconds



Fine Ground
Espresso Machine &
Turkish Coffee



20 Seconds

CLEANING AND MAINTENANCE

- Always unplug the unit before cleaning.
- Remove all coffee grounds after each use.
The Grinding Hopper and Wing-Blade should be cleaned with a small brush.
- The Transparent Lid can be washed by hand with mild soap and water; do not clean it in the dishwasher.
- DO NOT IMMERSE IN WATER.
- Wipe the Grinder Housing with a damp cloth only.
- Do not try to oil or sharpen the blades.

1-YEAR LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship under normal use and service for one year from the date of the original purchase with the receipt. The manufacturer's obligation shall be limited to repairing or replacing any part of the product that is defective. Such warranty shall not apply to damages resulting from accidents, abuse, or misuse.

TECHNICAL DATA

Model	550K	Max. Capacity	2.12 oz (60 g)
Voltage	AC 120 V	Max. Operating Time	
Frequency	60 Hz	20 seconds per cycle. 30 minutes cool down period between cycles.	
Power	130 W		

If there is any problem with Mueller Electric Coffee Grinder, please contact Customer Service.

MUELLERDIRECT.COM
SUPPORT@MUELLERDIRECT.COM
888-632-9981



ELECTRIC COFFEE GRINDER

WITH POWERFUL GRINDING CAPACITY

SKU:

MLR010019N

MLR010554N

MLR010555N

MLR010556N

MADE IN CHINA

HAPPINESS IS HOMEMADE

MUELLERDIRECT.COM

SUPPORT@MUELLERDIRECT.COM

888-632-9981

37 E 18TH STREET
NEW YORK, NY 10003
UNITED STATES