


## User manual for Doorbell M523

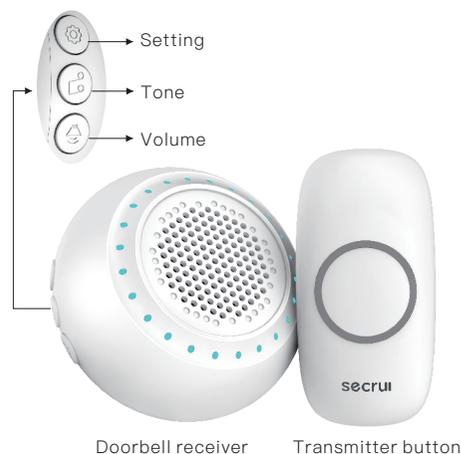

### Package:

- 1X Secrui wireless doorbell receiver
- 1X Secrui transmitter button
- 1X Double-side adhesive table
- 1X Secrui User manual

### Product features:

1. 4 levels of adjustable volume.
2. 32 ringtones options
3. Memory function
4. Fixed tone buttons settable
5. Each doorbell receiver works with up to 20 transmitter buttons at most.

### Product Specification:

1. Doorbell receiver power supply:100–240V
2. Doorbell receiver working current:100mA
3. Battery lifetime: 3 years
4. Transmitter button working voltage:12V (built-in battery)

5. Sound volume:25dB – 130dB
6. Working frequency:433MHZ
7. Wireless range: 1000ft (in open air)

### Operation instruction:

- Short press---press button for <3S
- Long press---press button for >3S

### Receiver power on :

Plug the doorbell receiver into the AC Electric outlet. The doorbell receiver will beep once and LED light will flash in each color circularly.

### Chime setting:

1. Short press 【♪】 : Loop tones in sequence and play the current tones.
2. Long press 【♪】 : Change tones loop direction.

### Volume adjustment:

1. Short press 【🔊】 to increase or decrease the volume
2. The volume will turn to maximum automatically when the doorbell receiver reboots.

### Doorbell Transmitter button pairing

1. Long press 【🔊】 on doorbell receiver, the LED light flashes and beeps once, the doorbell receiver has entered the pairing state.
2. Short press transmitter button.
3. Short press 【🔊】 , the doorbell receiver LED light is off.
4. Short press transmitter button, the pairing is done.

### Recommend: Fixed-tone transmitter button pairing:

( 1 doorbell receiver with 2 or more transmitter buttons)

1. Short Press 【♪】 , select a tone, long press 【♪】 and 【🔊】 , do not release them until the doorbell receiver LED light is green and beeps
2. Short press transmitter button A.
3. Short press 【🔊】 , the doorbell receiver LED light is off, then short press transmitter button A. Done!
4. Short Press 【♪】 , select another tone, long press 【♪】 and 【🔊】 , do not release them until the doorbell receiver LED light is green and beeps.
5. Short press transmitter button B.
6. Short press 【🔊】 , the doorbell receiver LED light is off, then short press transmitter button B.Done!

### Note:

When the doorbell receiver is in pairing state: short press any key on the doorbell receiver or leave it 20 seconds without any operation, the doorbell receiver will quit the pairing state automatically.

### Delete pairing method:

1. Unplug the doorbell receiver.
2. Press and hold 【🔊】 button, plug in doorbell receiver. (Do not release the 【🔊】 button until the doorbell receiver LED light flashes and beeps 10 times, then beeps continues )
3. Delete pairing is done!

### Attention:

-  Do not let children play with it .
-  Do not expose the doorbell receiver to rain, fire, excess moisture or snow.
-  Do not disassemble.
-  Do not operate product with damage cord or plug.
-  Do not throw or shake the product.

For any product issue, we sincerely appreciate if you could contact us.

 Email: support@secrui.com