



Solar Hand Crank Radio

www.eskynow.com

Description

This Esky Solar Hand Crank Radio is a compact multifunctional device that provides assured access to FM radio, weather information and illumination whenever and wherever you need it. Micro USB, solar and manual hand cranking recharge options powers the radio to provide informative listening enjoyment and emergency illumination in your daily life.

Illustration



-1-

Specifications


Radio band	AM: 520-1710KHz FM: 87-108MHz NOAA: 162.40 ~ 162.55MHz
Working voltage	2.7V-4.2V
Power source	1000mAh/3.6V Ni-MH
Maximum power consumption	3W
LED flashlight	3W/140LM
Waterproof level	IPX-3
Dimension	128 x 60 x 45 mm/5 x 2.4 x 1.8 in
Weight	220g/0.49lb

User Guide

A. Solar/Hand Crank/Micro USB Recharging

▪ Solar Power


Expose the radio to sunlight for approximately 10-12 hours for full charging.

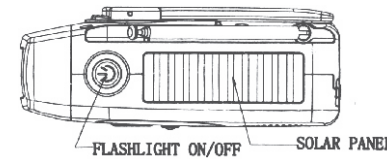

-2-


▪ Hand Crank Power

1. Turn the Hand Crank either in the direction of clockwise or counterclockwise for 3-5min to activate the internal battery for the first time.
2. For the subsequent charging, turn the Hand Crank at speed of over 130mp/min to generate power. One minute manual power generation can last 3 minutes of continuous LCD flashlight or 15-20 minutes of continuous radio usage at medium volume.

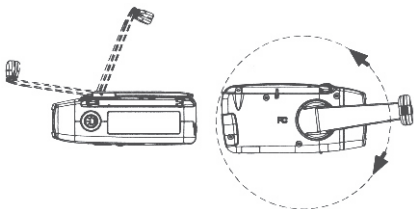


▪ Micro USB Recharging

Insert one end of the charging cable into the micro USB jack and the other end to the computer USB interface or power adapter for recharging.

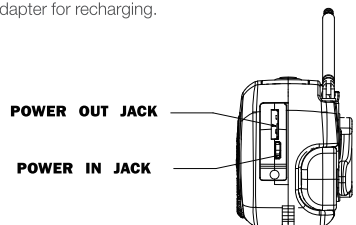

-3-

Charging Indicator Status

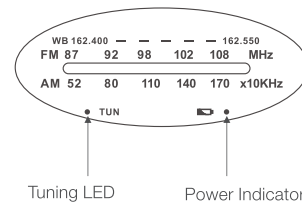

Charging	Red on
Fully charged	Turn off

Note:

1. When battery is over loading or short circuit, it would stop output automatically.
2. When battery voltage is lower than 2.5V, the radio will cut off automatically.


B. Radio Operation

1. Turn the Volume Dial clockwise to power on the radio and control volume.
2. Select WB or FM or AM with the radio band. Extend the antenna for better signal reception.
3. Turn Tuner Dial to select station. Green tune indicator turns on when the station selected is fully engaged.

-4-

C. Charging Your USB Devices

1. Lift the rubber tab on the side of radio.
2. Insert the supplied cable USB output port and then connect with the adapter connector.
3. Now you can use it to charge mobile phone, PDA, Tablet, MP3 or other USB-enabled devices.

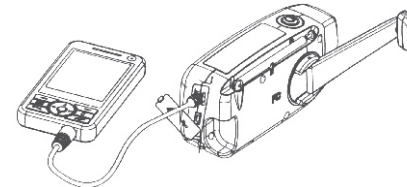

Care and Maintenance

1. Wipe the surface of radio with a soft and damp cloth.
2. Do not clean it with harsh abrasive or any solvents.
3. Although it has a certain water resistant ability, do not submerge in water or use it in rain.
4. When the radio is idle over 60 days, please hand crank or expose it to sunlight for recharging to prolong its lifespan.

Warranty

This Esky Solar Hand Crank Radio has a full 12-month warranty against manufacturing defects starting from the purchase date.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

-5-