



ELECTRIC GRINDER

USER MANUAL


Important Safety Information Inside!
Read all instructions before using.
Use only as directed.

IMPORTANT SAFETY GUIDE

When using electrical appliances, always follow basic safety precautions, including the following:

- Do not submerge the appliance in water or any other liquid, as this may cause personal injury and/or flammable fumes.
- To protect against fire, do not operate the unit near hazardous materials or in extreme temperatures.
- This product is intended for normal domestic household use only. Use the grinder exclusively for its intended purpose.
- For indoor use only. Do not expose this product to rain or other extreme conditions.
- Never force the grinder to tighten or twist, or attempt to speed up the mechanism.
- Do not attempt to disassemble the product by yourself, as this will void the warranty.
- Keep your workspace free from potential hazards while recharging the electric grinder.
- This product is designed for grinding pepper and salt only. Do not use for other purposes.
- Keep the grinder out of the reach of children.

PRODUCT DESCRIPTION

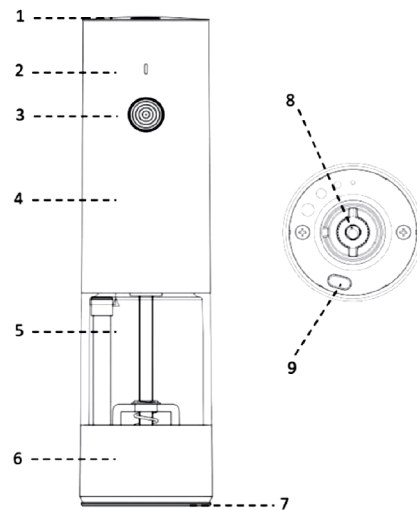

1. Charging Port
2. LED Indicator
3. On/Off Button
4. Upper Body
5. Container

6. Lower Body
7. Cover
8. Adjuster
9. Light

RECHARGING YOUR GRINDER

Before using your grinder for the first time, we recommend charging it for 1 hour. Follow these instructions for recharging:

- Place your grinder on a flat table, ensuring it is firmly in an upright position.
- Plug one end of the USB cable into the charging port on the top of the grinder and the other end into a USB Type A receptacle. Ensure the connections are fully engaged.
- While charging, the white LED on the upper body will light up and blink slowly. When fully charged, the LED will stop blinking.
- If not in use for an extended period, charge the battery to 50%-80% capacity every 3 months.

HOW TO USE


1. To refill, hold the bottom part and twist the top part to the left. Lift the top part when the arrow aligns with the unlock icon.




2.Fill the container with salt or pepper, replace the top portion, and lock it in place.



3.Remove the cover and rotate the adjuster to set the grinding coarseness according to your preference.

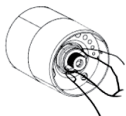

4.Press and hold the button until you obtain the desired amount of ground seasoning. Release the button to stop the grinder.

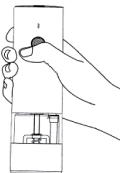

TROUBLESHOOTING

1. Light Functionality and Installation:

CAUTION: If the light at the powder output location of the grinder is not functioning, it might be due to improper installation of the upper and lower parts of the grinder, leading to poor electrical contact for the light. Ensure the triangle icon aligns with the lock icon during installation, and apply extra force to make sure they're fully engaged.

2. Adjusting the Grind:

If the pepper grinder won't adjust to a finer setting, it's possible that spices are blocking the

grinder cores. Invert the grinder and turn it on to clear the cores. While still upside down, adjust to the desired setting. The adjuster on the grinder varies between grind settings. Some models allow multiple circles turn, while others have a set range. The circular marker at the bottom simply indicates the direction for coarseness adjustment.

3. Charging and Starting the Grinder:

If the grinder doesn't start, your first step should be to charge the device. Connect it to a charger and observe the indicator light: it will flash during charging and remain steady once fully charged, which usually takes about an hour.

If you encounter any charging issues, such as the indicator light not turning on:

- 1.Ensure you're using a USB A to USB C cable.
- 2.Test the charger with another device to confirm its functionality.

4. Motor and Grinding Issues:

If the grinder is fully charged but still doesn't operate, separate the upper and lower parts of the grinder and then press the start button. If the motor doesn't spin, there might be an issue with the battery, and you should contact our support team at **service@ktkudy.shop**. If the motor does spin but doesn't grind, inspect the ceramic core for any blockages. Clear any blockages before attempting to use the grinder again, as persistently

pressing the start button when the machine is obstructed might damage the motor.

5. Controlling Dispensing Speed:

If you find that the grinding speed is too fast even at the lowest setting, consider using a "pulse" method. Quickly press and release the start button to control the amount of salt or pepper being dispensed. Remember, our grinder operates when the button is held down and stops working once released. This way, you can effectively control the dispensing speed.

For issues not listed here, don't self-repair as it could void your warranty. For assistance, reach out to us at **service@ktkudy.shop**

PACKAGE CONTENTS

Product: Electric Salt or Pepper Grinder (Single)

- 1.Electric Grinder x1
- 2.USB Type A to USB Type C Charging Cable x1
- 3.User Manual x1
- 4.Cleaning Brush x1

Product: Electric Salt and Pepper Grinder Set (Double)

- 1.Electric Grinder x2
- 2.USB Type A to USB Type C Charging Cable x1
- 3.User Manual x1
- 4.Cleaning Brush x1

SPECIFICATIONS

Product Dimensions	28g Ø48*168mm
	46g Ø48*196mm
	66g Ø55*191mm
Product Weight	28g 345±10g
	46g 365±10g
	66g 375±10g
Battery Type	500mAh Lithium battery
Battery Life	Grind pepper for 20 min when fully charged
Input Voltage/Power	DC 5V 10W
Charging Time	1 hour
Container Capacity	28g Pepper - Small Version
	46g Pepper - Medium Version
	66g Pepper - Large Version
Noise Level	<60 dB