 
 


neza





# S1 Wireless Speaker

   
User's Manual



Bluetooth Speaker / S1

Quick Operation Guide | Schnellstartanleitung | Guide de démarrage rapide  
Guida rapida all'uso | Guía de operación rápida



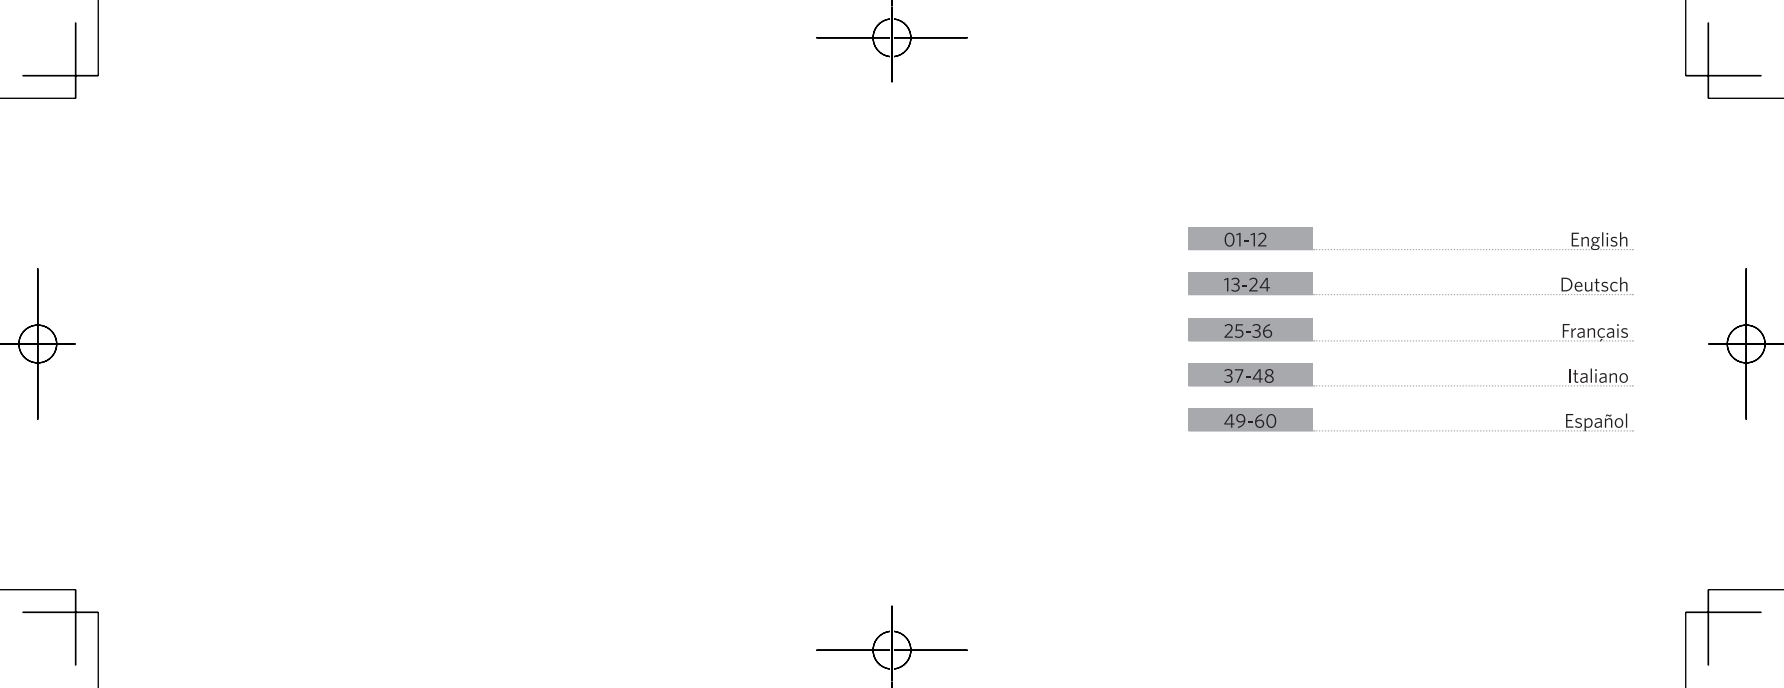

|       |          |
|-------|----------|
| 01-12 | English  |
| 13-24 | Deutsch  |
| 25-36 | Français |
| 37-48 | Italiano |
| 49-60 | Español  |


## Package List
 
|                       |      |
|-----------------------|------|
| Bluetooth Speaker     | 1PCS |
| 3.5mm Audio Cable     | 1PCS |
| 3.5mm FM Antenna      | 1PCS |
| Type-C Charging Cable | 1PCS |
| Sling                 | 1PCS |
| User's Manual         | 1PCS |

01 EN

## outline Picture and Function Description

1. Type C charging port
2. USB in port
3. 3.5mm Aux input
4. Power On/Power off/Play/Pause
5. volume +/Next Song
6. FM mode
7. volume -/Previous Song
8. Light mode
9. Indicator light
10. Type-C Charging Cable
11. 3.5mm Audio Cable
12. 3.5mm FM Antenna

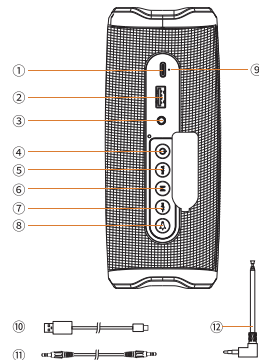


02 EN

## Using Your Speaker
 
### 1. Turn on/off

| Functional status | Key operation                | Voice prompts |
|-------------------|------------------------------|---------------|
| On                | Press and hold for 3 seconds | Power on      |
| Off               | Press and hold for 3 seconds | Power off     |

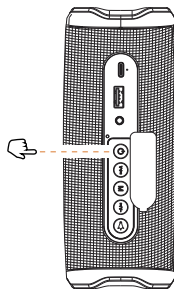


03 EN

### 2. Bluetooth Pairing

 After turning on the speaker, turn on the bluetooth on the mobile phone and search for S1, and make a Bluetooth connection to pair successfully.

Note: When turned on, S1 will automatically connect to the last connected device if available.

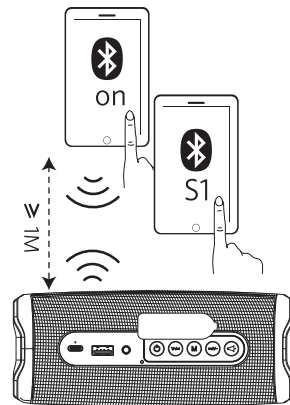


04 EN

### 3.Speaker Charging
 
| Functional status | Indicator light | Voice prompts |
|-------------------|-----------------|---------------|
| Low battery       | Flashing red    | Battery low   |
| Charging          | Steady red      | /             |
| Fully charged     | Red light off   | /             |

Note: To preserve battery lifespan, fully charge at least once every 30 days

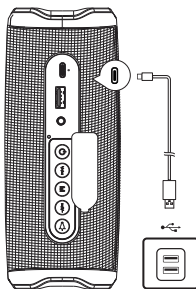


05 EN

### 4.Connect via AUX

 Plug in the 3.5mm audio cable, connect to mobile phones/computers/ tablets and so on, it can be used as external speakers.

Note: To return to Bluetooth mode, remove the AUX cable from your S1 speaker.

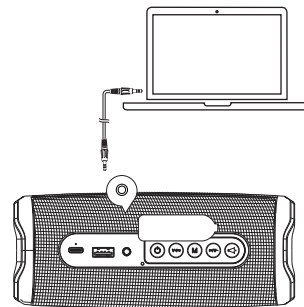


06 EN

## 5.FM Mode

 Plug in the 3.5mm FM antenna in the "AUX", then press the FM Button once to switch to FM radio(Voice prompt "FM mode") and then press the power button to search for channels.


Note: Press the FM Button again to switch the Bluetooth function(Voice prompt "Bluetooth mode")

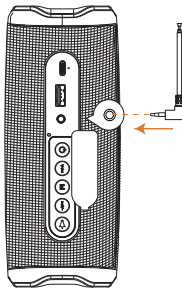

07 EN

## 6.Light Switch Mode

 Press the light button to switch the flashing mode of the magic light. There are 7 light modes in total.

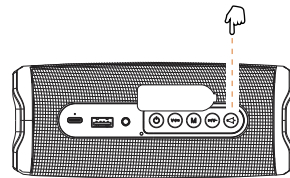

08 EN

## Button Controls

### 1. For Music Control

#### 🎵 Operation Table

|               | Button                                                                            | Key operation  |
|---------------|-----------------------------------------------------------------------------------|----------------|
| Play/Pause    |  | Press          |
| Volume +      |  | Press          |
| Volume -      |  | Press          |
| Next song     |  | Press and hold |
| Previous Song |  | Press and hold |

### 2. For Bluetooth Calling

#### 📞 Operation Table

|                 |                                                                                   |                |
|-----------------|-----------------------------------------------------------------------------------|----------------|
| Answer/End call |  | Press          |
| Reject call     |  | Press and hold |

09 EN

## Technical Specifications

|                                                       |                                   |
|-------------------------------------------------------|-----------------------------------|
| Product Weight:                                       | 460g                              |
| Bluetooth Version:                                    | V5.1                              |
| Play Time (varies by volume level and audio content): | 18H                               |
| Transmission Range:                                   | 100FT                             |
| Frequency Response:                                   | 50Hz-20KHz                        |
| Battery Type:                                         | Lithium-ion polymer(3.7V,4400mAh) |
| Battery Charge Time:                                  | 3.5H                              |
| Bluetooth Transmitter Frequency Range:                | 2.402-2.480 GHz                   |
| SNR:                                                  | ≥60dB                             |
| Bluetooth Transmitter Power:                          | 0-4dBm                            |
| Size:                                                 | 172*67*67mm                       |

10 EN

|                    |        |
|--------------------|--------|
| Charging port:     | Type-C |
| Impedance:         | 4Ω     |
| Output Power:      | 2*10W  |
| Adapter:           | 5V/2A  |
| Waterproof Rating: | IPX7   |

## Safety Information

- Do not use corrosive cleaners to clean this product.
- Do not heat up or place this product near a source of fire.
- Do not expose this product to direct sunlight for an extended period of time.
- Do not dispose of this product in a fire to avoid explosions.
- Do not attempt to dismantle this product for any modifications.

## Activation & Warranty

Please follow up on the user's manual step-by-step and we will always stand by if you have any problems while playing S1 speaker. If you have any other questions, please contact us.

Activate Permanent After-sales Service: Permanent replacement of damaged, defective, not upgraded, or missing items (no need to return the original) Please activate via email below within 15 days.

Our Customer Service Email : [nezaseller@outlook.com](mailto:nezaseller@outlook.com)