



COZILIFE

SILICONE EGG POACHER

Making Your House a Home



INSTRUCTIONS

Notifications before Use

Do not Heat The Poacher Directly with Fire.

Flip inside Out and Wash With Soap under Running Water.

Recommended Using Cooking Spray On the Poacher before

Put Eggs in.

For Microwave Oven Cooking

1. Put Egg in The Poacher.
2. Poke Egg with Toothpick or Other Tools Several Times.
3. Heat Under "Low" Setting for 3 Minutes or "High" Settings for 30-40 Seconds.
4. Wait for One Minute and Use A Spoon to Take Out The Egg.

For Stovetop Cooking

1. Using Cooking Spray On the Poacher before Put Eggs in.
2. Put Egg in The Poacher.
3. Put Poacher into Pan with 1-inch-deep Water.
4. Heat with **LID** on For 5-10 Minutes under Mid or Low Heat.
5. Take out The Poacher. Wait for One Minute and Use a Spoon to Take out The Egg.
6. If Cooking Multiple Eggs at One Time, Please Use a 10" Pan or Larger.




COZILIFE

SILICONE EGG POACHER

Making Your House a Home

PRODUCT FEATURES


- FDA approved, BPA free, food grade silicone.
- Eco-friendly and non-toxic.
- Temperature tolerance: -40F to 405F (0-230C) .
- Set of 4, in different colors.
- An easy-to-pick hole is on every side of the product.
- Stackable and easy to store.
- Can be used as cake, dessert, and jelly mold.
- Can also be used to melt chocolate, heat pasta source, and steam vegetables.

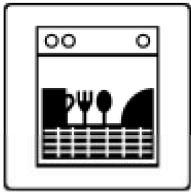

Dishwasher Safe



Oven

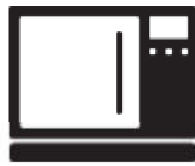

Microwave



Stovetop

Enjoying an Egg-cellent Day!

