


User Manual of Portable Blender



Please keep this User Manual for future use
(This is very important)

Product Structure

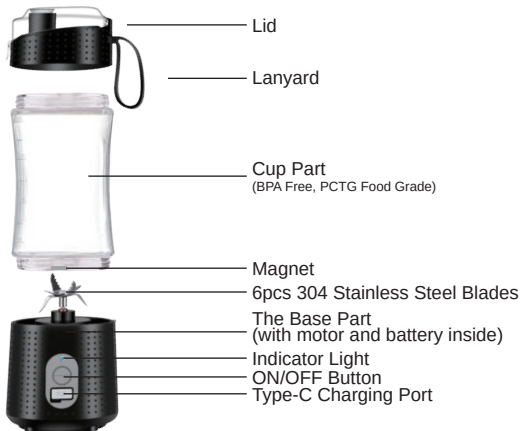

Packing List



1X Portable Blender

1X Type-C USB Charging Cable

1X Cleaning Brush

1X Recipe

Instructions

- 1, For users' safety, the blender will not work if the cup part is not assembled with the base correctly or firmly.
- 2, DOUBLE-CLICK the ON/OFF button to turn on the blender and then SINGLE-CLICK to turn it off.
- 3, The blender will stop working about 35s later after fruits are thoroughly blended.
- 4, Indicator Light:
 - 4-1, The indicator light will turn blue when it is working or after it is fully charged (About 3-5 hours for a full charge);
 - 4-2, The indicator light will turn red when it is in low battery;
 - 4-3, DOUBLE-CLICK the ON/OFF button, the indicator light will flash with red and blue light when the cup part is not assembled correctly with the base part.
- 5, The blender is USB rechargeable with Type-c cable and charging port, please do not let water get into the charging port.

How to Assemble



1. Firstly, insert the cup part with the magnet into the base part



2. Rotate the cup part **CLOCKWISE** until the red arrow on the cup part is aligned to the ON/OFF button



3. Please make sure the red arrow is aligned to the base part



4. **DOUBLE-CLICK** the ON/OFF button to turn the blender on.



✗
Wrong Assembly

✓
Correct Assembly



How to Use



1.Charging the blender for 3-5 hours firstly



2.Cut fruit into small pieces, each piece less than 1 inch



3.Add fruit and water or milk, fill 1/3 bottle. Please do not make the cup full to avoid the blade stuck.



4.Rotate the cup until the red arrow is vertical to the power button.



5.Turn the up side down firstly, then **DOUBLE-CLICK** the button to start the blade.



6.After the blade is rotating, flip the blender and shake it back and forth while



7.35-40s later, the fruit will be blended thoroughly



8.Enjoy the fresh and delicious juice

Malfunction analysis and troubleshooting

Malfunction	Analysis	Troubleshooting
Indicator light is off, unable to start	Battery low	Charging 3-5 hours
Indicator light flashes with red and blue color, unable to start	The cup part is not assembled with the base correctly or tightly	Re-assemble the cup part with the base
Stop working, indicator flashes	No fruits at cup body	Add the fruits at cup body
Stop working, Indicator light flashes with red and blue color	Fruits are too thick and the blade is stuck	Cut fruits into small pieces, less than 1 inch
Water leaking	The sealing ring is not installed properly. The cup part is not assembled with the base correctly or tightly	Install the sealing ring Re-assemble the cup part with the base

Warranty

All of our products are 6-month warranty for quality-related issues.

Please feel free to contact us via Amazon e-mail system if you are unhappy with your order, we will do our best to reply you within 24 hours.

