


Setting the Combination Lock



Your cash box has been set with a default security code of (0-0-0) from the factory. You may keep this code, however, for added security, we recommend that you re-set the combination using 3-digits of your choosing by using the following instructions:

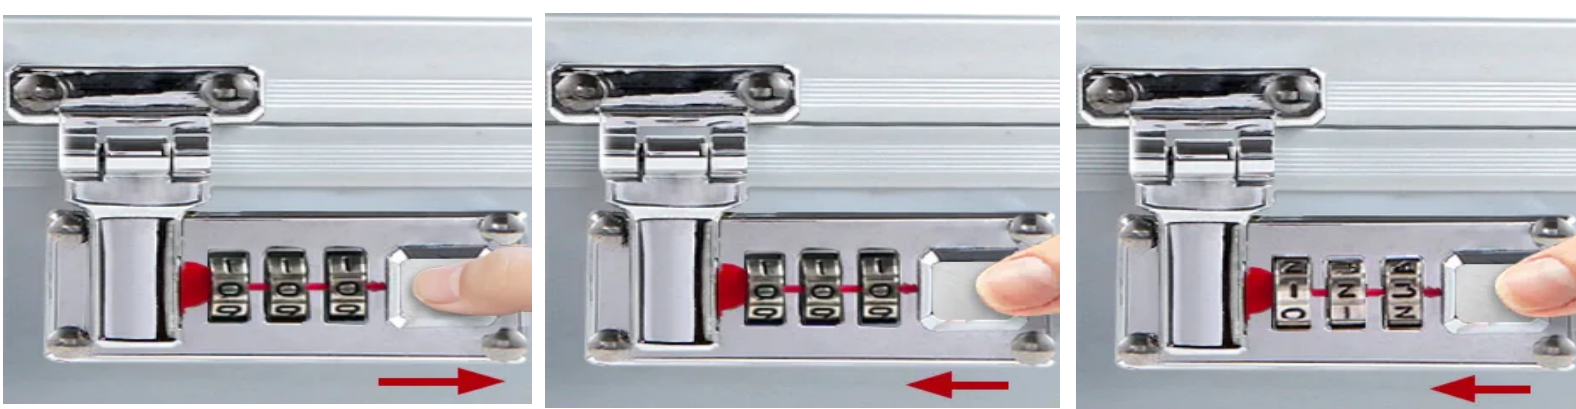

First remove the red plastic protective insert from the combination lock.

Step 1: Open the box

All 3 dials should be set to '000'. Slide the square button away from the number dials and release the latch to open the box;

Step 2: Hold the button

Leave the latch open, now slide the square button towards the dials, and hold this position while holding the button;

Step 3: Reset the code

Roll each number dial down until you reach your desired 3 digital code. Make sure the digits are centered across the middle of lock assembly.

Note: Make a note of your personal combination and keep it at a safe place! You will only be able to reset the combination when the lock is open.