




Please read this instruction carefully before installation. If you have any questions or concerns, please feel free to contact us via e-mail: customerservice@nilight.com

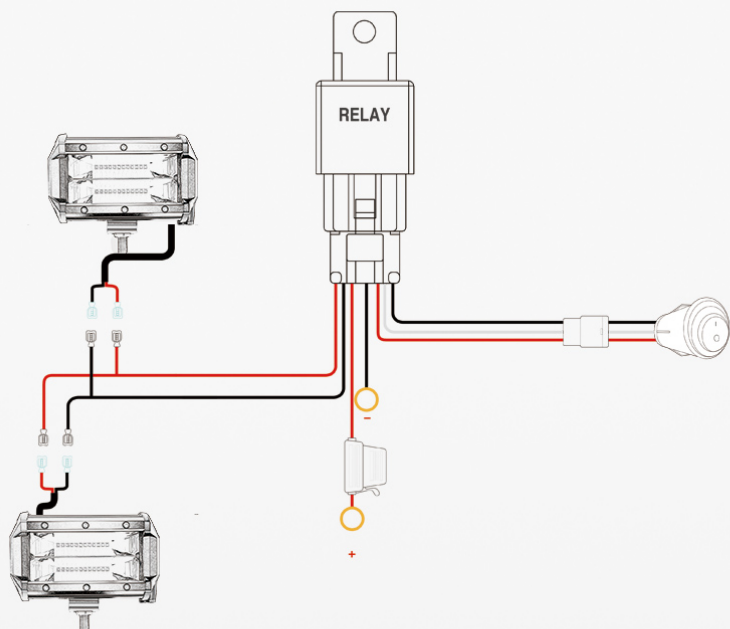

Installation:

1. Testing the light bar to the power (12V DC) directly, Red line contact to positive of power, black line contact to power negative.
2. Splice light bar wires to the blue male terminals, and then connect to the wiring harness female terminals (black to black, red to red).
3. Connect the red wire (with fuse) to battery positive terminal, while the black wire from relay to battery negative terminal.
4. Flip the switch On/Off to test the LED light bar.

FAQ

DOES IT FIT MY VEHICLE?

Our led light bars fit most vehicles(Off-road vehicle, Special vehicle, Engineering vehicles). But you need to measure the place where you want to install the light bar so that you can choose the correct size.

I FOUND CONDENSATION INSIDE THE LIGHT BAR. WHAT SHOULD I DO?

Firstly, remove the breather or 2 side lids
Secondly, turn on the light bar
Thirdly, after 1-2 hours lighting, the vapour will be out.

HOW TO CLAIM THE WARRANTY?

Step 1. Contacting Nilight Customer Service via E-mail (customerservice@nilight.com) for the item's issue.

Step 2. Please provide the following information:

- a. screenshot of your order information
- b. pictures of the defective item

Step 3. After the inspection and confirmation of the issue, we will provide you with a replacement free of charge.