

- CM-100
- 120V,60HZ,1000W

# SINGLE SERVE COFFEE BREWER INSTRUCTION MANUAL

**Thank you for choosing our Product.  
Before use, please read the user manual  
carefully and keep it for future reference**

**Service Email:kitchenbro\_support@163.com**



# IMPORTANT SAFEGUARDS:

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, or injury to persons, including the following:

1. **READ ALL INSTRUCTIONS.**
2. **Do not touch hot surfaces. Use handles or knobs.**
3. **To protect against fire, electrical shock, or injury to persons DO NOT immerse cord, plug or appliance in water or other liquid.**
4. **Close supervision is necessary when any appliance is used by or near children.**
5. **Unplug from outlet when not in use and before cleaning. Allow to cool before installing, removing parts or before cleaning the appliance..**
6. **Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment..**
7. **The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons..**
8. **Do not use outdoors.**
9. **Do not let cord hang over edge of table or counter, or touch hot surfaces.**
10. **Do not place on or near a hot gas or electric burner, or in a heated oven.**
11. **Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any**

control to "off", then remove plug from wall outlet.

12. Do not use appliance for other than intended use.
13. When opening the lid of the coffee machine, press the lid button to the side of the removable water tank to open the lid. Press down firmly when closing the top cover. If the top cover is not closed properly, the indicator light keeps flashing, and the coffee machine cannot work properly.
14. Scalding may occur if the lid is removed during the brewing cycles.
15. Only use capsules intended for this appliance. If the capsule does not fit, do not force the capsule into the appliance.

## NOTES:

1. This appliance is for HOUSEHOLD USE ONLY. It should be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.
2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
3. A short power supply cord is provided to our customers to avoid entangling in or tripping over a longer cord.
4. Long detachable power-supply cords or extension cords can be used if you pay attention to the following situations:

- **The electrical rating of detachable cords or extension cords should be the same as the electrical rating of the appliance.**
- **The longer cord should be arranged to where is safe for children. It can not drape over the countertop or tabletop where children can pull on or trip over unintentionally.**
- 5. Never pull or yank on the cord or the appliance.**
- 6. To insert the plug, grasp it firmly and guide it into outlet.**
- 7. To disconnect the appliance, grasp plug and remove it from the outlet. Do not pull on the line cord.**
- 8. Before use, please check the line cord for cuts or abrasion marks careful every time. If any damage is found, the appliance should be repaired and the line cord replaced.**
- 9. Never wrap the cord tightly around the appliance, as this behavior could place undo stress on the cord where it enters the appliance and cause it to fray and break.**
- 10. DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**
- 11. During the first few minutes of initial use, some smoke or slight odor will occur. This is a normal phenomena and will quickly disappear. It will not recur after appliance has been used for a few more times.**
- 12. To reduce the risk of fire or electric shock, do not remove the bottom cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.**
- 13. There are two sharp needles that puncture the K-Cup® capsule. One is located in the top cover and the other is in the bottom of the K-Cup® Capsule Holder itself. To avoid the risk of injury, do not put your fingers in or near the K-Cup® Capsule Assembly Housing.**
- 14. The water is extremely hot in the K-Cup® Capsule Holder during the brewing process. To avoid the**

risk of injury, do not press the Brew Chamber Release Button or open the top cover during the brewing process.

15. There are some Precautions for the Unpacking of the appliance as followings:

- Carefully unpack the brewer and all parts. Remove any tape, labels or packaging materials.
- Wash Tank Filter, Drip Tray, K-Cup® Capsule Holder and Brew Basket with warm, soapy water. Rinse well and dry thoroughly.
- Wipe exterior surfaces of the product with a soft, moist cloth to remove dust particles collected during packing and handling. **NEVER IMMERSER THE BREWER, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**
- Place the brewer on a solid, level, heat-resistant surface.

## DESIGNS:

- ① Removable reservoir
- ② Open the top cover button
- ③ Capsule Puncturing Mechanism
- ④ Removable Filter Basket
- ⑤ One-Touch Controls
- ⑥ K-CUP Capsule Holder
- ⑦ Decorative plates
- ⑧ Water tray



# HOW TO USE:

## 1. Clean the system:

Before the first use, it is recommended to run a 14 Oz cycle of water through the Coffee Brewer.

- Fill the Water Tank to the MAX level and close the lid.
- Place the Brew Basket in place. **DO NOT USE COFFEE GROUNDS.**
- Close the top cover on the Coffee Brewer.
- Place a large cup on the Drip Tray and beneath the Brew Spout.
- Plug the Coffee Brewer into an electrical outlet. Ideally, the Coffee Brewer should be perated on its own circuit, separate from other appliances
- Push the Ground Coffee Brew Button.
- The Coffee Brewer will heat and then dispense the water.
- After a preset time, the Coffee Brewer will shut off and is now ready for use.

## 2. BREWING COFFEE USING A K-Cup® CAPSULE:

- Place the Coffee Brewer on a dry, level and heat-resistant surface.
- Fill the Water Tank to the desired level from 6oz to 8 oz according to the markings located on the Water Tank Filter. The recommended amount of water to brew a K-Cup® capsule is 8 oz. **DO NOT** place any liquid other than water in the Water Tank.
- Press the Brew Chamber Release Button on the front of the Coffee Brewer to release the top cover and K-Cup® Capsule Puncturing Mechanism
- Insert a K-Cup® capsule into the Capsule Holder.

**NOTE:** Never remove or puncture the foil top of the K-Cup® capsule before inserting into the Coffee Brewer.

- Close the top cover of the Coffee Brewer making sure it is completely closed. The K-Cup® capsule will be punctured on the top and bottom allowing for the ideal flow of water during the brewing cycle.

**Note:** If the top cover is not closed properly, the coffee machine will not start properly.

- Place a mug on the Drip Tray and under the Brew Spout.

**TIP:** Be sure to keep the mug in place at the end of the brew cycle to catch any excess drips. The end of the brew cycle is indicated when the function button is no longer lighting.

- Push the Capsule Brew Button. The brew cycle will now begin and the Capsule Button will lighting throughout the brewing cycle.

**TIP:** To stop the brewing cycle at any time, press the any one button.

- When the brew cycle is complete, the long bright button will stop and the Coffee Brewer will shut off.
- Do not leave used coffee capsules in the Brewer. Wait for the Brewer to cool before removing used capsules as they remain hot following the brew cycle. Press the Release Button on the front of the Brewer, carefully remove the used capsule and discard. Close the top cover.

### **3. BREWING COFFEE USING COFFEE GROUNDS:**

- Place the Coffee Brewer on a dry, level and heat-resistant surface.
- Fill the Water Tank to the desired level from 6 oz to 14 oz according to the markings located on the Water Tank . DO NOT place any liquid other than water in the Water Tank.

- Press the Brew Chamber Release Button on the front of the Coffee Brewer to release the top cover.
- Place coffee grounds into the Brew Basket. Never fill above the two-thirds on the Brew Basket.
- Close the top cover of the Coffee Brewer making sure it is completely closed.
- Place a mug on the Drip Tray and under the Brew Spout.

**TIP:** Be sure to keep the mug in place at the end of the brew cycle to catch any excess drips. The end of the brew cycle is indicated when the function button is no longer lighting.

- Push the Ground Coffee Brew Button. The brew cycle will now begin and the Ground Coffee Brew Button will lighting throughout the brewing cycle.

**TIP:** To stop the brewing cycle at any time, press the any one button.

- When the brew cycle is complete, the long lighting button will stop and the Coffee Brewer will shut off.
- Do not leave used coffee grounds in the Brewer. Wait for the Brewer to cool before removing used coffee grounds as they remain hot following the brew cycle. Press the Release Button on the front of the Brewer, carefully remove the coffee grounds and discard. Close the top cover.

## MAINTENANCE INSTRUCTIONS:

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified

service personnel if servicing is needed. The Coffee Maker should be cleaned on a regular basis to prolong the life of the machine and to guarantee optimal brewing results.

#### 1. Cleaning:

- Turn off the Brewer and unplug from the wall outlet.
- On a regular basis, check the Drip Tray for excess water or coffee. Empty the Drip Tray and wipe it clean with a damp cloth. Use extra care when removing or emptying the Drip Tray, in order to prevent spilling any excess liquids from the Drip Tray.
- DO NOT leave used coffee capsules in the Capsule Holder.
- Wipe down the outside surfaces of the Brewer with a damp cloth and dry thoroughly. NEVER use harsh chemicals or abrasive cleaning pads. NEVER immerse the Brewer in water or any other liquid and NEVER place the appliance under running water.
- Clean the Water Tank Filter, Drip Tray, Drip Tray Cover, K-Cup® Capsule Holder and Brew Basket with warm, soapy water. Do not use harsh chemicals or abrasive cleaners. Dry thoroughly prior to use. The Drip Tray, Drip Tray Cover, K-Cup® Capsule Holder and Brew Basket can be placed onto the top shelf of a dishwasher. Use low temperature cycles if cleaning the parts in the dishwasher.

#### 2. Descaling:

- It is advised to descale the Brewer on a regular basis. Frequency of descaling the Brewer depends on amount of use and your local water conditions. As a general time frame, the Brewer should be descaled every three months. Specific descaling products for coffee makers are available in stores and online.

Follow the specific instructions for the descaling product on the package from the descaling product

## manufacturer

- **Make sure the Brewer is turned Off.**
- **Fill the Water Tank with undiluted white vinegar or if using a descaling product fill according to the instructions on the package of the descaling product.**
- **Place a large mug on the Drip Tray and beneath the Brew Spout.**
- **Make sure there is not a coffee capsule in the Capsule Holder and close the top cover.**
- **To start the clean cycle, press both the Capsule Brew Button and the Ground Coffee Brew Button at the same time. They are lighting. The coffee machine will pump water and stop when the water tank is empty. the Coffee Brewer will automatically shut off.**
- **After allowing to site, run another brew cycle without adding a coffee capsule. Empty the dispensed liquid that has accumulated in the mug. Use extreme caution as contents may be hot.**
- **Fill the Water Tank with 8 ounces of distilled or bottled water and run a full brew cycle.**
- **Run three additional brew cycles using distilled or bottled water, each time without a coffee capsule. This will clean the Brewer and get rid of any residual taste from the vinegar or descaler.**
- **The Brewer is now ready for regular use again.**

### 3. Storing:

- **Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. Never wrap cord tightly around the appliance; the line cord should be inserted into the cord storage on back of coffee maker.**

- **ALWAYS** store the Brewer in an upright position, as a small amount of water may remain in the boiler.

## CONTACTS:

If you have any problems about this product, please do not hesitate to contact us via going to [www.amazon.com](http://www.amazon.com)>Your Account>Your Orders>Find your order and click "Contact seller", then we will be very glad to help you!

Tip: This is a fast heating coffee maker, and there may be some noise like sizzle at the beginning and end of brewing. This is normal and safe to use, please don't worry!

# **WARNING:**

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THIS COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY**