

How to install the USB ANT STICK driver

For Windows

Driver download link: (By ANT+ official)

http://www.thisisant.com/assets/resources/Software%20Tools/ant_usb2_drivers.zip


Step 1

After plugging in the USB receiver, the system will pop up a prompt.




Step 2

Or you can find it on the device & printer page.

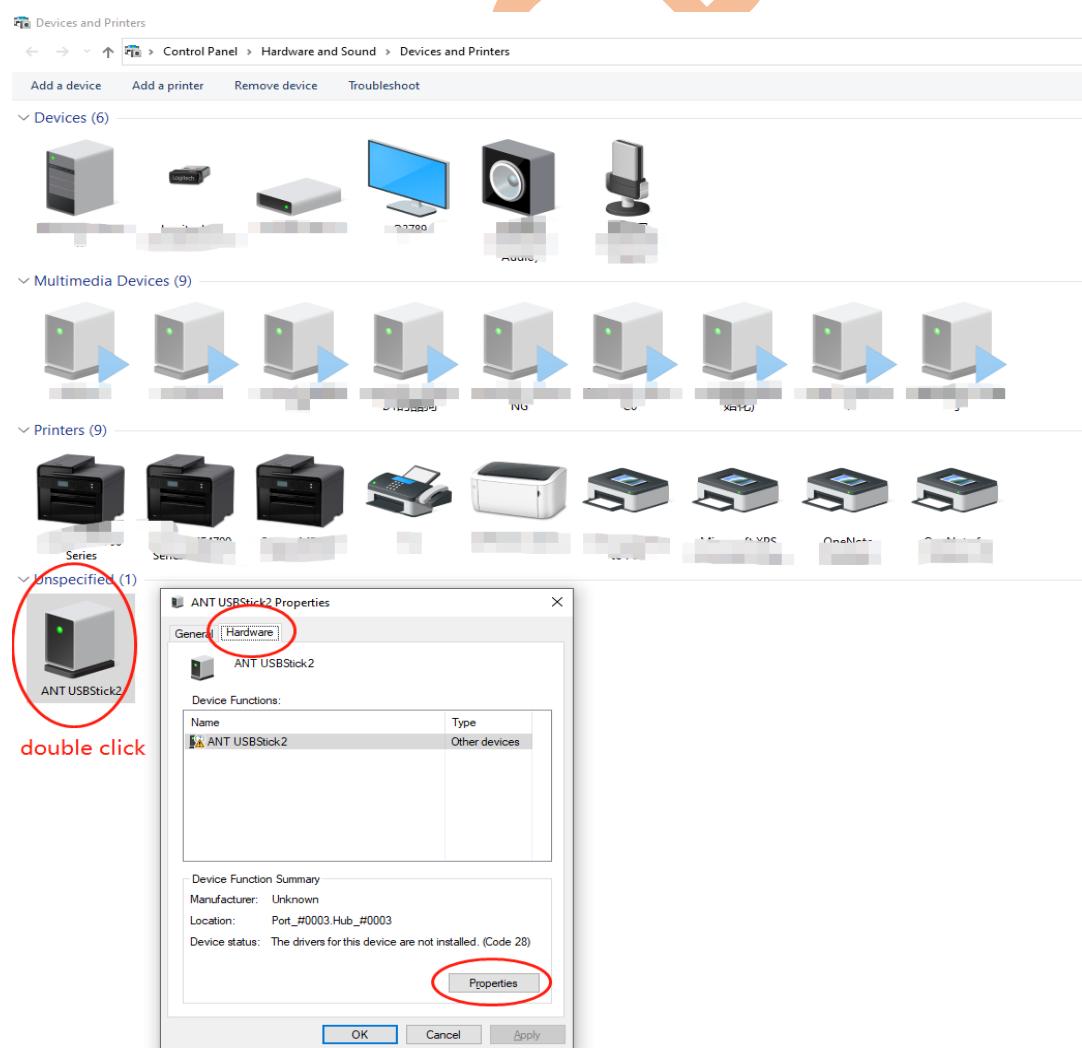


Step 3

In the "properties" option, select "Change setting".

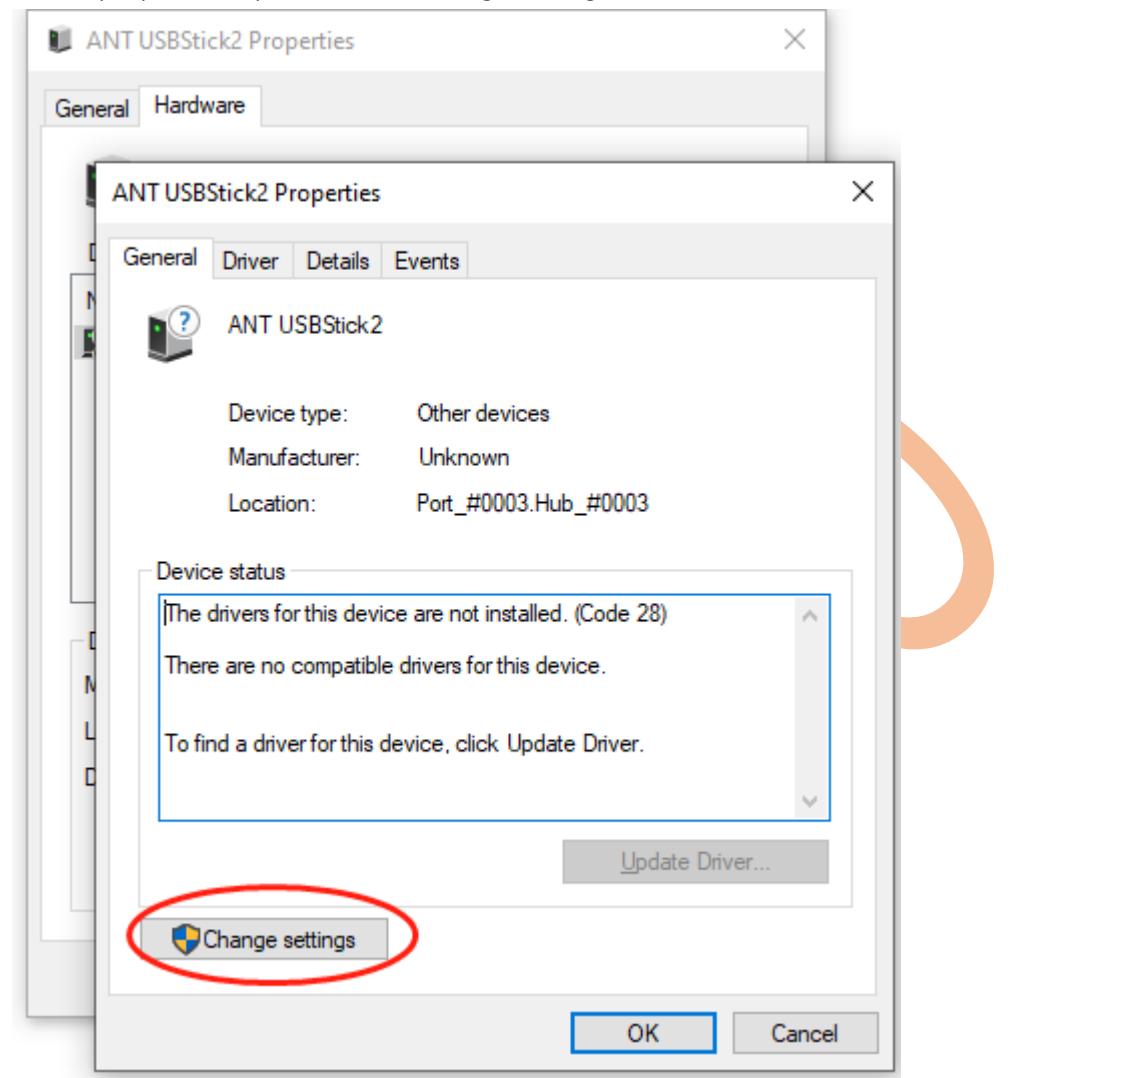

Step 4

Select "Update Driver"——"Browse my computer for drivers"

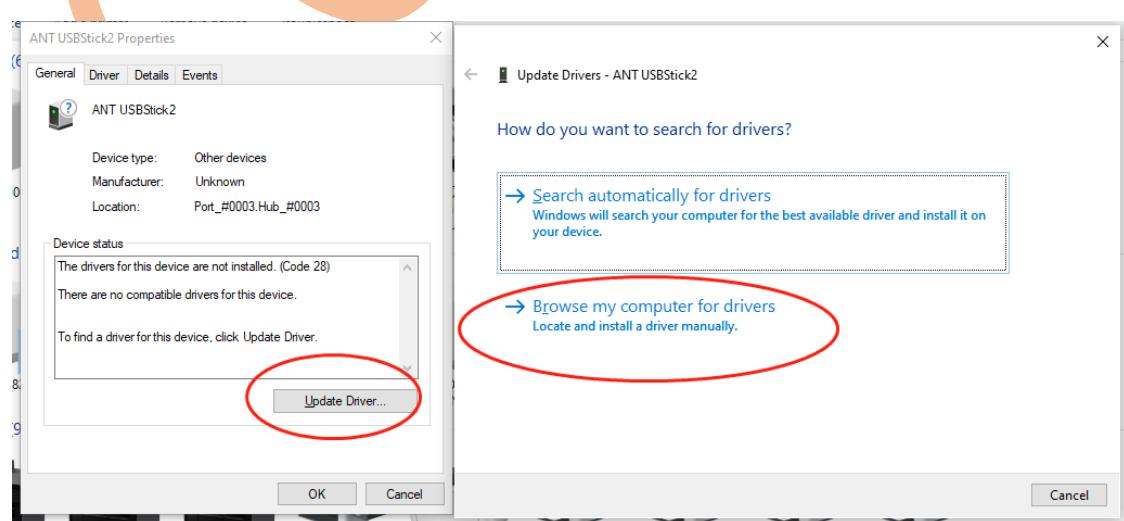


Step 5


Unzip the compressed file

| Name | Date modified | Type | Size |
|----------------------------------|--------------------|------------------|--------|
| ant_usb2_drivers for windows | 11/23/2021 3:52 PM | File folder | |
| ant_usb2_drivers for windows.zip | 6/7/2021 5:09 PM | WinRAR ZIP 压缩... | 276 KB |

Select the corresponding "ant_usb2_drivers for windows" folder, click "Next".

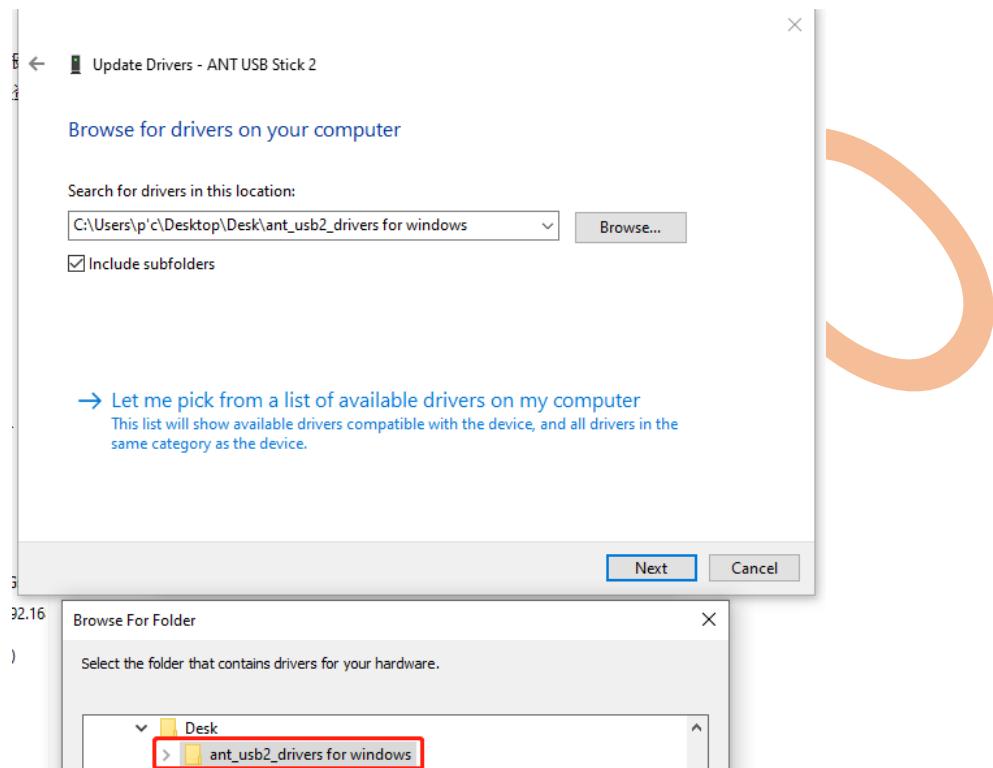

When the installation is complete, you have successfully installed the USB ANT STICK driver.

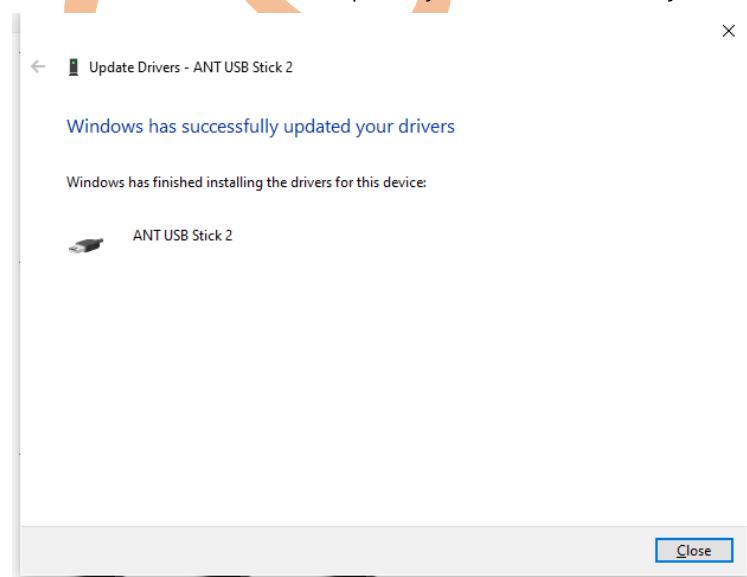

For Mac


Click on the Apple icon.

Hold down the Option key.

Click System Information, then release the Option key.

Click on USB in the left column.

The ANT stick will appear in the upper right box as ANT USBStick, ANT USBStick2, Dynastream ANT2USB, or ANT USB-m Stick.

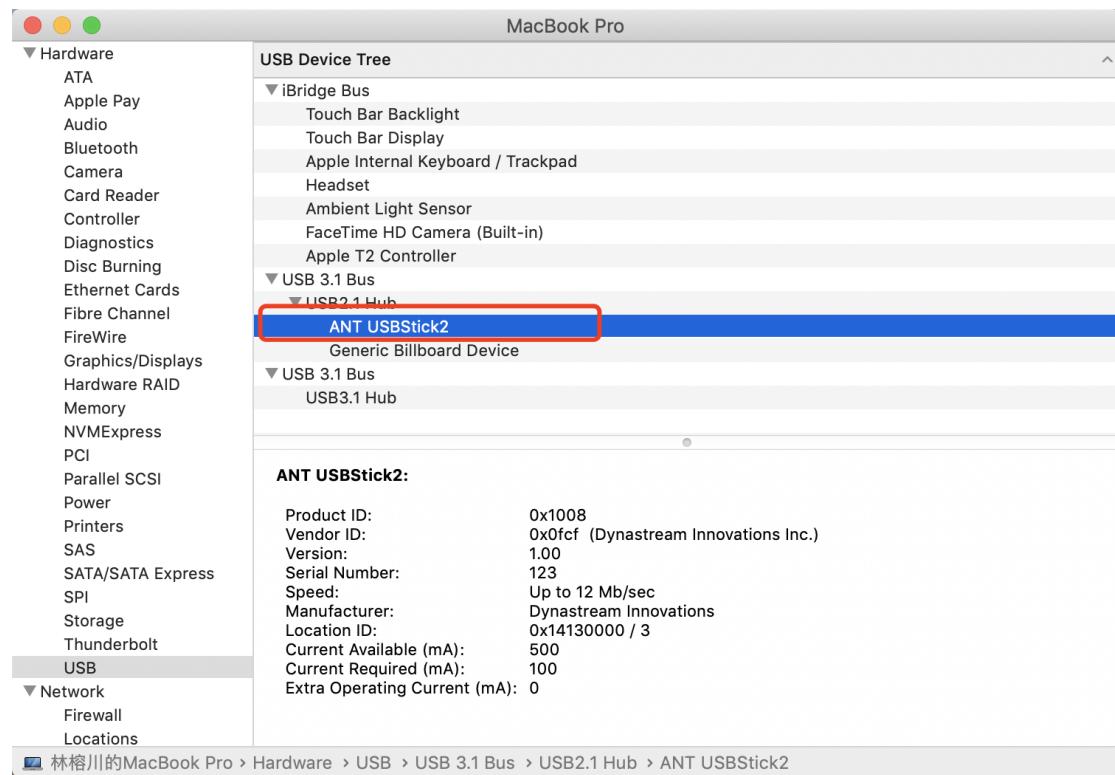

If the ANT stick is displayed in these locations, the computer recognizes that the device is connected.

