

# INSTRUCTION MANUAL


centrifuge

# Mega

Thank you for your purchase. This manual contains all the operating and safety instructions. Please read carefully.

## WARNING!

- Children are prohibited from using this product. Adults must supervise if children are present, and not leave the machine while running or plugged in.
- Individual who suffer from reduced physical or mental capacities are prohibited from using the machine.
- Although this product is equipped with a safety system, never place your hands inside the basket until it is completely stopped and the timer is in the off position.
- The Laundry Alternative is not liable for events if users do not use properly, according to the instructions.
- Before turning on the spin dryer, verify if it is the same voltage as the outlet. Also verify if the electrical installation (wire, outlet, and breaker switch) in the residence is adequate for the product. In case of any doubts, get in touch with an electrician.
- In case of a power brownout or voltage variation in your residence, immediately turn off the spin dryer.
- Leave the timer in the off position and unplug when not in operation.
- Do not use electrical extensions or adaptors for connecting the spin dryer to the outlet, as this can cause an overload in the electrical installation in your residence.
- Do not operate the product with bare feet, just as when operating any other electrical appliance, in order to avoid electrical shock.
- Only load the recommended amount of clothing as indicated in this manual.
- The product was designed for clothing, not shoes, sneakers, stuffed animals, foods, objects that retain liquid, and others.
- Never operate in a hanging position. This can cause accidents and damage the product.
- The Mega Spin Dryer was designed exclusively for residential, non-commercial use. The warranty is void if used commercially. It is mandatory to use the plastic safety cover (Item 2 – operating instructions) during the spin drying process, to prevent potential accidents.

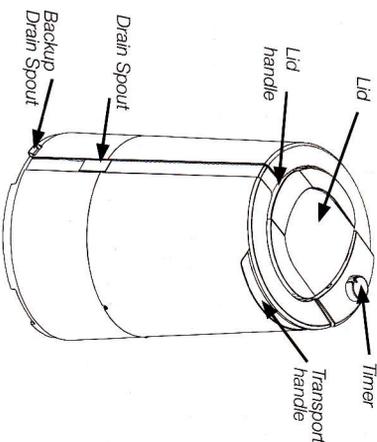

## SETUP

Setup is easy, no specialized technical knowledge is necessary. Please follow the instructions contained in this manual.

- During setup, the following precautions must be taken:
- 1- Verify if the voltage and the electrical network are adequate for operating the product.
  - 2- This is a 127V, 60Hz appliance and is safe to use with 110V or 120V, 60 Hz, outlets.
  - 3- Do not use adaptors, extensions, or improvised connections between the product and the outlet, as this can cause a short circuit or fire.
  - 4- Do not place it on a rug or surfaces which impede air circulation, to avoid overheating of the motor.
  - 5- Select a level floor location, so that it is perfectly level on its three anti-slip feet.
  - 6- Use in a well-ventilated and covered location, far away from sources of heat and rain.
  - 7- Place a receptacle (basin or small bucket) below the water discharge nozzle.

## OPERATING & MAINTENANCE

- 1- Sort the clothes by fabric type and color. Clothing that releases dye must be dried separately.
- 2- After unplugging the spin dryer from the outlet, open the lid. After opening load the cloths evenly, gently pushing the clothes down by hand. Always place heavier items below lighter ones, this will reduce vibration when the motor starts operating.
- 3- The clothes must never be loaded higher than the top of the spin basket. Avoid overloading small pieces of clothing at the top, as they can get stuck between the basket and the cabinet (image 1).

Dobsonwood  
Good X 4/12/110