

User Manual of Product 1:

New And Improved Baby Brezza Formula Pro Advanced Formula Dispenser Machine - Automatically Mix A Warm Formula Bottle Instantly - Easily Make Bottle With Automatic Powder Blending

User Manual of Product 2:

Baby Brezza Baby Bottle Sterilizer and Dryer Advanced - Electric Steam Sterilization Machine - Universal Sterilizing for All Bottles: Plastic + Glass + Pacifiers + Breast Pump Parts - HEPA Filtration

Nice job reading the instruction manual cover-to-cover!

Here are a few extra tips to keep you & your Formula Pro® Advanced happy.



Push the drip tray **firmly** against the base to make sure it fits securely. Trust us, you definitely don't want it to fall off and spill the entire bottle of formula you just made.



The stirring wheel snaps firmly to the axle. It's OK to give it a strong pull to remove it. Don't worry, you won't break it.



Keep your Formula Pro® Advanced sparkling clean!

babybrezza®

formula pro®
advanced

Instructions

for set-up, use and cleaning



babybrezza® Customer Service

If you are experiencing problems with your Baby Brezza Formula Pro® Advanced, please call Baby Brezza Customer Service at 1-888-396-6552 or email customerservice@babybrezza.com before returning the product to the store you purchased it at so that we can offer you our best service customized to your particular situation.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in the United States & Canada. Buying through an unauthorized reseller or using this product outside of the United States and Canada automatically voids this warranty.

This warranty is available to consumers only. You are a consumer if you own a Baby Brezza Formula Pro® Advanced that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza Formula Pro® Advanced will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza Formula Pro® Advanced should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at:
1-888-396-6552, customerservice@babybrezza.com

or write to:

Baby Brezza, 250 Passaic Street, Newark, NJ 07104 Attn: Customer Service.

This product may be covered under one or more of the following including U.S. Patent No. 8,584,901, Canada Patent No. 2,842,603, China Patent No. CN103874441, Australia Patent No. 2011374309, Spain Patent No. ES2473790B2 and pending patent application(s) in the U.S. and other countries.

babybrezza.com

© 2019 Baby Brezza Enterprises LLC

Please read fully to ensure your Formula Pro® Advanced works properly every time.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces.
3. To protect against electric shock and injury to persons, do not immerse cord, plug, or appliance in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Turn off and unplug the appliance from the outlet when not in use, before assembling or disassembling parts and before cleaning.
To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or injury.
8. Use on level surface and be sure there is no debris under the unit and the rubber wheels are touching the surface.
9. Household use only. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. Do not attempt to use the machine without water in the water tank.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. A short power-supply cord is provided to reduce risks of becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If using the machine with an extension cord, make sure the cord is the proper electrical rating for the machine. The extension cord should be arranged so that it does not drape over a counter top or tabletop, where it can be pulled on by children or tripped over unintentionally.
16. Before serving make sure formula mixture is at safe temperature for baby.
17. Avoid contact with moving parts. Never remove powder container, powder container lid, funnel or water tank while machine is in operation.
18. Do not disassemble or open base of machine.

⚠ WARNING:


- Set-up & cleaning is critical to the function of your Formula Pro® Advanced. Please follow all instructions properly.
- Always use distilled or boiled water cooled to room temperature.
- Never pour boiling/hot water in water tank.
- Unboiled tap water and/or unsterilized baby bottles can potentially lead to adverse effects for the health of your baby. Use purified water suitable for infant formula preparation.
- Only prepare one bottle at a time, feed immediately & follow all instructions carefully.
- Do not keep leftover formula mix. If your child was born premature, with low birth-weight or is immune deficient, please consult your pediatrician before using this machine.

TECHNICAL DATA
Supply Voltage: 120V ~ 60Hz

Model: FRP0046
Current: 2.5A

Heater Power: 200W
Motor Power: 20W

Save these instructions

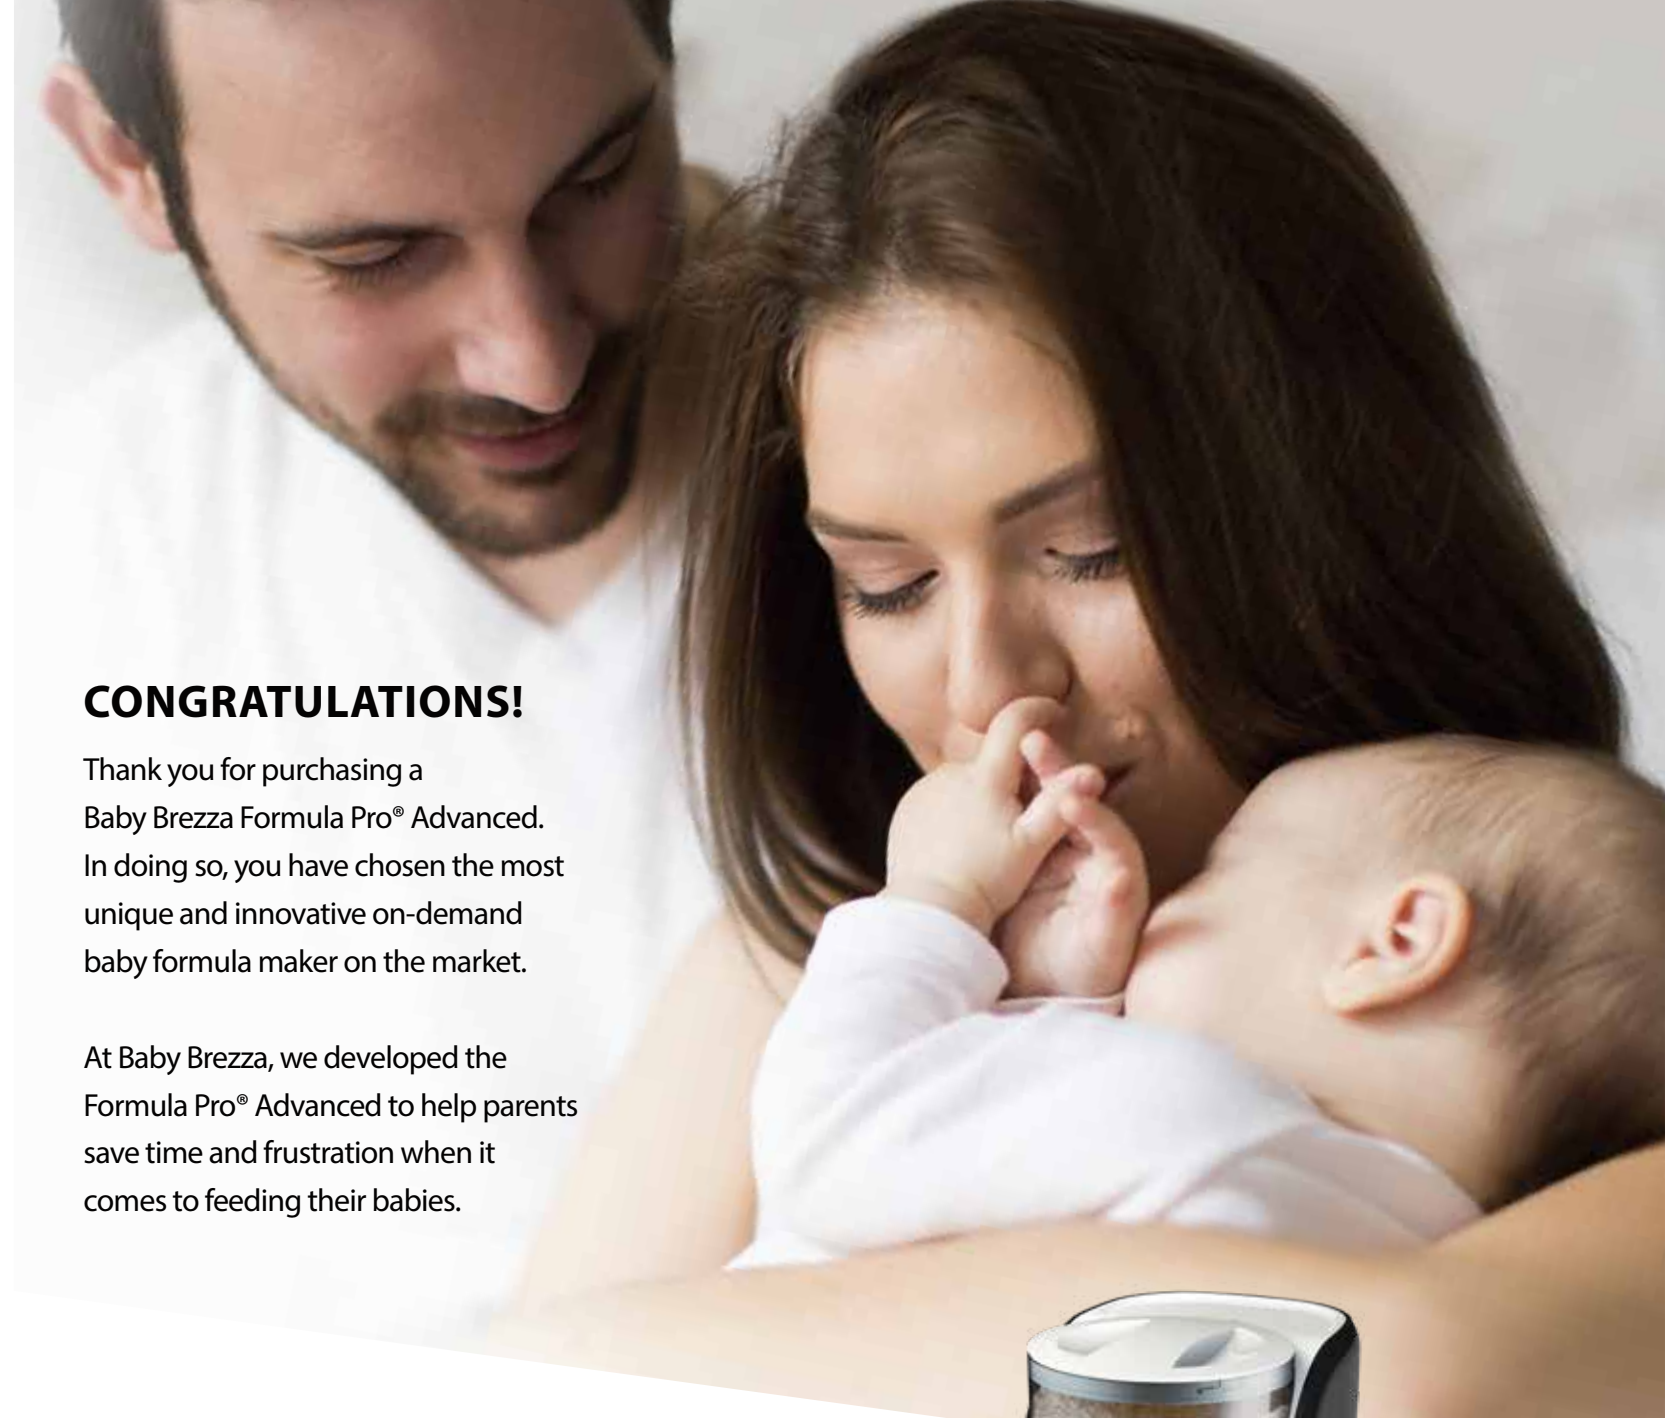

CONGRATULATIONS!

Thank you for purchasing a Baby Brezza Formula Pro® Advanced. In doing so, you have chosen the most unique and innovative on-demand baby formula maker on the market.

At Baby Brezza, we developed the Formula Pro® Advanced to help parents save time and frustration when it comes to feeding their babies.

Please read & follow all instructions carefully to get the most out of your Formula Pro Advanced®



Attention: Don't take anything apart yet.
Follow these steps before doing anything else.

- Place the Formula Pro® Advanced on the counter or other level surface and turn it around so the back is facing you.
- Remove the water tank from the back of the machine, wash it with warm soapy water and rinse thoroughly, then dry.
- Fill water tank with bottled water suitable for infant formula preparation, or boiled water, cooled to room temperature.
- Place water tank back on base, turn the machine around so the front is facing you and then plug it in. The machine will turn on and the LCD screen will light up.
- The machine will beep once to tell you it's powered on. You'll also see the LCD display turn on. If the LCD screen is not lit up when plugged in, press the power button to turn on the machine.

Now let's rinse the inside of the machine.

- Get a cup or bottle larger than 10oz and place it under the funnel.
- Press the "ounce" button on the control panel repeatedly until the LCD screen says "10oz".
- Now press the "water only" button on the control panel. The Formula Pro® Advanced will dispense 10oz of water.
- Dispose of the water dispensed, or use it to water your plants.

Now you can turn off and unplug the machine, remove all the parts shown on the next page and set-up your new Formula Pro® Advanced.

- Get familiar with the part names on the next page, then proceed with the set-up on the following pages.

Formula Pro® Advanced - parts

Disassemble and wash all parts (except the base) and dry thoroughly. Assemble as shown on pages 5 & 6.



Set-up instructions

Set-up and cleaning videos available at babybrezza.com/video.



1

After hand washing these parts, make sure they are all **completely dry** before assembly.



2

Assemble the **funnel & funnel cover**. Then insert funnel assembly into funnel compartment by sliding it up, then in.



3

Place the **axle** on the base as shown.



4

Now place the **powder container** on the base with the printed markings facing you.

Set-up instructions continued



5

Place the **measuring wheel** into the powder container, fitting it over the axle with the flat side facing down. Make sure the holes in the measuring wheel are in the same position as shown above.



6

IMPORTANT

1. Place the front edge of **locking cover** in the recess in the inside/front of the powder container, **UNDER THE TAB**.
2. Fit hole in locking cover over top of axle. It will not lay completely flat.



7

Make sure the **locking cover & measuring wheel** look like this when assembled.



8

Now place the **stirring wheel** on the axle and push down firmly until you hear a click. Make sure the stirring wheel is snapped in place and does not lift up easily.

Now you're ready to add powder and make your first bottle.

Preparing your first bottle



Carefully pour formula powder into the powder container. Wipe up any spilled formula powder.



Make sure that the powder is filled between the MIN & MAX lines on the powder container.



Place the powder container lid on the powder container and turn clockwise until it stops.

This will engage the safety switch & lock the powder container onto the base.

To remove the powder container, turn the lid counter-clockwise.




Fit the drip tray on the base to fit your bottle height. Adjust it so the mouth of the bottle is as close to the funnel as possible.


Push the drip tray firmly against the base to set it in place.

Now let's review the controls on the next page.


Formula Pro[®] Advanced - controls & operation

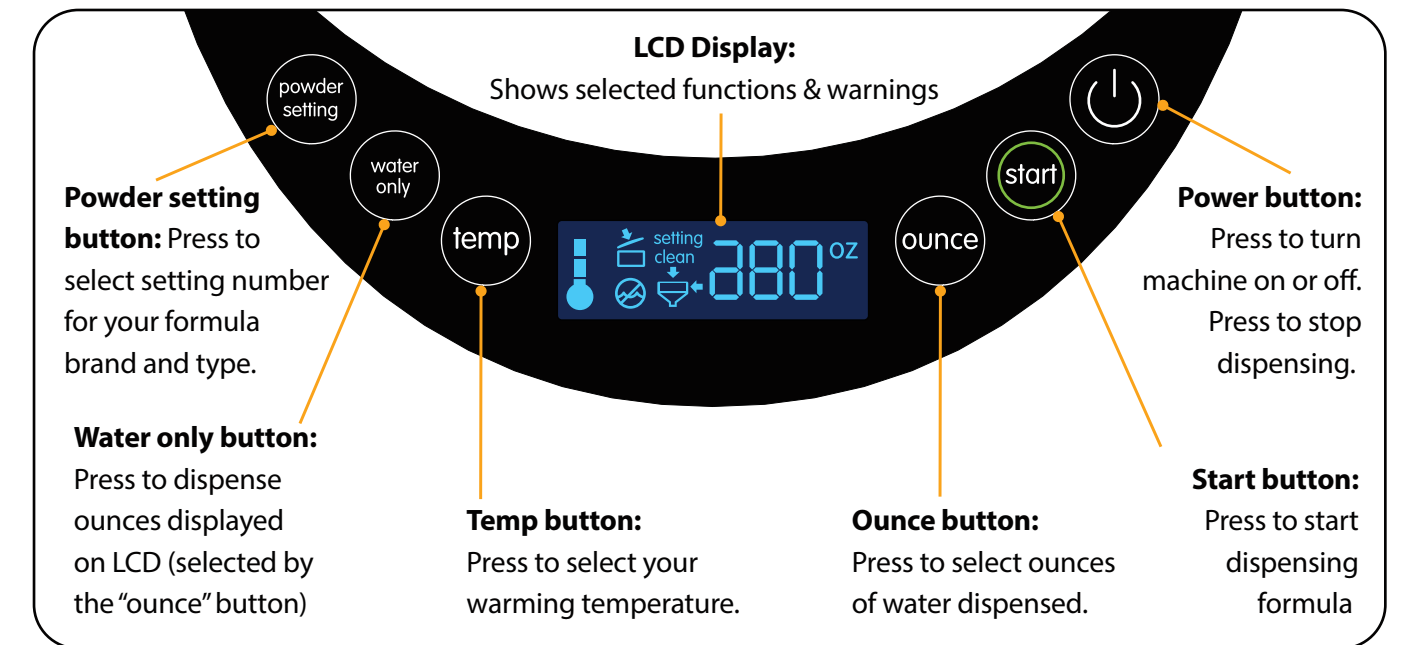

Temperature indicator symbols

 



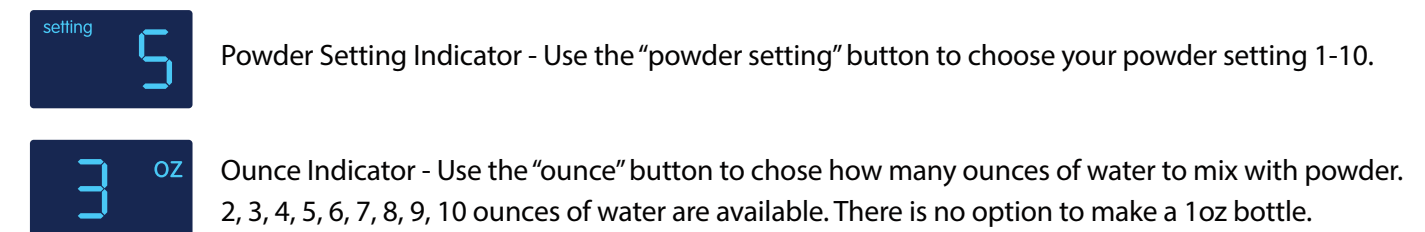

Powder & water settings




Warning symbols

The Formula Pro[®] Advanced will not run if any of these symbols are illuminated on the LCD display.

-  Powder Lid Open - The powder container lid is not closed completely or is not on the powder container correctly. Close the powder container lid completely and correctly when this symbol is illuminated.
-  Low Water - Refill water tank when this symbol is illuminated.
-  Clean Funnel - This symbol will illuminate after every 4 bottles are made. When this symbol is illuminated, remove funnel assembly, wash, and dry completely, then place it back into the base. See Page 11 for details.
-  Funnel Out - Funnel is removed or not inserted completely. Make sure the funnel is pushed all the way in when this symbol is illuminated.

Preparing your first bottle continued


Make sure your Formula Pro® Advanced is plugged in and turned on.

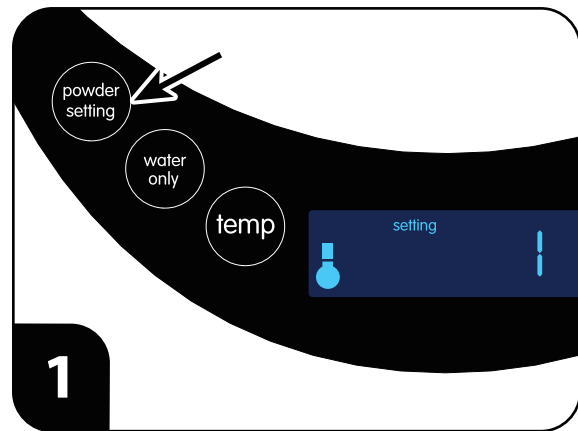

Press the “powder setting” button repeatedly to select your setting 1 - 10.


It is essential that you choose the correct setting for your formula brand and type.

Go to babybrezza.com/FPA to find the correct setting for your formula powder.

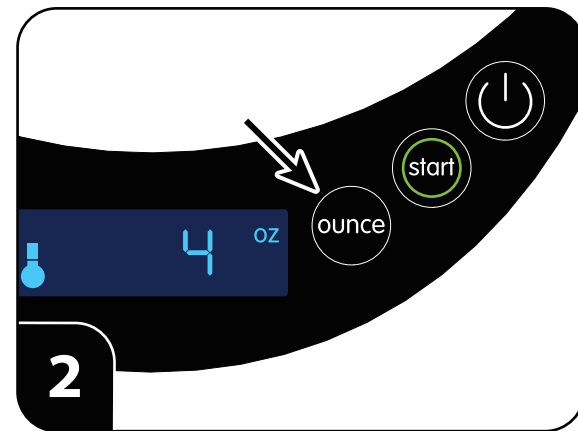

Press the “ounce” button repeatedly to select the ounces of water you want to dispense.


Ounce size indicates water volume only. It does not include the volume of powder added when mixing.

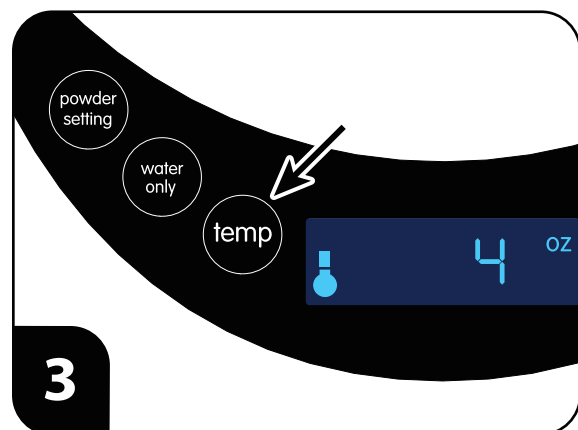

Press the “temp” button to select temperature.

- = Slightly warmer than body temperature
- = Body temperature
- = Room temperature

The temperature indicator will flash when heating and will stay solid when the set temperature is reached.

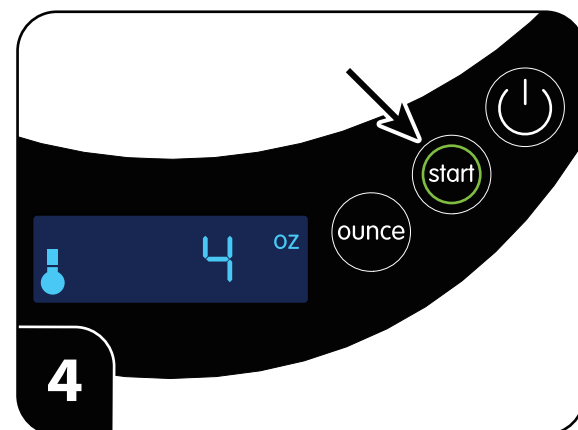

Press the “start” button to dispense formula.

The formula pro will remember the setting & ounce size even if it is unplugged or turned off.

You do not need to select a powder setting every time you make a bottle. You can always change the ounce size or powder setting by pressing the buttons again.

Preparing your first bottle continued



The Formula Pro® Advanced will dispense powder & water together, then stop automatically when dispensing is complete.

Some clumping may occur with some formula powders inherently difficult to mix with water.



Check for clumps and shake or stir the bottle if necessary. Check temperature and feed your baby.



PLEASE NOTE: The level will appear higher than the ounce size selected because of added powder volume and/or variance in bottle markings.

Example: 4 ounces of water plus powder volume is approximately 4.5-4.75 ounces depending on your formula powder type.



Refill the powder when the arms of the stirring wheel become visible. This is very important for accurate formula measuring.

Easy Daily Cleaning Instructions

It is **EXTREMELY IMPORTANT** to clean the funnel after every 4 bottles made. This will keep your Formula Pro® Advanced dispensing accurately.

Always make sure Funnel & Funnel cover are **COMPLETELY DRY** before re-assembling.



Remove Funnel & Funnel Cover by pulling out and down.



Wash Funnel & Funnel Cover with warm, soapy water & rinse well.
Dry completely before re-installing.



Wipe the powder-dispensing hole on the underside of the powder container using a dry paper towel or soft dry cloth.

PLEASE NOTE: You **don't** need to remove the powder container or the powder container parts for daily cleaning.

Monthly Cleaning Instructions

Once a month, give your Formula Pro® Advanced a thorough cleaning.

Please watch set-up and cleaning videos at babybrezza.com/video.



Hand-wash all parts shown above with warm soapy water, rinse well and dry thoroughly.



Hand wash water tank with warm soapy water, rinse well and dry thoroughly.

Monthly Descaling Instructions

You can leave the formula powder in the powder tank during the descaling process.

To prevent mineral scale on the water heater inside your Formula Pro® Advanced, follow these easy steps:

1. Remove the water tank, empty it and fill it with 20oz distilled vinegar & 20oz of purified water.
2. Place the water tank on the base of the machine & place a cup larger than 10oz under the funnel.
3. Select "10oz" with the "ounce" button, then press the "water only" button to dispense.
4. Empty the cup, place back under the funnel, then press the "water only" button again to dispense another 10oz.
5. Now unplug the machine, remove the water tank, and empty it. **Let the machine sit for 4 hours.**
6. Wash, rinse and fill the water tank to the max line with purified water, then place it back on the base.
7. Plug in the machine, place a cup to catch 10oz water and use the "water only" button to run an 10oz cycle. Dispose of the water dispensed in the cup and then repeat this step to run the entire tank of purified water through the machine. When the "Low Water" indicator turns on, you're done rinsing.
8. Refill the water tank with purified water and return to normal use.

Long Term Storage Instructions






 


It is **EXTREMELY IMPORTANT** to clean the machine and remove all formula powder residue before storage.

If you're going to store your Formula Pro® Advanced for later use, or will not use it for a while, please follow the instructions below:

1. Remove the powder container parts, funnel, funnel cover, drip tray and water tank from the base.
2. Wipe the base with a clean damp cloth and make sure to remove any and all formula residue. Dry the base well.
3. Empty the powder container, wash all powder container parts, dry thoroughly, reassemble, & reinstall on the base.
4. Follow the Monthly Descaling Instructions on page 12, steps **1-7 only**. Do not remove or refill the water tank after step 7.
5. Now place a cup to catch 10oz water under the funnel, then **press & hold** the "water only" button for 5 seconds. Water will dispense continuously until the machine is completely empty, then stop automatically.
6. Unplug the machine, remove the funnel, funnel cover and water tank, dry them both thoroughly and reinstall them on the machine.
7. Your machine is now ready for storage. Pack the machine in its box, or enclose it in a bag to keep it dust free.

Error Codes

In the unlikely event of electrical component error or interruption during operation, the following codes will be displayed on the LCD screen. Pressing and holding the power button will clear the code and operation should return to normal. If the code returns or is unable to be cleared, please contact Baby Brezza Customer Service.

-  Indicates an operation error of the motor that turns the powder container parts. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the motor sensor that detects the rotation of the measuring wheel. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the water flow meter that measures the water volume output. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the temperature sensor that measures water temperature. Contact Baby Brezza Customer Service.
-  Indicates an operation error of the water level switch that measures the water remaining. Contact Baby Brezza Customer Service.
-  Indicates that hot water has been poured into the water tank and entered the machine. Empty the water tank, refill it with room temperature water, return it to the base. Press & hold the power button to clear the code, then press & hold the "water only" button to clear the hot water from the machine.
-  Indicates that the powder container lid has been opened during operation. Make sure the powder container lid is completely closed, press & hold the power button to clear the code. The machine will return to normal.
-  Indicates that the funnel has been removed during operation. Make sure the funnel & funnel cover are installed correctly, press & hold the power button to clear the code. The machine will return to normal.

Troubleshooting

Condition	Possible Cause	Possible Remedy
Machine will not start.	Machine is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Machine is not turned on.	Press Power Button to turn on machine.
	Funnel is removed or not fully inserted.	Insert funnel or push front of funnel until flush with machine.
	Water level is below "MIN" line.	Add more water to water tank.
	Powder container is removed or not fully seated.	Make sure powder container is placed on base properly.
	Powder container lid is not completely closed.	Turn Powder container lid clockwise to close completely. See page 7, step 3 for details.
	Powder container lid is on backwards.	Make sure tab on edge of Powder Container Lid is facing the back of the machine and engaged with safety switch. See page 7, step 3 for details.
	Water in Water Tank is too cold. (Temp Symbol on LCD Flashing)	Wait for water to warm up.
Water in Water Tank is too hot. (Temp Symbol on LCD panel is flashing)	Wait for water to cool down.	
Temperature of dispensed formula is too cold.	Water has not yet been heated to correct temperature.	Wait for heater to warm water. Make sure selected temperature symbol stays on solid instead of flashing.
Funnel will not fit all the way in Funnel Compartment.	Funnel cover is not straight on funnel and/or not pushed down completely.	Align tab on front of Funnel Cover with notch in Funnel and push down Funnel Cover completely.
Clean Funnel symbol is on, Formula Pro beeps when start button is pressed.	Funnel and hole on underside of Powder Container require cleaning.	Follow Steps on Page 7 to clean and dry Funnel and hole on underside of Powder Container.
Too much powder dispensed.	Locking cover is not installed correctly.	Check locking cover and make sure the front edge is locked under the tab in the powder container. See page 4, step 6 for details.
	Incorrect powder setting selected.	Make sure to select the correct setting number for your powder type. For details, go to: babybrezza.com/settings
Not enough powder dispensed.	Powder level in powder container is too low.	Refill Powder Container with more powder.
	Machine has not been cleaned well.	Disassemble, clean by hand-washing, completely dry all parts and reassemble.
	Silicone scraper is not installed correctly.	Make sure silicone scraper is installed correctly.
	Incorrect powder setting selected.	Go to: babybrezza.com/fpa to confirm setting for your powder brand and type, then choose correct setting using the "powder setting" button on the control panel.
Not dispensing water.	Water Tank not fully seated.	Push Water Tank down all the way on Base.
Powder build-up on funnel cover & underside of powder container.	Frequent use without cleaning underside of powder container. See page 7, step 3 for details.	Clean funnel, funnel cover and underside of powder container every 4 bottles.

If you can not remedy problems by using the troubleshooting chart above, **do not return your Formula Pro® Advanced to the store.** Please contact Baby Brezza Customer Service at 1-888-396-6552 or visit babybrezza.com for videos.

babybrezza® one step™ sterilizer dryer advanced



Instructions


PLEASE NOTE: All bottles, pump parts & accessories must be empty, clean and rinse before use in this sterilizer-dryer.

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully before using your sterilizer.
2. Ensure that the supply voltage marked on the appliance corresponds with your power supply.
3. If there is any visible damage to the appliance, the plug or to the supply cord, disconnect the appliance immediately and do not use it.
4. If the supply cord is damaged, it must be replaced by the distributor in order to avoid a hazard.
5. Do not allow children to touch or use the appliance. The appliance becomes very hot and the steam can cause severe scalding.
6. Do not move the appliance when it is in use or contains hot liquids.
7. Do not touch the hot surfaces.
8. Do not place the appliance on or near hot surfaces, in a heated oven or near a gas or electric heater.
9. Unplug the appliance from the power supply before cleaning or storage.
10. Do not immerse the supply cord, plug or base unit in water or any other liquid.
11. This appliance does not contain any user serviceable parts inside. Do not dismantle.
12. This appliance is for indoor household use only. Do not use outdoors.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
14. This appliance has a polarized plug (one blade wider than the other). To reduce risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. a) Short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
b) Extension cords are available and may be used if care is exercised in their use.
c) If an extension cord is used: The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance; The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).
16. Children should be supervised to ensure that they do not play with the appliance.
17. Not for space heating purpose.
18. Always use on a level heat resistant surface.
19. Always keep the electric sterilizer and its plug out of reach of small children.
20. To disconnect, turn the control to "off", then remove plug from wall outlet.
21. Ensure water has been added to the base unit before the sterilization cycle is switched on.
22. Always add 180ml/6oz of distilled water before use. If you put too little or too much water into the sterilizer, the sterilization efficiency may not be reached.
23. Always unplug from the electric outlet when not in use. Allow to cool before putting on or taking off any parts.
24. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Please contact the distributor's Customer Service for more information.
25. The use of accessory attachments is not recommended by the appliance manufacturer as this may cause injuries.
26. This sterilizer is intended to be used in household and similar application such as a. staff kitchen areas in shops, offices and other working environments. b. farm houses. c. by clients in hotels, motels and other residential type of environments. d. bed and breakfast.
27. Do not open while in use as this product contains boiling water. Beware of escaping steam from the vent holes in the lid.
28. Allow at least 30 minutes interval between operations and make sure the unit has been cooled down before pressing the start button for sequential use.
29. Steam escaping from the unit can cause burns. Always allow 5 minutes to cool down after the cycle finishes before lifting the lid.
30. KEEP CHILDREN AWAY from this sterilizer at all times.
31. To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
32. **CAUTION:** Risk of electric shock, disconnect electric power before servicing.
33. Use only distilled water, bottled water or fresh running water to sterilize.
34. Never use any additives.


Sterilizer Dryer Parts

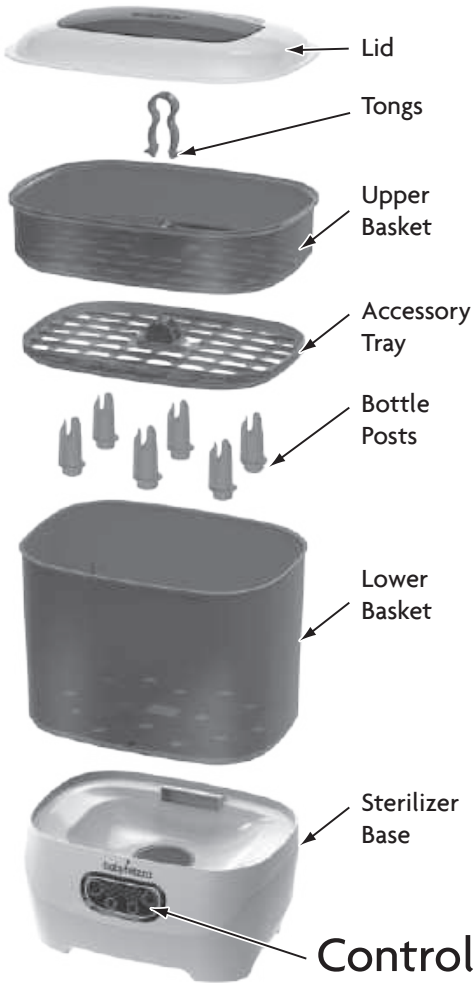

Filter Components

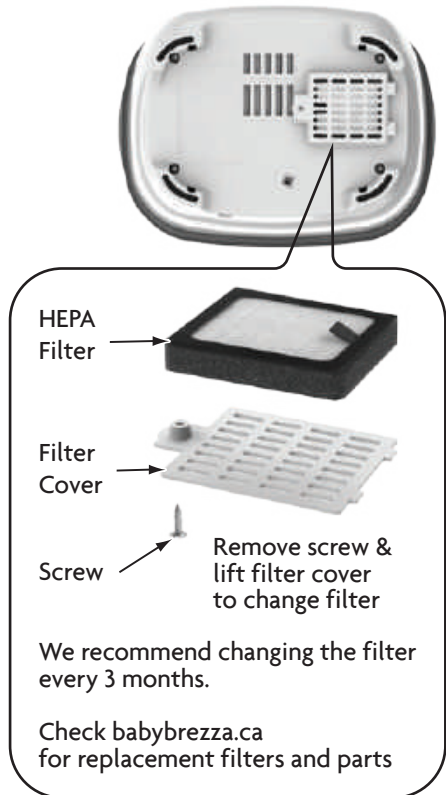


Control Panel

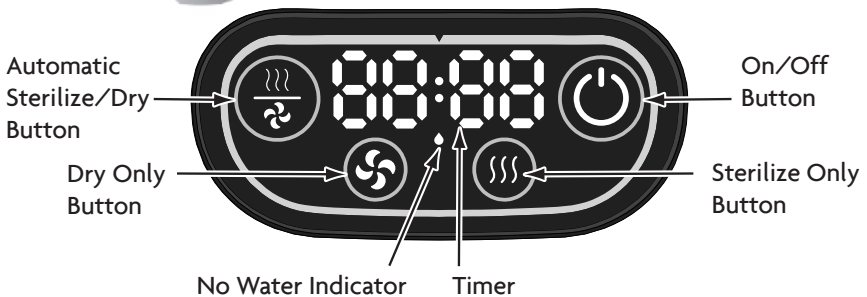


TECHNICAL DATA	Model: BRZ0069
Supply voltage: 120V ~ 60Hz	Power: 750W

Set-up and Use


Before placing items in the appliance for sterilization it is important that all bottles, pump parts and accessories must be EMPTY, CLEAN & FULLY RINSED BEFORE USE in this sterilizer dryer.

1. Place the appliance on a flat surface where it is out of reach of children and it will not be knocked or moved during operation.
2. Remove the lid, baskets and accessory rack from the sterilizer base.
3. Pour distilled water on the base/heater surface to MAX line (180ml/6oz). Never fill past MAX line.
4. Place the lower basket on the base.
5. Place clean bottles with their opening facing downward on the bottle posts.
6. Place the accessory tray in the lower basket (tray not for use with tall bottles).
7. Place bottle accessories on the accessory rack (nipples, collars, caps, etc).
8. Place the upper basket on top of the lower basket, ensuring that it fits securely without any gaps.
9. Place breast pump parts or more accessories in the upper basket.
10. Press the On/Off  button once and the function icons will light up. Choose your desired function following the instructions below. If there is no selection of function after pressing on/off button, the appliance will automatically switch off.


Automatic Sterilize/Dry Function:

1. Choose the drying time (after steam sterilization): Press the Sterilize/Dry  button 1 time for 30 minute dry time, 2 times for 45 minute dry time, 3 times for 60 minute dry time. The sterilize/dry cycle will start 3 seconds after the last button press.
2. When the sterilization cycle starts, The timer will count up second-by-second for the duration of the sterilization cycle.
3. When the sterilization cycle is complete, the appliance will beep, pause for 3 seconds and begin the drying cycle for the amount of time selected in step 1. The timer on the timer will count down second-by-second until it reaches 00:00.
4. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically.


Sterilize only function:

1. Press the Sterilize  button one time, the timer will display “00:00” and the steam icon. The sterilization cycle will start 3 seconds after pressing the sterilize button and the timer will count up second-by-second for the duration of the sterilization cycle.
2. When the sterilization cycle is complete, the appliance will beep 5 times and switch off automatically.

Dryer only function:

1. Press the Dry  button 1 time for 30 minute dry time, 2 times for 45 minute dry time, 3 times for 60 minute dry time. The drying cycle will start 3 seconds after the last button is pressed and the timer on the timer will count down second-by second until it reaches 00:00.
2. When the drying cycle is completed, the appliance will beep 5 times and switch off automatically.

Caution: If it is necessary to remove water from the base, always POUR AWAY FROM FAN OPENING. Note water pour direction icon on base, and pour in direction of arrow.

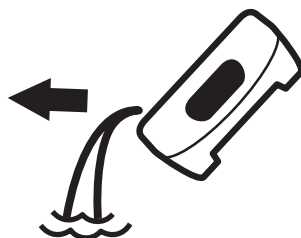


Cleaning

- Always unplug your product before cleaning.
- Do not immerse the base, the supply cord or the plug in water or other liquids.
- Do not clean base under water tap.
- Use a soft damp cloth to clean the base and control console.
- Never use abrasive pads to clean the plastic parts of the machine.
- The lid, accessory rack can be cleaned in hot soapy water.
- Mineral residue, particularly in hard water areas, may deposit on the stainless steel heating plate after a few sterilization cycles. To avoid scale build up, wipe the surfaces with a soft moist cloth after each operation.
- Deposits can be removed with scale removers or by leaving 60ml/2oz water and vinegar solution (50/50 water & vinegar mix) on the heating plate for approximately 30 minutes. The plate should then be wiped clean with a clean, dry cloth. Some discoloration spots may remain after cleaning with a vinegar solution, but these are harmless.
- Do not use abrasives or solvents for cleaning; they may damage the appliance and the surface of the heating plate.

Modular set-up options


Upper & Lower Baskets With Accessory Tray

For use with short bottles,
accessories & pump parts.

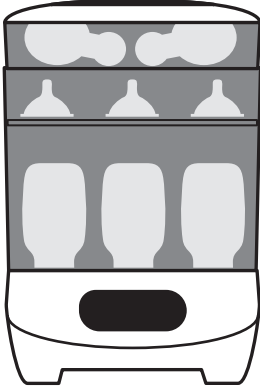


Upper & Lower Baskets WITHOUT Accessory Tray

For use with tall bottles,
and accessories.

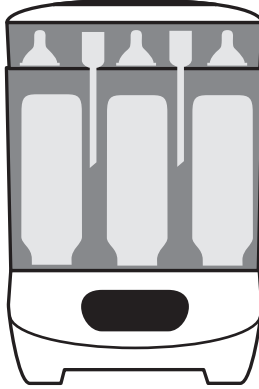

Lower Basket only With Accessory Tray

For use with short bottles,
accessories & pump parts.

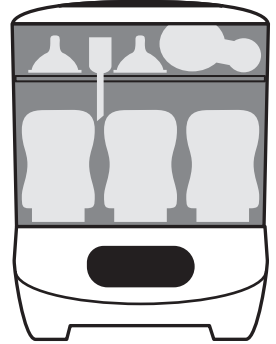

Upper Basket only WITHOUT Accessory Tray

For use with accessories
pacifiers and small items.




Breast pump parts and any other items safe for steam sterilization can be placed in the lower or upper baskets. Try different configurations to find what set-up works best for you.

TIP: For best drying performance, Do not overload the Sterilizer Dryer.

Using the included tongs

The tongs can be inserted and stored in the upper basket or the accessory tray. When the tongs are clicked into place, they can be used to lift the basket or tray. Gently squeeze the tongs to remove them. They can also be used to grasp parts and bottle nipples in the sterilizer.

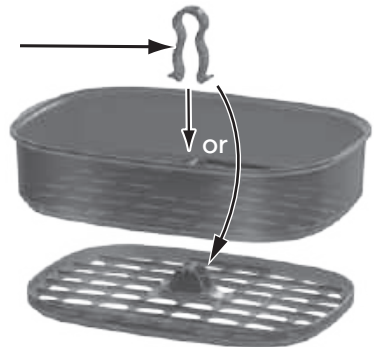

Troubleshooting

Condition	Possible Cause	Remedy
Appliance will not start.	Unit is unplugged.	Make sure the plug is securely inserted into the power outlet.
	Unit is not turned on.	Press On/Off switch before choosing function.
	Insufficient water is in heater plate area.	Add 180ml/6oz water to heater plate area.
Scaling on water tank heater plate.	Mineral rich water used persistently.	Clean heater plate after each use and use distilled water.
Items not dry after drying cycle.	Water is collecting on recessed or indented areas of items placed in sterilizer.	Make sure parts are placed so they do not collect water.
	Drying cycle selected not long enough to sufficiently dry items in sterilizer.	Select longer drying time.

Limited 1-Year Warranty

The limited warranty is valid only on products bought through authorized resellers and used in Canada. Buying through an unauthorized reseller or using this product outside of Canada automatically voids this warranty. This warranty is available to consumers only. You are a consumer if you own a Baby Brezza® appliance that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Baby Brezza® appliance will be free of defects in material or workmanship under normal home use for one year from the date of original purchase. Customer will be required to present original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your Baby Brezza® appliance should prove to be defective within the warranty period, we will repair it or, if we consider it necessary, replace it.

To obtain warranty services, please call Customer Service at 1-800-667-8184 or write to: service@elfe.ca

DISTRIBUTED BY:
 ELFE JUVENILE PRODUCTS
 2520 AVE MARIE-CURIE
 SAINT-LAURENT (QC) H4S 1N1
service@elfe.ca | www.elfe.com
 1-800-667-8184

Please visit
babybrezza.ca

©2020 Baby Brezza Enterprises LLC

babybrezza® stérilisateur sècheur one step™ advanced



Mode d'emploi


REMARQUE : Vous devez vider, laver et rincer les biberons, pièces de tire-lait et accessoires avant d'utiliser le stérilisateur sècheur.

PRÉCAUTIONS IMPORTANTES

Lorsque vous utilisez des appareils électriques, des précautions de sécurité de base doivent être respectées, dont les suivantes :

1. Lisez toutes les instructions attentivement avant d'utiliser votre stérilisateur.
2. Assurez-vous que la tension d'alimentation indiquée sur l'appareil correspond à votre source de courant.
3. Si l'appareil, la fiche ou le cordon d'alimentation est endommagé de quelque façon que ce soit, débranchez immédiatement l'appareil et ne l'utilisez pas.
4. Si le cordon d'alimentation est endommagé, il doit être remplacé par le distributeur afin d'éviter tout risque.
5. Ne laissez pas les enfants toucher ou utiliser l'appareil. Celui-ci devient très chaud et la vapeur peut provoquer de graves brûlures.
6. Ne bougez pas l'appareil lorsqu'il est en cours d'utilisation ou contient des liquides brûlants.
7. Ne touchez pas les surfaces chaudes.
8. Ne placez pas l'appareil sur des surfaces chaudes ou à proximité de celles-ci, dans un four en marche ou près d'un appareil de chauffage.
9. Débranchez l'appareil de la source d'alimentation avant de le nettoyer ou de le ranger.
10. N'immergez pas le cordon d'alimentation, la fiche ou l'unité de base dans de l'eau ou tout autre liquide.
11. Cet appareil ne contient aucune pièce remplaçable. Ne le démontez pas.
12. Cet appareil est destiné à une utilisation à l'intérieur uniquement. Ne l'utilisez pas à l'extérieur.
13. Cet appareil n'est pas destiné à être utilisé par des personnes (dont les enfants) aux capacités physiques, sensorielles ou mentales limitées ou manquant d'expérience ou de connaissances, sauf sous surveillance ou si elles ont reçu des instructions concernant l'utilisation de l'appareil de la part d'une personne responsable de leur sécurité.
14. Cet appareil est équipé d'une fiche polarisée (une broche plus large que l'autre). Afin de limiter les risques de choc électrique, cette fiche est conçue pour être branchée dans une prise polarisée d'une seule manière. Si la fiche ne rentre pas dans la prise, retournez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'essayez en aucune manière de modifier la fiche.
15. a) Un court cordon d'alimentation est fourni pour réduire les risques d'enchevêtrement ou de trébuchement.
b) Il est possible de brancher l'appareil à une rallonge, mais celle-ci doit être utilisée avec prudence.
c) Utilisation d'une rallonge : sa capacité électrique devrait être au moins aussi élevée que la puissance électrique de l'appareil; le cordon le plus long ne doit pas pendre d'un plan de travail ou d'une table, car il pourrait provoquer un trébuchement, être accroché ou tiré involontairement (surtout par des enfants).
16. Ne laissez pas les enfants sans surveillance et assurez-vous qu'ils ne jouent pas avec l'appareil.
17. Non conçu à des fins de chauffage.
18. Utilisez toujours sur une surface plane résistant à la chaleur.
19. Gardez toujours le stérilisateur hors de portée des jeunes enfants.
20. Pour débrancher, éteignez l'appareil (Off), puis retirez la fiche du mur.
21. Assurez-vous qu'il y a de l'eau dans la base avant de lancer le cycle de stérilisation.
22. Ajoutez toujours 180 ml/6 oz d'eau distillée avant utilisation. Si vous mettez trop ou pas assez d'eau dans le stérilisateur, celui-ci risque de ne pas atteindre son efficacité maximale.
23. Débranchez toujours l'appareil quand vous ne l'utilisez pas. Laissez-le refroidir avant d'ajouter ou de retirer des pièces.
24. N'utilisez jamais un appareil dont le cordon ou la fiche est endommagé, un appareil qui fonctionne mal ou endommagé de quelque manière que ce soit. Veuillez contacter le service à la clientèle du distributeur pour plus d'information.
25. L'utilisation d'accessoires complémentaires n'est pas recommandée par le fabricant car ils peuvent provoquer des blessures.
26. Ce stérilisateur est conçu pour un usage domestique ou dans un environnement similaire : salle ou cuisinette du personnel (magasins, bureaux et autres milieux de travail), ferme, chambre d'hôtel, chambre d'hôte, etc.
27. N'ouvrez pas le produit en cours d'utilisation car il contient de l'eau bouillante. Prenez garde à la vapeur qui s'échappe des trous d'aération dans le couvercle.
28. Attendez au moins 30 minutes entre chaque utilisation et assurez-vous que l'unité a refroidi avant d'appuyer sur le bouton démarrer pour une utilisation à la chaîne.
29. La vapeur qui s'échappe de l'unité peut provoquer des brûlures. Laissez toujours refroidir 5 minutes après la fin du cycle avant d'ouvrir le couvercle.
30. **NE LAISSEZ JAMAIS LES ENFANTS S'APPROCHER** de ce stérilisateur.
31. Afin d'assurer une protection continue contre les décharges électriques, ne branchez l'appareil que sur des prises correctement mises à la terre.
32. **AVERTISSEMENT** : Risque de décharge électrique. Débranchez l'appareil avant le nettoyage ou la maintenance.
33. Utilisez uniquement de l'eau distillée, de l'eau en bouteille ou de l'eau courante fraîche pour stériliser.
34. N'utilisez jamais d'additifs.

Composants du stérilisateur sècheur

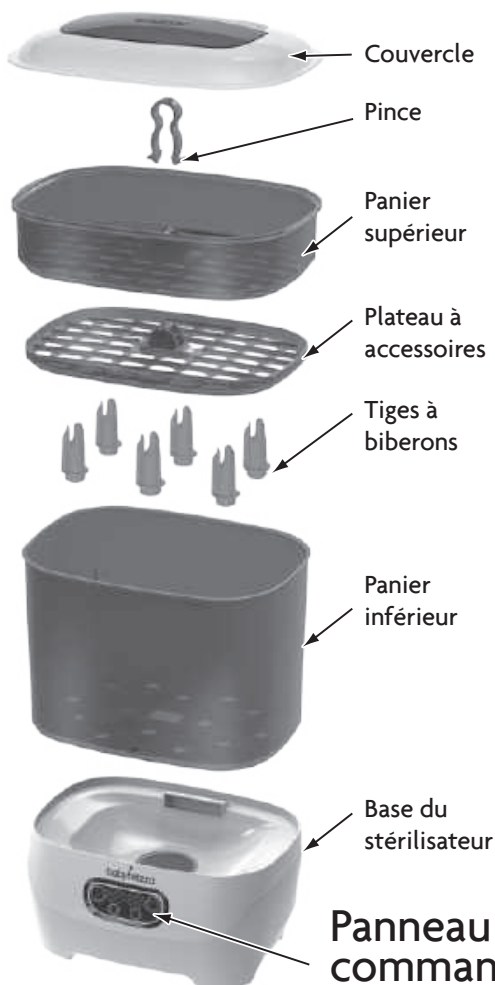


Composants du filtre



Bouton stérilisation/séchage automatique

Bouton séchage seulement

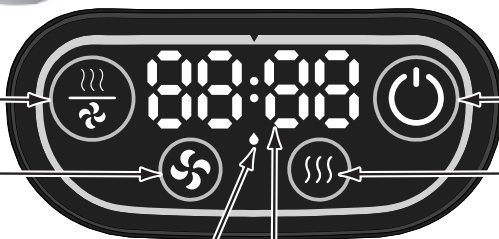

No Water Minuterie Indicator

Bouton marche/arrêt

Bouton stérilisation seulement

CARACTÉRISTIQUES TECHNIQUES


Tension d'alimentation : 120V ~ 60Hz

Modèle : BRZ0069


Puissance : 750W

Installation et utilisation


Vous devez VIDER, LAVER et RINCER À FOND tous les biberons, pièces de tire-lait et accessoires avant de les placer dans le robot pour les stériliser.

1. Placez l'appareil sur une surface plane hors de portée des enfants et où il ne sera pas renversé ou déplacé pendant le fonctionnement.
2. Retirez le couvercle et le panier à accessoires de la base du stérilisateur.
3. Versez de l'eau distillée sur la base/la surface de chauffe jusqu'à la ligne MAX (180 ml/6 oz). Ne dépassez jamais la ligne MAX.
4. Placez le panier inférieur sur la base.
5. Placez les biberons à l'envers sur les tiges.
6. Placez le plateau à accessoires dans le panier inférieur (n'utilisez pas le plateau pour des biberons grand format).
7. Placez les pièces des biberons (tétines, anneaux, capuchons, etc.) dans le plateau à accessoires.
8. Placez le panier supérieur sur le panier inférieur; assurez-vous que les deux paniers s'emboîtent parfaitement.
9. Placez les pièces de tire-lait ou d'autres accessoires dans le panier supérieur.
10. Appuyez une fois sur le bouton marche/arrêt  afin d'allumer les voyants des différentes fonctions. Choisissez la fonction désirée en suivant les instructions ci-dessous. Si aucune fonction n'est sélectionnée, l'appareil s'éteindra automatiquement.


Fonction stérilisation/séchage automatique :

1. Choisissez le temps de séchage (après stérilisation à la vapeur) : appuyez une fois sur le bouton Stérilisation/Séchage  pour un temps de séchage de 30 minutes, deux fois pour 45 minutes et trois fois pour 60 minutes. Le cycle de stérilisation/séchage débutera au bout de 3 secondes.
2. Une fois le cycle de stérilisation lancé, la minuterie de l'écran affiche le compte à rebours en secondes pendant les stérilisation.
3. Une fois le cycle de stérilisation terminé, l'appareil sonne, marque une pause de 3 secondes, puis lance le cycle de séchage pour la durée sélectionnée à l'étape 1. La minuterie de l'écran affiche alors le compte à rebours en secondes jusqu'à 00:00.
4. Une fois le cycle de séchage terminé, l'appareil sonne cinq fois puis s'éteint automatiquement.


Fonction stérilisation uniquement :

1. Appuyez une fois sur le bouton Stérilisation , la minuterie de l'écran affichera « 00:00 » et l'icône vapeur. Le cycle de stérilisation débutera au bout de 3 secondes et la minuterie de l'écran affichera le compte à rebours en secondes pendant tout le cycle de stérilisation.
2. Une fois le cycle de stérilisation terminé, l'appareil sonnera cinq fois et s'éteindra automatiquement.

Fonction séchage uniquement :

1. Appuyez une fois sur le bouton Séchage  pour une durée de séchage de 30 minutes, deux fois pour 45 minutes et trois fois pour 60 minutes. Le cycle de séchage débutera au bout de 3 secondes et la minuterie de l'écran affichera le compte à rebours en secondes jusqu'à 00:00.
2. Une fois le cycle de séchage terminé, l'appareil sonnera cinq fois et s'éteindra automatiquement.

Avertissement : Si vous avez besoin de retirer de l'eau de la base, VERSEZ TOUJOURS DU CÔTÉ OPPOSÉ À L'OUVERTURE DU VENTILATEUR. Observez l'icône de sens de vidage sur la base et videz suivant la direction de la flèche.

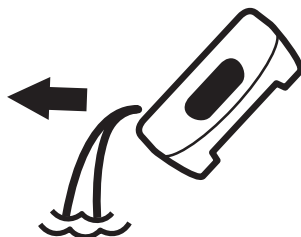


Nettoyage

- Débranchez toujours le produit avant le nettoyage.
- N'immergez pas la base, le cordon d'alimentation ou la fiche dans l'eau ou d'autres liquides.
- Ne nettoyez pas la base sous le robinet.
- Utilisez un linge doux et humide pour nettoyer la base et le panneau de commande.
- N'utilisez jamais de tampon abrasif pour nettoyer les pièces en plastique de l'appareil.
- Le couvercle et le panier à accessoires peuvent être nettoyés à l'eau chaude savonneuse.
- Des résidus minéraux, en particulier dans les régions où l'eau est dure, peuvent se déposer sur la plaque de chauffe en acier après quelques cycles de stérilisation. Pour en éviter l'accumulation, essuyez les surfaces avec un linge doux et humide après chaque usage.
- Les dépôts peuvent être retirés avec un nettoyant breveté ou en laissant 60 ml/2 oz de solution eau-vinaigre (moitié eau, moitié vinaigre) sur la plaque de chauffe pendant environ 30 minutes. Le bol devra ensuite être essuyé avec un linge propre et sec. Des taches de décoloration sont susceptibles d'apparaître après le nettoyage avec une solution vinaigrée, mais elles sont sans conséquence.
- N'utilisez pas de produits abrasifs ou de solvants pour le nettoyage; ils peuvent endommager l'appareil et la surface de la plaque de chauffe.

Configurations possibles


Paniers supérieur et inférieur avec plateau à accessoires

Pour petits biberons, accessoires et pièces de tire-lait.

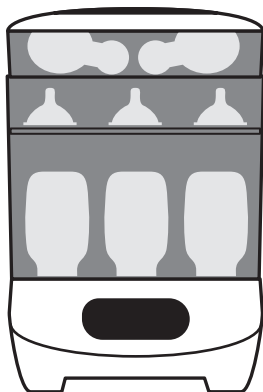


Paniers supérieur et inférieur SANS plateau à accessoires

Pour biberons grand format et accessoires.

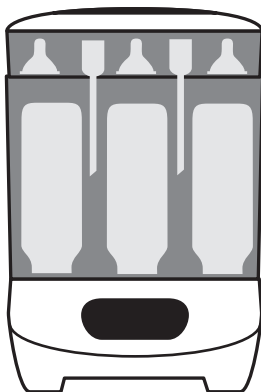

Panier inférieur seulement avec plateau à accessoires

Pour petits biberons, accessoires et pièces de tire-lait.

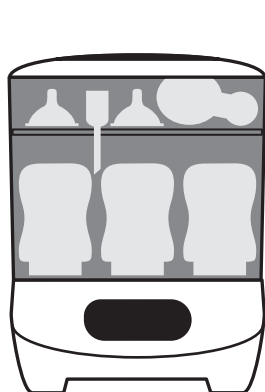

Panier supérieur seulement SANS plateau à accessoires

Pour tétines, sucettes et autres petites pièces.




Les pièces de tire-lait et autres pièces qui résistent à une stérilisation à la vapeur peuvent être placées dans le panier supérieur ou inférieur. Essayez différentes configurations pour trouver celle qui vous convient.

CONSEIL : Pour un séchage plus efficace, évitez de surcharger le stérilisateur sécheur.

Utilisation de la pince

La pince peut être insérée et rangée dans le panier supérieur ou le plateau à accessoires. Lorsque la pince est en place, vous pouvez l'utiliser pour soulever le panier ou le plateau. Pour l'enlever, serrez les deux branches délicatement. La pince peut aussi servir à prendre les tétines et pièces de biberons dans le stérilisateur.

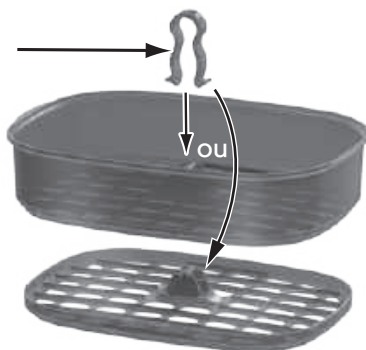

Dépannage

Problème	Cause possible	Solution
L'appareil ne démarre pas.	L'unité n'est pas branchée.	Assurez-vous que la fiche est insérée dans la prise de courant.
	L'unité n'est pas allumée.	Appuyez sur le bouton On/Off avant de sélectionner une fonction.
	Il n'y a pas assez d'eau au niveau de la plaque de chauffe.	Ajoutez 180 ml/6 oz d'eau sur la plaque de chauffe.
Dépôts sur la plaque de chauffe du réservoir d'eau.	Eau riche en minéraux utilisée de manière répétée.	Nettoyez la plaque de chauffe après chaque usage et utilisez de l'eau distillée.
Les pièces sont encore mouillées après un cycle de séchage.	De l'eau s'accumule par endroits à l'intérieur des pièces durant la stérilisation.	Placez les pièces de façon que l'eau ne puisse pas s'y accumuler.
	Le cycle de séchage sélectionné est trop court pour que les pièces sèchent correctement.	Sélectionnez un cycle de séchage plus long.

Garantie limitée d'un an

La garantie limitée s'applique uniquement aux produits achetés auprès de revendeurs autorisés et utilisés au Canada. L'achat du produit auprès d'un revendeur non autorisé ou son utilisation hors du Canada annule automatiquement cette garantie. La présente garantie n'est offerte qu'aux consommateurs. Consommateur désigne ici toute personne qui possède le stérilisateur sécheur de Baby Brezza®, acheté au détail à des fins personnelles, familiales ou domestiques. Sauf dispositions contraires des lois applicables, cette garantie n'est pas offerte aux détaillants ni aux personnes qui achètent ou possèdent le produit à des fins commerciales. Pendant un an à compter de la date d'achat originale, nous garantissons le stérilisateur sécheur de Baby Brezza® contre les vices de matériaux ou de fabrication s'il fait l'objet d'un usage domestique normal. Pour ce prévaloir de la garantie, le client devra présenter la preuve d'achat originale. En cas d'absence de la preuve d'achat originale, la période de garantie sera calculée à compter de la date de fabrication du produit. Si le stérilisateur sécheur de Baby Brezza® fait défaut durant la période de garantie, nous le réparerons ou le remplacerons, si nous jugeons un remplacement nécessaire.

Pour obtenir les services de garantie, veuillez contacter notre service à la clientèle au 1-800-667-8184 ou écrire à service@elfe.ca

DISTRIBUÉ PAR :
ELFE JUVENILE PRODUCTS
2520 AVE MARIE-CURIE
SAINT-LAURENT (QC) H4S 1N1
service@elfe.ca • www.elfe.com • 1-800-667-8184

Consulter le site
babybrezza.ca

©2020 Baby Brezza Enterprises LLC