

400mm

100mm

140mm

## Nekteck FOOT MASSAGER USER MANUAL



For concerns and technical assistance  
please contact support@nekteck.com

SKU: NK-FM-0401-GY Model: NK-FM-0401

Thank you for choosing the foot massager.  
Please read the user manual carefully before use.

### Technical Parameters

Rated Voltage: DC 12 V== 4 A  
Rated Power: 48 W  
Dimension: 16.8 (L) x 15.3 (W) x 9.7 (H) inch  
42.7 (L) x 38.8 (W) x 24.7 (H) cm  
Weight: 8.1 lb (3.7 Kg)

### Structure Diagram



### Function

**Time:** Select 15 or 30 minutes automatic shut-off.  
**Knead Intensity:** Select knead intensity from low, medium or high.  
**Air Intensity:** Air Intensity: Select air pressure intensity from low, medium or high  
**Heat:** Press to turn on/off the heating function.

### Operation Guide

Enjoy a foot massage for 15 or 30 minutes once or twice daily this can relieve muscle pain, improve blood circulation and effectively ease the symptoms of insomnia.

1. Connect the plug to the power source. The Power indicator should flash and the massager will be on standby.
2. Press the Power button. The knead speed and air intensity will be at low (L). The default auto shut-off is set to 15 minutes indicated by redTIM E light.
3. Press the Time button to change the auto shut-off to 30 minutes and the indicator light will turn blue.
4. Press the Knead speed and Air Intensity buttons to adjust the knead and air pressure intensity L=Low, M=Medium H=High
5. Press the Heat button to adjust the on/off heating function. Purple LED=full heating, red LED =base heating, blue LED= Instep heating
6. The foot massager fits up to US Men's size 12 (EU Men's size 46).
7. To remove and wash the foot cover: you just need to unzip it. Please see the images below.



**Reminder:** We recommend you limit the use to 15-30 minutes. Longer massage times may cause mild pain.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:  
Read all instructions before using (this appliance).

**DANGER** – To reduce the risk of electric shock: 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

**WARNING** – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Use heated surfaces carefully. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation. The unattended use of heat by children or incapacitated persons may be dangerous.
- 14) Do not stand on or in appliance. Use only while seated.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) For household use only

## SAVE THESE INSTRUCTIONS

### Security and Maintenance

- Any other servicing should be performed by an authorized service representative or that the appliance has no user serviceable parts
1. The use of non-rated voltage not (DC 12V/4 A ) is prohibited.
  2. It is prohibited for non-professional personnel to repair the massager, or replace parts.
  3. If the power cord is damaged, it must be replaced by the maintenance department or similarly qualified persons approved by the manufacturer so as to avoid potential hazards.
  4. Do not use or store the appliance in wet environments or high temperatures.
  5. Unplug the power cord from the outlet after using.
  6. Ensure that the operation of this product does not exceed more than 30 minutes at any given time.
  7. If you feel unwell or in any unusual discomfort, please stop using the product immediately.
  8. If the unit gets too hot or emits unusual odor while using the product, stop using it immediately and unplug the device.
  9. Any Individual who may be pregnant or recently gave birth, has a heart condition or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, an abnormal or curved spine, is at an increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her body, is being treated for a medical condition or physical injury or is under a doctor's care should consult a medical professional before using a massaging device designed for home use.
  10. Do not use sharp objects to handle the product in order to avoid damage.
  11. Please keep the product clean. You can use a soft cotton cloth and neutral detergent to clean it.
  12. Do not stand when you are using the massager. Do not place excessively heavy objects on the device in order to avoid damage.
  13. The product has a built-in temperature-protection device; it will automatically shut-off when the temperature exceeds the safe limit.

### Troubleshooting Guide

Common problems	Cause	Solutions
The product does not work	1. Disconnected power or loose plug causing poor contact. 2. The power switch is off or the timer has been reset. 3. The motor auto shuts- off due to the device being on for too long activating overheating protection.	1. Replug to the power source. 2. Turn the power switch on again. 3. Use the massager after the motor cools off naturally.
The massage intensity is too high or too low	Your foot is positioned at the wrong angle.	Adjust the contact angle to get the moderate intensity.

### Customer Service

1. If you have any product questions or concerns, don't hesitate to contact us directly at
2. We have a comprehensive warranty, exchange, and customer service team that guarantees hassle-free solutions to any issue you might have within 24 hours.

### Warranty(1-Year Limited)

The manufacturer's warranty is void under the following circumstances but not limited to:

1. Improper or inadequate maintenance or modification.
2. Accident, misuse, abuse, contamination or other external causes.
3. The use of unspecified adapter and accessories.
4. Loss or damage in transit.
5. Damages that occur as a result of one's failure to follow the instructions.

This Warranty does not apply to expendable or consumable parts and does not extend to any product from which the serial number has been removed.