

Nekteck

**SHIATSU FOOT MASSAGER MACHINE
WITH SOOTHING HEAT**



Model No.: NK-FM06

*Questions or Concerns?
Contact support@nekteck.com*

Thank You

Thank you for purchasing Nekteck Shiatsu Foot Massager Machine with Soothing Heat. Nekteck is committed to providing our customers with high-quality products and great services. Should you have any questions or concerns about using your new product, feel free to contact our helpful customer support team at support@nekteck.com.

We hope you enjoy your new product!

Explore more surprises at
 www.nekteck.com

The following pages of this manual have instructions for all the functions and features of your Shiatsu foot massager. Please read the user manual carefully.

TABLE OF CONTENTS

SAFETY INSTRUCTIONS	1
PACKAGE CONTENTS	3
PRODUCT FEATURES	3
SPECIFICATIONS	4
KNOW YOUR SHIATSU FOOT MASSAGER	4
OPERATING INTRODUCTIONS	5
CLEANING AND MAINTENANCE	8
TROUBLESHOOTING	9
LIMITED WARRANTY.....	10
DISCLAIMER	10
CUSTOMER SUPPORT.....	11

SAFETY INSTRUCTIONS

Please read ALL instructions carefully before using the Foot Massager for the first time. We recommend that you keep this manual for future reference, even if you are familiar with the product. Improper use or unauthorized repairs are not permitted for safety reasons and will lead to loss of warranty. The basic safety precautions should always be followed. Failure to comply with this manual may cause fire, electric shock, and other serious injuries.

- This product is not intended to diagnose or treat any medical condition or to replace the treatment from healthcare professionals. Always consult your physician before using any massagers. Please **STOP** using and consult your healthcare provider immediately when you feel uncomfortable during use.
- In case of pregnancy, heart disease, hypertensive disease, osteoporosis, or other illnesses, consult your doctor before using this product.
- If you are dependent on electrical aids, e.g. pacemakers, please be sure to consult your doctor for medical advice before taking a massage.
- **DO NOT** use this product directly on injured, swollen, or inflamed areas or skin eruptions.
- The device is fitted with a heating function and has hot surfaces. People who are sensitive to heat must be careful when using the device.
- This product should **NOT** be used by people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they are supervised or given instructions concerning the use of this product in a safe way and understand the hazards involved.
- This product is **NOT A TOY**. Please ensure adequate supervision when the product is used by or near children.

- **DO NOT** leave the product unattended when plugged in.
- The product is intended for **Household Use ONLY**. Only use this unit according to the intended purpose as stated in the instructions.
- **DO NOT** use the product outdoors.
- **DO NOT** use or store the product near sinks, baths, or showers containing water or near running water.
- **DO NOT** operate the product if any water or other liquids get into the massager.
- **DO NOT** place any part of this appliance on or near a hot area, for example, hot gas, electric burner, or heated oven. Otherwise, the plastic will melt and cause a fire.
- **DO NOT** sit or stand on the massager. This product is not designed to support your full body weight.
- **DO NOT** put any foreign objects into any of the openings on the massager.
- **DO NOT** use pointed or sharp objects to handle the product to avoid damage.
- **Stop** using it immediately if you feel any abnormal or severe pain, uncomfortable high temperature, or if there is a burning smell coming from this massager during use.

Electric Safety:

- Before connecting the device to the power supply, please ensure that the supply voltage stated on the rating plate is compatible with your main supply.
- **DO NOT** use blankets or pillows on the massager during operation, for it may lead to excessive heating and cause fire, electric shock, or injury.

- The appliance can only be used with the power adapter that comes with the appliance.
- **Unplug IMMEDIATELY** and **DO NOT** use the product if it is malfunctioning or is damaged in any way. Inspect the product by a qualified person.
- Unplug this product from the electrical outlet after use and before cleaning.
- **DO NOT** use this appliance if it has been dropped or any part of the appliance (including the plugs, cord, sockets, or power adapter) has been damaged.
- **DO NOT** operate the appliance with wet hands or wet feet to reduce the risk of electric shock.

PACKAGE CONTENTS

- | | |
|--|----|
| • Nekteck Shiatsu Foot Massager Machine with Soothing Heat | X1 |
| • User Manual | X1 |
| • Power Adapter | X1 |
| • Warranty Card | X1 |

PRODUCT FEATURES



Soothing Heat Function



2 Intensity Levels



3 Massage Modes



15-Min Auto Off

SPECIFICATIONS

Product Name	Nekteck Shiatsu Foot Massager Machine with Soothing Heat
Model Number	NK-FM06
Rated Voltage	DC 12V=2.5A
Rated Power	30W
Dimensions	14.4 x 13.2 x 7.1 in / 36.5 x 33.5 x 18.0 cm
Net Weight	Approx. 7lbs / 3.2kg

KNOW YOUR SHIATSU FOOT MASSAGER

Nekteck Shiatsu Foot Massager Machine with Soothing Heat combines kneading massage, air pressure, and heat therapy into this massager to relieve foot soreness and pain. Featuring 3 massage modes and 2 intensity levels, it can deeply massage your soles, heels, and toes and provide the most comfortable massage experience for you. Rejuvenate your feet with the Shiatsu Foot Massager from Nekteck!

MASSAGER COMPONENT



CONTROL PANEL



ON/OFF Button:

For turning on/off the massager.

Heat Button:

For turning on/off the heating function.

Air Pressure Intensity Button:

For switching the air pressure intensity level (low/high).

Massage Mode Button:

For switching the massage mode (M1/M2/M3).

OPERATING INTRODUCTIONS

SETTING UP

- Remove all packing material from the massager, and make sure there is no packaging underneath or around the massager. Check if there are any parts damaged or missing during transportation.
- Unwind and plug the power cord into the DC power jack on the massager.
- Place the massager on a flat floor in front of your chair.
- Connect the power adapter to the socket.

Now your **Shiatsu Foot Massager** is ready for use!

MESSAGE OPERATION

1. Press the ON/OFF Button "  " to turn on the massager. The unit will start a 15-minute massage session by default.

Details of Default Settings

Heating Function	Operation Mode	Air Pressure Intensity
ON	M1 (Rolling & Kneading & Air Pressure Massage)	Low Intensity

2. Switch the massage mode by pressing the Massage Mode Button "", if desired. The massage mode will switch to the next mode after each press, cycling through the following sequence: M1→ M2 → M3. Meanwhile, the corresponding indicator light will light up in green.

Details of Massage Modes

Massage Mode	Feature
M1	Rolling & Kneading & Air Pressure Massage
M2	Rolling & Kneading Massage
M3	Air Pressure Massage Only

3. Turn off or restart the heating function, if desired, by pressing the Heat Button "". The corresponding red indicator light will turn off/on.

4. Switch the intensity level between low and high, if desired, by pressing the Air Pressure Intensity Button "". The corresponding indicator light below "L" or "H" will light in green.

Notes:

- The heating function will turn on automatically after switching the massage mode.
- The massager will turn off automatically after a 15-minute massage session to prevent overheating.
- Switching the massage mode or turning on/off the heating function will not affect the timing of the massage session.
- In the M2 Mode, the air pressure function is deactivated and locked.

Cautions:

- Each individual should NOT use the massager or the heating function for over 15 minutes at a time, and NOT use the massager for over 30 minutes a day.
- Allow the massager to cool down for 5 minutes between uses. Excessive use could cause the appliance to overheat and reduce its lifespan.
- If you want to end the massage, press the ON/OFF Button.
- DO NOT attempt to stand on this foot massager. Use ONLY when you are sitting.
- The massager is designed for deep kneading massage which may be uncomfortable for people who are not used to it. If so, we recommend that you wear thick socks to get moderate pressure and improve your massage experience.

CLEANING AND MAINTENANCE

TO CLEAN

The Massager:

- Unplug the massager and allow it to cool down before cleaning.
- Clean the surface only with a soft, slightly damp sponge or cloth.
- DO NOT allow water or any other liquids to get into the massager.
- DO NOT immerse the massager in any liquid to clean.
- DO NOT use abrasive cleaners, brushes, or strong chemicals to clean the massager, for it might cause damage to the product.

The Foot Cover:

- The foot cover can be removed for cleaning
- Hand wash with water temperature below 30°C
- Do not bleach
- Do not tumble dry
- Do not iron
- Do not dry clean

TO STORE

- Place the massager in its package box or store it in a safe, dry, and cool place.
- Avoid sharp edges and pointed objects to protect the product from scratching or damaging.
- DO NOT wrap the power cord around the product to avoid breakage.
- Keep the massager away from high temperatures.

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the Shiatsu Foot Massager still does not operate correctly, it may be defective. Please contact a qualified technician. DO NOT try to repair it by yourself. Otherwise, there is a risk of electric shock.

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
The product does not work.	The ON/OFF button is not pressed.	Press the ON/OFF button.
	The adapter is not plugged in properly.	Plug the adapter properly.
	The DC connector is not connected properly to the DC power jack.	Check and reconnect the connector and jack port.
The product suddenly stops working.	The product would turn off automatically after a 15-minute session. This is normal.	If you want to start another session, press the ON/OFF button again.
	The product is overused and the overheat protection turns on.	Unplug the product and let it cool down completely before using it again.
The product stops heating.	The heat button has not been pressed.	Press the Heat button and the indicator light should light in red.
The massage intensity is too high or too low.	Your foot is positioned at the wrong angle.	Adjust the contact angle to get the moderate intensity.
The product is abnormally warm.	The product is likely to be overused.	Unplug the product and let it cool down completely before using it again.

LIMITED WARRANTY

Nekteck provides all of our customers with a warranty of 12 Months from the date of purchase. Please contact our customer service team at support@nekteck.com if you have any questions.

Order ID: _____

Date of Purchase: _____

*For your reference, we recommend that you record your order number and date of purchase.

DISCLAIMER

Nekteck and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some countries or states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you.

IMPROPER USE OF NEKTECK'S PRODUCTS INVOLVES SERIOUS RISKS INCLUDING INJURY AND DISABILITY. YOU UNDERSTAND THAT BY KEEPING, USING, OR ALLOWING USE OF NEKTECK'S PRODUCTS, YOU AGREE TO THE FOLLOWING:

(1) NEKTECK ACCEPTS NO RESPONSIBILITY FOR ANY INJURY WHICH MIGHT OCCUR WHILE USING NEKTECK'S PRODUCTS.

(2) USE LIMITATION. YOU MAY NOT MODIFY AND REPRODUCE NEKTECK'S PRODUCTS. YOU SHALL CAREFULLY INSPECT NEKTECK'S PRODUCTS BEFORE EACH USE TO ENSURE IT HAS NOT BEEN DAMAGED AND IS FULLY FUNCTIONAL.

CUSTOMER SUPPORT

Feel free to contact our friendly Customer Support Team if you have any questions or concerns regarding your new product. Your satisfaction is our priority.



Email: support@nekteck.com

We will reply to your message within 24 hours!

Please include your Order ID in your email when you are contacting Customer Support for faster solutions.

Nekteck