

beper

 
- SCALDAVIVANDE ELETTRICO - MANUALE DI ISTRUZIONI
- ELECTRIC LUNCH BOX - USE INSTRUCTIONS
- CHAUFFE-PLATS ÉLECTRIQUE - MANUEL D'INSTRUCTIONS
- ELEKTRISCHER SPEISEWÄRMER - BETRIEBSANLEITUNG
- CALIENTAPLATOS ELÉCTRICO - MANUAL DE INSTRUCCIONES
- ΗΛΕΚΤΡΙΚΟ ΔΟΧΕΙΟ ΦΑΓΗΤΟΥ - ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ
- CUTIE ELECTRICĂ PENTRU PRÂNZ - MANUAL DE INTRUCȚIUNI



Cod.: BC.160A



Cod.: BC.160G



ITALIANO		pag. 3
ENGLISH		pag. 7
FRANÇAIS		pag. 11
DEUTSCH		pag. 15
ESPAÑOL		pag. 19
ΕΛΛΗΝΙΚΗ		pag. 23
ROMÂNĂ		pag. 27

For further information and/or for instructions for use in other languages, please visit: beper.com



PRECAUTIONS

READ THE FOLLOWING INSTRUCTIONS CAREFULLY, SINCE THEY GIVE YOU USEFUL SAFETY INFORMATION ABOUT INSTALLATION, USE AND MAINTENANCE AND HELP YOU AVOID MISHAPS AND POSSIBLE ACCIDENTS.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable.

The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources. It is recommended not to throw these packing material in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

The appliance can be damaged if the voltage is not correct.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

Do not use the appliance if the cable or the plug shows any damages. Do not use the appliance after a possible irregular working. In this case, switch it off and do not break it open. Refer to an authorized Beper after-sale service for repair and require original spare parts only. Failing to follow these instructions may impair the safety of your appliance.

This appliance is to be destined to its special purpose only. Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not use the appliance near explosives, highly flammable materials, gases or burning flames.

DO NOT ALLOW CHILDREN, DISABLED PEOPLE OR EVERY PEOPLE WITHOUT EXPERIENCE OR TECHNICAL ABILITY TO USE THE APPLIANCE IF THEY ARE NOT PROPERLY WATCHED OVER. CLOSE SUPERVISION IS NECESSARY WHEN ANY APPLIANCE USED BY OR NEAR CHILDREN.

Do not hold the appliance with wet hands or feet.

Never use any accessories but those provided for by Beper. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.

Do not use the appliance near the bath, the shower, the wash-basin or anywhere water can turn out to be a source of danger.

Do not pull the mains cable or the appliance itself when disconnecting the plug from the socket.

Do not let cord hang over edge of table, or touch hot surface.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail. Do not use outdoors.

Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

If you decide not to use the appliance any longer, make it unserviceable by simply cutting the supply cable after disconnecting the plug from the socket. Also make any dangerous parts unserviceable, especially for children who could play with the appliance.

Let other potential users read these instructions.

Keep these instructions

WARNING:

- Never pour water directly into the appliance.
- Pay attention of the steam coming out of the appliance while opening when this hot
- Do not place the appliance near sources of heat, flames, or flammable materials.
- Do not operate the appliance without food inside.

- Do not wrap the food with films, aluminum foil or bags.
- Use the appliance only to heat food
- Do not heat in the microwave oven.

DESCRIPTION OF THE ITEM: Fig.A

1. Steam outlet
2. Cover lock
3. Handle
4. Cover
5. Fork and spoon
6. Container cover
7. Lunch box container
8. Main body
9. ON/OFF button
10. Indicator light
11. Car plug

INSTRUCTION :**HOME USE**

Before use ensure that the containers are clean and dry; then pour food inside them. Insert the containers into the appliance, fit the cover and lock it with the clips. Connect the appliance to the socket and turn on the product with the ON / OFF switch. The light on indicates that heating has started. Note: The heating time depends on the type and temperature of food, and varies from 25 to 40 minutes. If the food is chilled the heating time may increase. Disconnect the appliance from the electrical outlet before eat the food.

THE CONTAINER IS NOT HERMETIC.**CAR USE :**

Operation is same as above indicated just before switching on, plug in the car adaptor into the socket and connect it to the cigarette lighter.

By car the heating time of the food increases slightly.

MAINTANANCE AND CLEANING :

Before proceeding with any cleaning operation, please:

1. Disconnect the power socket
2. Let the product cool down

Containers should be washed immediately after use to avoid any annoying odors.

Do not use abrasive brushes or sponges to clean the containers.

Only the containers can be washed in water, all other components (power cord excluded) should be cleaned with a slightly moistened soft cloth.

Do not wash the containers and other components in the dishwasher.

TECHNICAL DATA:

Voltage 220-240V ~ 50 / 60Hz (home use) - DC12V (use in car)

Power: 35W (home use) - 50W (use by car)

Capacity 1,6L

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

The guarantee is valid only with a guaranty certificate and proof of purchase (fiscal receipt) indicating the date of purchase and the model of the appliance

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

GUARANTEE CONDITIONS

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- The appliance has not been tampered with, otherwise it is not maintainable.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) the aesthetic parts are excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, carelessness, wrong or improper installation, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

In any case, if the part to be replaced for defect, breakage or malfunction is an accessory and/or a detachable part of the product, Beper reserves the right to replace only the very part in question and not the entire product

TECHNICAL ASSISTANCE

Even after the guarantee period we will always pay attention to repairs for defected appliances.

For technical assistance and/or repairs after the guarantee period you can directly contact the below address:

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR ATER SALES DEPARTMENT BEPER.
E-MAIL assistenza@beper.com WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.