 
 




PRO SERIES
ELECTRIC FILLET KNIFE
CORDLESS // 4 BLADE SET
INSTRUCTION BOOKLET

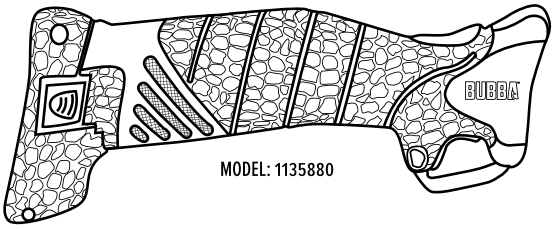

COMPATIBLE BLADE SIZES

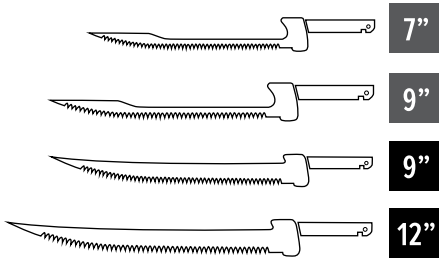

www.bubba.com @BUBBA
#bubba #theultimatelifestyle #bubbahooked #watertoplate

CLEANING

BLADE

WARNING: USE EXTREME CAUTION WHEN HANDLING A BUBBA® BLADE. ALWAYS UNPLUG THE BUBBA® FILLET KNIFE PRIOR TO CLEANING, INSERTING OR REMOVING THE BLADES.

1. ONCE THE TRIGGER LOCK HAS BEEN ENGAGED, HOLD THE HANDLE IN ITS NATURAL FORM WITH ONE HAND AND GRIP THE FINGER GUARDS OPPOSITE THE CUTTING EDGE WITH THE OTHER.
2. SLIDE THE BLADE RELEASE TOWARDS THE HANDLE AND GENTLY REMOVE THE BLADES.
3. HOLD EACH BLADE BY THE TANG EXTENSION AND CAREFULLY WASH WITH SOAP AND WATER.
4. RINSE AND DRY BEFORE STORING.

HANDLE

WARNING: ALWAYS UNPLUG and engage THE BUBBA® FILLET KNIFE PRIOR TO CLEANING. NEVER SUBMERGE THE HANDLE IN WATER OR ALLOW THE HANDLE TO MAKE CONTACT WITH WET SURFACES. THIS COULD CAUSE ELECTRICAL SHOCK OR FIRE.

1. USE A WARM, DAMP CLOTH WITH A SMALL AMOUNT OF MILD SOAP TO CLEAN ALL SURFACES OF THE KNIFE HANDLE.
2. ONCE FINISHED, USE A CLEAN, DAMP CLOTH TO DRY.

CHARGING

WARNING: ELECTRICAL SHOCK OR FIRE CAN OCCUR AT ANY TIME IF HANDLE BECOMES WET. THIS PRODUCT IS DESIGNED FOR SAFE USE WITH 110V POLARIZED DIRECTIONAL OUTLETS ONLY. MODIFYING THIS PRODUCT FOR USES OTHER THAN ITS INTENDED PURPOSE WILL VOID WARRANTY.

- ▶ BOTH BATTERIES HAVE BEEN INSPECTED AND HAVE AN APPROXIMATE 20% CHARGE FROM THE FACTORY. WE RECOMMEND APPLYING A FULL CHARGE BEFORE USE.
- 1. PLUG THE WALL CHARGER INTO A STANDARD 110V POLARIZED DIRECTIONAL OUTLET.
- 2. BATTERY CAN BE FULLY CHARGED IN APPROXIMATELY FIVE TO SIX HOURS.
- 3. USE THE BATTERY INDICATOR LOCATED ON THE BATTERY TO CHECK CHARGE STATUS. THE UNIT WILL SHUT OFF WHEN FULLY CHARGED.
- ▶ DO NOT USE AN EXTENSION CORD. PLUG CHARGER DIRECTLY INTO AN ELECTRIC OUTLET. USE ONLY WITH THE CHARGER PROVIDED WITH THE APPLIANCE. DO NOT ATTEMPT TO USE THIS CHARGER WITH ANY OTHER PRODUCT. LIKEWISE, DO NOT ATTEMPT TO CHARGE THIS APPLIANCE WITH ANY OTHER CHARGER.

WARNING: RISK OF FIRE AND BURNS. DO NOT OPEN, CRUSH, HEAT ABOVE (MANUFACTURER’S SPECIFIED MAXIMUM TEMPERATURE) OR INCINERATE. FOLLOW MANUFACTURER’S INSTRUCTIONS.

 
- ▶ DO NOT INCINERATE THIS APPLIANCE EVEN IF IT IS SEVERELY DAMAGED. THE BATTERIES CAN EXPLODE IN A FIRE.



THIS BUBBA® PRODUCT IS WARRANTED TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP FOR A PERIOD OF ONE (1) YEAR FROM THE DATE OF MANUFACTURE OR, UPON PRESENTMENT OF A DATED SALES RECEIPT, FROM THE DATE OF ORIGINAL RETAIL PURCHASE.
FOR COMPLETE WARRANTY TERMS AND CONDITIONS, PLEASE VISIT: WWW.BUBBA.COM/WARRANTY
FOR WARRANTY SERVICE CALL CUSTOMER SERVICE AT: 1-844-486-7265 OR VISIT WWW.BUBBA.COM
FOR A RETURN AUTHORIZATION NUMBER (RMA).



HERE IS ALL THE INFORMATION YOU WILL NEED
WHEN YOU ARE READY TO PURCHASE YOUR
REPLACEMENT BLADES:

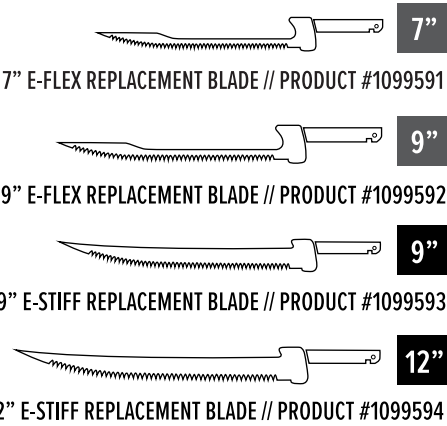

WARNING – BLADES ARE SHARP AND POTENTIALLY DANGEROUS. ALWAYS KEEP IN A SAFE PLACE AWAY FROM CHILDREN. ONLY USE FOR INTENDED PURPOSE. CUT AWAY FROM BODY WHEN USING.
 WARNING – CANCER AND REPRODUCTIVE HARM—
WWW.P65WARNINGS.CA.GOV

FILLET YOUR CATCH

WARNING: USE EXTREME CAUTION WHEN HANDLING A BUBBA® BLADE. ALWAYS ENGAGE TRIGGER LOCKOUT BEFORE HANDLING BLADES.

- ▶ PRESS THE TRIGGER LOCK PIN AS INDICATED BY THIS SYMBOL TO LOCK THE TRIGGER. PRESS THE TRIGGER LOCK PIN AS INDICATED BY THIS SYMBOL TO UNLOCK THE TRIGGER.

1. PLACE YOUR CATCH ON A CUTTING BOARD OR SUITABLE SURFACE FOR CLEANING FISH.
2. SWITCH THE TRIGGER LOCK INTO THE “ON” POSITION.



3. HOLD YOUR CATCH WHILE LIFTING THE PECTORAL FIN, BEGIN TO POWER THROUGH THE CATCH UNTIL YOU REACH THE SPINE.



4. TURN THE BLADE 90° AND WHILE MAINTAINING THE BLADE AT THE LATERAL LINE OF THE FILLET, POWER DOWN TOWARDS THE TAIL FIN, BUT DO NOT CUT THROUGH IT.
5. ONCE WITHIN A 1/4” OR SO FROM THE TAIL FIN, USE THE BLADE TO FLIP THE FILLET AWAY FROM THE CATCH.
6. ANGLE THE BLADE SLIGHTLY TOWARDS THE OUT SKIN AND POWER THROUGH THE FILLET.
7. ONCE THE FILLET HAS BEEN REMOVED FROM THE SKIN, USE THE TIP OF THE BLADE TO REMOVE THE RIB CAGE.
8. TURN CATCH OVER, REPEAT-COOK-N-EAT.

BLADE REMOVAL

1. HOLD THE HANDLE IN ITS NATURAL FORM WITH ONE HAND AND GRIP THE FINGER GUARDS FROM THE NON-SHARPENED SIDE OF THE BLADES WITH THE OTHER.



2. SLIDE THE BLADE RELEASE AWAY FROM THE BLADES AND GENTLY REMOVE THE BLADES.

IMPORTANT SAFEGUARDS

- ▶ THIS APPLIANCE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) TO REDUCE THE RISK OF SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT MODIFY THE PLUG IN ANY WAY.

WARNING: IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- A) Read all instructions.
- B) To protect against risk of electrical shock, do not put this appliance in water or other liquid. Do not operate knife in water or under running water.
- C) This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
- D) Engage the trigger lock before assembling or disassembling parts and before cleaning. To unplug from the recharging cord, grasp the plug and pull from the outlet. Never pull from the charging cord.
- E) Avoid contacting moving parts.
- F) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or, is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- G) The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- H) Do not use outdoors
- I) Do not let charging cord hang over edge of table or counter or touch hot surfaces.
- J) Do not let charging cord contact hot surface, including the stove.
- K) REMOVE BLADES BEFORE AND/OR DURING CHARGING.
- L) DO NOT USE WHEN CHARGING.
- M) Do not touch surfaces that may be hot. Use handles or knobs provided.
- N) Do not place on or near an open flame nor other heat sources.
- O) Do not use appliance for other than intended use.
- P) BLADES ARE SHARP. HANDLE CAREFULLY. ALWAYS HANDLE BLADES WITH HAND AWAY FROM CUTTING EDGE. ALWAYS STORE BLADES WITH CUTTING EDGE AWAY FROM YOU.
- Q) Carefully route the power supply cord to avoid damage from the knife blades.
- R) Check hopper for presence of foreign objects before using.
- S) **SAVE THESE INSTRUCTIONS.**

CARE AND BLADE INSTALLATION

- ▶ SAVE THESE INSTRUCTIONS. THIS APPLIANCE IS ETL LISTED.
- ▶ THERE ARE NO USER-SERVICEABLE PARTS INSIDE. SERVICING SHOULD ONLY BE DONE BY AN AUTHORIZED SERVICE FACILITY (SEE WARRANTY).
- ▶ THE MOTOR AND GEARS NEVER NEED LUBRICATION.

WARNING: SHARP. EDGE OR POINT CONTACTING A PERSON OR ANIMAL MAY RESULT IN CUTTING, STABBING, PUNCTURE, SLICING OR PENETRATING INJURY OR DEATH.

WARNING: IMPROPER USE, CHISELING, ICE PICKING, PRYING, APPLYING FORCE ONTO BACK OF BLADE, OR HAMMERING MAY RESULT IN INJURY. DO NOT USE IF KNIFE IS DULL, BENT, CHIPPED, LOOSE AT ITS PIVOT, CORRODED, DAMAGED OR IF THE HANDLE IS BROKEN OR LOOSE.

WARNING: BE CAREFUL WHEN SHEATHING AND USING. DISCONTINUE USE OF ANY KNIFE WHERE THE RETENTION DEVICE IS NOT OPERATING PROPERLY. USING A KNIFE WITH A DAMAGED RETENTION MECHANISM CREATES A LACERATION HAZARD AND COULD RESULT IN INJURY OR DEATH.

WARNING: HANDLE WITH CARE. A DROPPED KNIFE WHICH CONTACTS YOUR BODY CAN RESULT IN INJURY OR DEATH. DO NOT PICK IT UP BY THE BLADE. NEVER CARRY A KNIFE UNLESS THE BLADE IS SHEATHED AS INJURY OR PROPERTY DAMAGE MAY OCCUR. WHEN NOT IN USE, STORE IN ITS SHEATH AND IN A SAFE PLACE. KEEP OUT OF REACH OF CHILDREN.

1. WASH BLADES BEFORE INITIAL USE WITH SOAP AND WATER.
2. CHOOSE AN APPROPRIATELY SIZED BLADE FOR YOUR CATCH.
3. ASSEMBLE THE BLADES BY CONNECTING THE RIVET GUIDES AND THEN POSITION THE BLADES PARALLEL TO ONE ANOTHER.



4. CAREFULLY GRIP THE ASSEMBLED BLADE BY THE FINGER GUARD AND OPPOSITE THE CUTTING EDGE.
5. KEEP THE PALM ON THE DULL SIDE OF THE BLADE AND THE FINGERS AWAY FROM THE SHARP EDGE.



6. WITH TRIGGER LOCK ENGAGED, ALIGN THE REAR BLADE TANGS AND INSERT INTO THE ELECTRIC FILLET KNIFE HANDLE BODY.



7. ONCE INSTALLED, THE BLADE RELEASE LEVER SHOULD REMAIN AT THE MOST FORWARD POSITION OF THE HANDLE.