


ADDENDUM


Your Dualit Toaster is fitted with a patented Thermal Protection Device.

TO PREVENT ACTIVATING THE THERMAL PROTECTION DEVICE:


- Ensure your toaster is situated in an area with at least 10cm of space to the left, right and back of the toaster.
- Use the toaster clear of overhanging cupboards and away from any flammable materials.

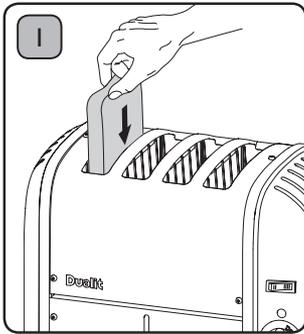


Always load bread into the toaster starting from the left hand slot.

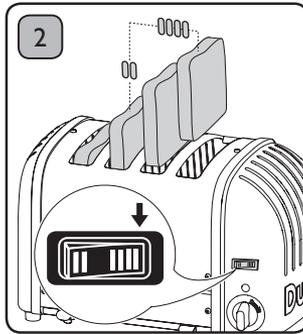

Always use the appropriate setting for the number of slices of bread to be toasted.

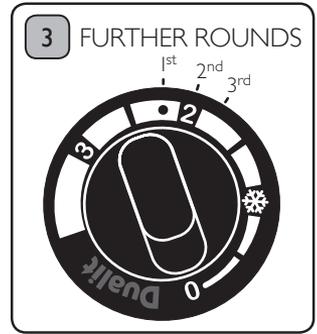

Be mindful of reducing the toasting time if the toaster is already warm from previous use, as the bread toasts faster on 2nd and 3rd cycles.

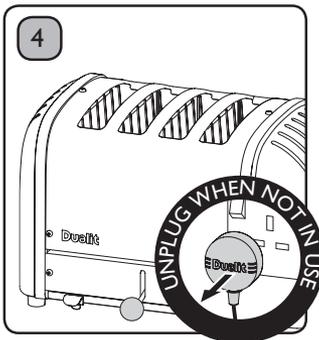

Always unplug the toaster after use.

NOTE: Be mindful that repeated use of the Warming Rack without allowing the toaster to fully cool between cycles may cause the device to activate.


RESETTING THERMAL FUSE

If the toaster neon illuminates, but the elements fail to warm up or if there is an audible 'click' above the normal ticking of the timer from the toaster while it is still operating, you may have activated the **Thermal Protection Device**.


Before resetting you must ensure that there is not a fault within the appliance. **Do not reset** unless a qualified electrician has examined the toaster and verified that the **Selector Switch, Timer and all other Components** are in good working order.

The **Thermal Protection Device** can be reset by allowing the toaster to fully cool, **unplugging the toaster** from the wall socket and following instructions below.


Resetting the Thermal Protection Device should only be carried out by a qualified electrician. The toaster must be Portable Appliance Tested following reset of the Thermal Protection Device. Should you require any further assistance call Dualit's Service Department on **01293 652 500**.

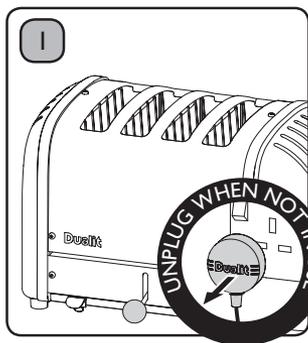


Unplug the toaster and allow to fully cool.

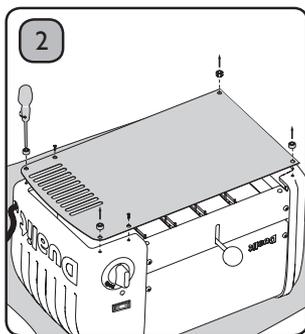


Remove the crumb tray and toaster base plate to access the fuse.

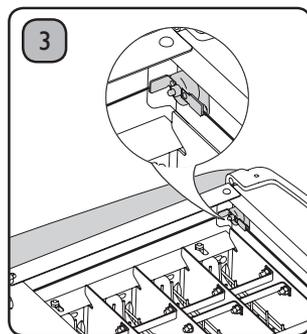


The fuse can be located in the rear corner of the toaster body.

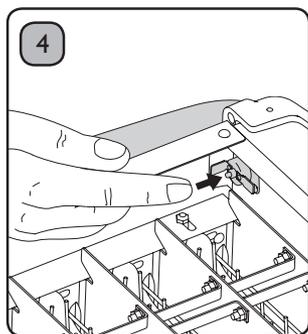

The fuse is reset by depressing the small white button on its face.

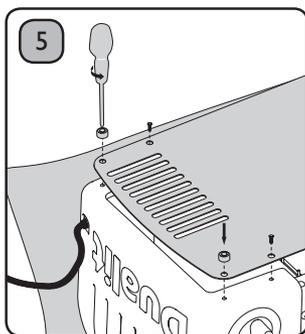

Refix the base plate and return the crumb tray.

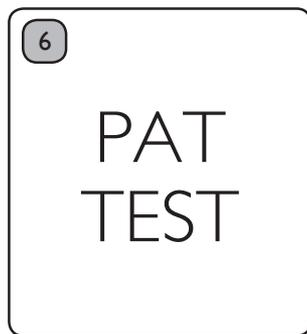

The appliance must be PAT tested before use.