

T E D B A K E R

L O N D O N

No Ordinary Designer Watch

Ted Baker is manufactured using the highest quality materials and craftsmanship. The incorporation of both traditional and forward thinking design philosophies result in a unique and modern product.

LIMITED LIFETIME WARRANTY

Thank you for choosing a Ted Baker precision timepiece. This Ted Baker Watch is warranted to you, the owner, for your lifetime against all defects in material or workmanship. Limited lifetime warranty will be honored only by Service Center in the United States, Canada, Caribbean as well as Authorized Duty Free and Military Dealers. Service centers located in other parts of the world will only provide warranty service for the first 2 years. However, the warranty does not apply to normal wear and tear or abuse and excludes battery, case, crystal, strap, malfunction and deterioration resulting from accident, negligence and tampering. Ted Baker Watches are water-resistant. Special gasket and crown protectors have been used in the creation of these time pieces to ensure their resistance to water. In the event of a defect or malfunction, it will be repaired or replaced at our option. **PLEASE DO NOT SEND CASH.** No additional charge will be made unless additional servicing is necessary for reasons beyond our control such as accident, misuse, neglect or replacement of parts not warranted such as battery, case, crystal, and strap. In this event, please see Watch Repair section in the back of this booklet.

BATTERY LIFE



The battery in your Ted Baker Watch should last approximately 2 years. When the battery expires, replace it as soon as possible to prevent any malfunction. For battery replacement, we recommend that you contact an authorized Ted Baker Dealer. The battery type is found on the caseback.

WATER RESISTANCE


- Before using the watch in or near water, be sure that crown is pushed in completely.
- If the watch is underwater or wet, do not use pushers, rotating bezels or crowns.
- If the watch becomes wet, wipe it dry as soon as possible.
- If the watch comes in contact with salt water, rinse case and bracelet immediately and thoroughly under tap water and wipe dry with a soft cloth.
- Do not take your watch into a Hot Tub or Sauna. Extreme heat and pressure may cause your watch to lose its water resistance.
- Water resistance is not permanent. In the course of time, as your case becomes worn, the water resistance of the watch may decrease.

WATER RESISTANCE	SUITABLE ATMOSPHERE
30 Meters / Or Watch Simply Marked Water Resistance	Washing Hands, Showering
50 Meters	Light Swimming
100 Meters	Most Water Sports—But Not Deep Water Diving

For additional languages please visit our customer service website at www.genevawatchgroup.com.

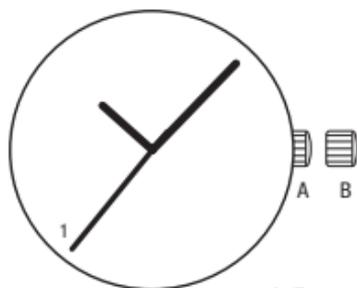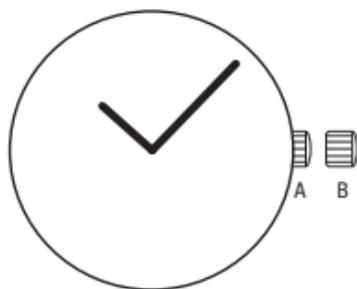TWO-HAND / THREE-HAND MODELS


1.Second Hand

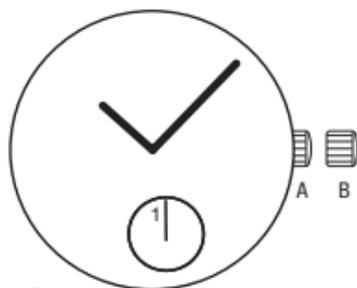**TO SET THE TIME:**

1. Pull the crown out to the first click position B.
2. Turn the crown to set the time.
3. Push the crown back to position A.

THREE-HAND MODELS WITH BIG DATE

1. Calendar
2. Second Hand

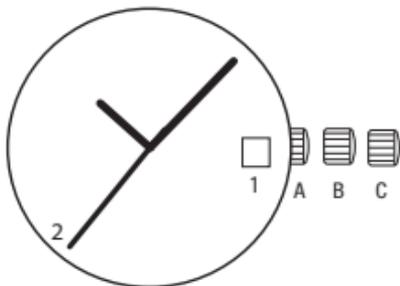

TO SET THE TIME:

1. Pull the crown out to the second click position C.
2. Turn the crown to set the time.
3. Push the crown back to position A.


TO SET THE DATE:

1. Pull the crown out to the first click position B.
2. Turn the crown counter-clockwise to set the date.
3. Push the crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

ONE-EYE MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Date Hand

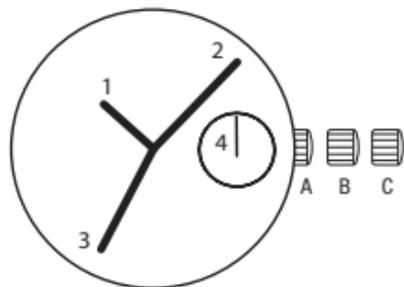

TO SET THE TIME:

1. Pull the crown out to the second click position C.
2. Turn the crown to set the time.
3. Push the crown back to position A.


TO SET THE DATE:

1. Pull the crown out to the first click position B.
2. Turn the crown counter-clockwise to set the date.
3. Push the crown back to position A.


NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TWO-EYE MULTI-FUNCTION MODELS

1. Second Hand
2. Day Hand
3. Date Hand

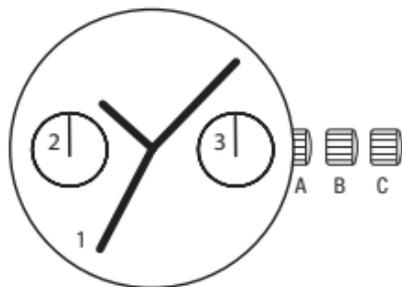

1. Second Hand
2. Date Hand
3. 24 Hour Hand

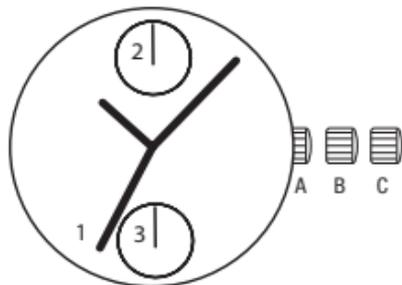

TO SET THE DAY (OF THE WEEK):

1. Pull the crown out to the second click position C.
2. Turn the crown clockwise to set the day.
3. Push the crown back to position A.

NOTE: The Day Hand will move together with the Hour Hand and Minute Hand. Keep turning the crown until the desired day has been reached.

TO SET THE TIME:

1. Pull the crown out to the second click position C.
2. Turn the crown to set the time.
3. Push the crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.


TO SET THE DATE:

1. Pull the crown out to the first click position B.
2. Turn the crown counter-clockwise to set the date.
3. Push the crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

THREE-EYE MULTI-FUNCTION MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. Date Hand
5. Day Hand
6. 24 Hour Hand

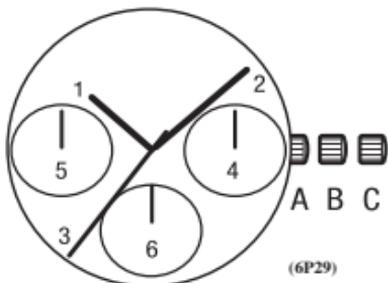

TO SET THE DAY (OF THE WEEK):

1. Pull crown out to second click position C.
2. Turn crown clockwise to set day.
3. Push crown back to position A.

NOTE: The Day Hand will move together with the Hour Hand and Minute Hand. Keep turning the crown until the desired day has been reached.

TO SET THE TIME:

1. Pull crown out to second click position C.
2. Turn crown to set time.
3. Push crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.


TO SET THE DATE:

1. Pull crown out to first click position B.
2. Turn crown counter-clockwise to set date.
3. Push crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand or
Chronograph 1/20
Second Hand
4. 24 Hour Hand
5. Chronograph Minute Hand
6. Chronograph Second Hand
7. Calendar

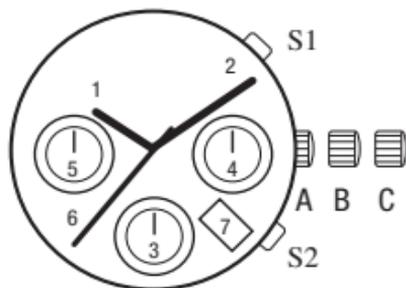

S1 – Chronograph start/stop button

S2 – Chronograph reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph 1/20 Second Hand (for certain models only), Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull the crown out to the second click position C.
2. Press the S1 button to set the Chronograph Second Hand. Holding down the button will allow quick advance.
3. Press the S2 button to set the Chronograph 1/20 Second Hand (for certain models only). Holding down the button will allow quick advance.
4. Push the crown back to position A.

TO SET THE TIME:

1. Pull the crown out to the second click position C.
2. Turn the crown to set the time.
3. Push the crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO SET THE DATE:

1. Pull the crown out to the first click position B.
2. Turn the crown counter-clockwise to set the date.
3. Push the crown back to position A.

NOTE: Do not set the date between 9:00 P.M. and 1:00 A.M. Otherwise, the date may not change properly on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, then set the date and then reset to the correct time.

TO USE THE CHRONOGRAPH (STOPWATCH):


Press the S2 button to switch the watch to chronograph mode,

1. Press the S1 button to start counting.
2. To stop counting, press the S1 button once. Press the S1 button again to resume from where it left off.
3. To reset to zero, press the S1 button to stop counting and then press the S2 button.

NOTE: For certain models, the chronograph is able to measure and display time in $1/20$ second units up to maximum of 1 hour. The retrograde Chronograph $1/20$ Second Hand keeps counting continuously for 60 seconds after starting, and then stops at zero position. When the S1 button is pressed to stop the chronograph, the Chronograph $1/20$ Second Hand will quickly advance to display the measured time.

THREE-EYE CHRONOGRAPH MODELS

1. Hour Hand
2. Minute Hand
3. Second Hand
4. 24 Hour Hand
5. Chronograph Second Hand
6. Chronograph Minute Hand

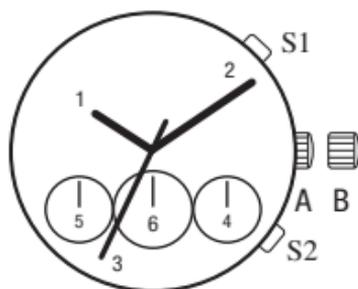

S1 – Chronograph start/stop button

S2 – Chronograph reset button

TO ADJUST THE CHRONOGRAPH HANDS POSITION:

Before setting the time, check if the Chronograph Second Hand and Chronograph Minute Hand are at the zero position.

If the chronograph is in use, press the button in the following order to reset it, and then check if the chronograph hands have returned to zero position.

If the chronograph is counting:	S1 → S2
If the chronograph is stopped:	S2

In case one or several chronograph hands are not at the zero position due to certain reasons (e.g. following a battery change), that needs to be adjusted.

1. Pull the crown out to the first click position B.
2. Press the S1 button to set the Chronograph Second Hand and Chronograph Minute Hand (mechanically coupled). Holding down the button will allow quick advance.
3. Push the crown back to position A.

TO SET THE TIME:

1. Pull the crown out to the first click position B.
2. Turn the crown to set the time.
3. Push the crown back to position A.

NOTE: The 24 Hour Hand will also be set during time setting.

TO USE THE CHRONOGRAPH (STOPWATCH):

For the measurement of elapsed time,

1. Press the S1 button to start counting.
2. To stop counting, press the S1 button once. Press the S1 button again to resume from where it left off.
3. To reset to zero, press the S1 button to stop counting and then press the S2 button.

NOTE: The chronograph is able to measure and display time in 1 second unit up to maximum of 29 minutes 59 seconds. The chronograph will stop automatically after running continuously for 30 minutes.

WATCH REPAIR AND SERVICE

Contact the International Service Center for your country listed at the back of this booklet.

Warranty Certificate

Date of Purchase

Model Number

Authorized Dealer Information

INTERNATIONAL SERVICE CENTERS

Argentina	WATCH LAND S.A. +5411 4373 0100	Bme. Mitre 1617-8th Floor 1037 Buenos Aires, Argentina
Australia	SEIVERS AUSTRALIA PTY LTD +61 3 9600 4984	Level 11, 343 Little Collins Street, Melbourne Vic, Australia
Austria	D. ZAFIR HANDELSFIRMA IMPORT – EXPORT +431 317 8224	Porzellangasse 27, A-1090 Wien, Austria
Croatia	CORDIS D.O.O. +385 1 37 33 357	Malesnica 16 10000 Zagreb, Croatia
Czech Republic	WOW LASO OSTRAVA +420 775 560 150	Masarykovo nam. 15. 728 53 Ostrava
France	ETS CHARRAUD +33 556 841084	82, Rue du 14 Juillet 33400 Talence, France
Greece	TIMEPIECE +30 210 6828362	72, Pentelis, Haladrin, Athens, Greece
Hong Kong	ECON MARKETING (HK) LTD. + 852 2735 9980	Unit 404, 4/F., Nan Fung Commercial Centre, 19 Lam Lok Street, Kowloon Bay, Hong Kong
Hungary	WDL SERVICE KFT. +361 341 1042	Millenium Center 1/F., Váci utca 19-21. H-1052 Budapest, Hungary

Iceland	ECHO EHF +354 515 9999	Skútuvogur 10-D, 104 Reykjavik, Iceland
Korea	A-DONG A/S CENTER +02 774 0240 0242	254-51, Huam-Dong, Youngsan-Gu, Seoul, Korea
Kuwait	ALYASRA FASHION +965 22244515	On Time Marina Mall, Salmiya, Kuwait City, Kuwait
Lavita	TOPUS RIGA LTD (BRANDWATCH) +371 278 52855	Mukusalas iela 71, Riga, Latvia
Lebanon	ETS. HAGOP ATAMIAN +961 1 256655	Dora Highway, Vartanian Center, 3/F, PO Box 80592 B Hammoud, Bernut, Lebanon
Lithuania	TOPUS MOBILE +370 620 53299	Neries kr. 18, Kanusas, Lithuannia
Poland	STAN WATCH POLAND +22 621 48 33	Aleja Róż 7 00-556 Warszawa
Russia	CHAS-Y +7 495 232 07 03	Volokolamskoe shosse, Bldg.2, 109544 Moscow, Russia
Saudi Arabia	ALYASRA FASHION +966 2 6601166 EXT 156	Ontime, Albasateen Mall Tahlia St, Jeddah Saudi Arabia

Slovakia	LUDOVIT NAGY- QUARTZ-SERVIS +421 317 805 750	Revolučná 971/18 924 01 Galanta, Slovakia
Turkey	MERKEZ SAAT TIC.LTD.STI. +90 212 513 52 91 +90 212 520 03 02	Mimar Kemalettin Cd. Ersoy Han Kat:4 Sirkeci Istanbul, Turkey
UAE	HOUR CHOICE LLC +971 4 3531400	Rivoli Group, PO Box 121, Dubai, UAE
United Kingdom	PEERS HARDY UK LTD. +44 121 5 241 400	Tompion House, 25 Birmingham Road, West Bromwich, B70 6RR, UK
United States	GENEVA WATCH GROUP +1 800 874 0907	47-14 32nd Place Long Island City, NY 11101, USA



www.tedbaker.com

TEWB0410