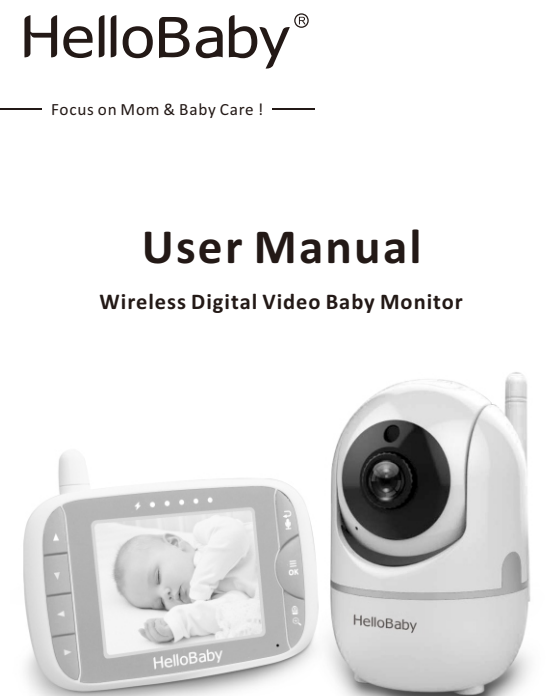


# 英语说明书(HB65)

尺寸:450\*120MM  
说明书为折叠式  
料号：20040203C  
类型：环保  
版本：1.3

设计	审核	审批
王勇	刘华东	HSLee
2019/02/15	2019/02/19	2019/02/19



**Model: HB65**

www.hellobaby.net.cn  
service@hellobaby.net.cn

Thank you for purchasing the HelloBaby baby monitor. HelloBaby is the best device for monitoring your baby at all time. you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom. If you have any questions or concerns, please feel free to email us at service@hellobaby.net.cn

Please retain your original purchase receipt for record purpose. For warranty service of your HelloBaby product, you will need to provide a copy of your original purchase receipt to confirm warranty status. Registration is not required for warranty coverage. Before you use the product, we recommend you fully charge the battery in the parent unit, so that it continues to work even when you disconnect it from the power supply and take it to another location. Please read the safety instructions.

**Please make sure you have the following in your package**

- Parent unit x 1
- Camera unit x 1
- User manual x 1
- Wall-mounting kit x 1
- Power Adapter x 2

**1. SAFETY INSTRUCTIONS**

**CAUTION:** Keep the device away from children.

**Strangulation Hazard:** Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

**Choking Hazard:** This product contains small parts, so exercise care when unpacking and assembling the product.

**Read and keep to instructions:** All the safety and operating in structions should be read before the video baby monitor is operated. This product cannot replace responsible adult supervision.

**Water and moisture:** This product is designed for indoor use only. The unit should not be exposed to rain, moisture, dripping or splashing. No objects filled with liquid should be placed on top of, or beside the product, such as a glass or vase. This item should not be used near water.

**DO NOT:** Use the appliance if the cord or plug is damaged. If your baby monitor is not operating properly or has suffered any damage, contact "HelloBaby" service center to request inspection and repair of the appliance in order to avoid any possible risk.

**DO NOT:** Attempt to repair or adjust any of the electrical or mechanical functions of the unit, if you do, the guarantee will be made void.

**Ventilation:** This baby monitor should not be placed on a bed, sofa, rug or similar surface that may block the ventilation openings, or be placed in an enclosed area such as a bookcase or drawer that may impede air flow.

**Keep away from sources of heat:** This unit should not be exposed to direct heat sources such as a candle, radiator, heat register, stove or other appliance that emits heat. The unit should not be left in direct sunlight.

**Power source:** This unit should only be used with the AC power adapters included in this package (rated 6V 600mA/ rated 5V 1000mA).

**Damage requiring service:** This unit should be serviced by qualified personnel only when:

- Objects have fallen or liquid has been spilled into the product;
- The units have been exposed to rain;
- The units do not appear to operate normally or exhibits a distinct change in performance;
- The units have been dropped or the enclosure damaged;

**2. WARRANTY TERMS**

We offer one-year warranty from the original purchase date against defects in workmanship and materials. If you have warranty or support issues, please contact our after sales service via email.

**3. INSTALLATION GUIDELINES**

\* To use your parent unit and camera unit together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.

\* Any large metal object, like a refrigerator, a mirror, a filling cabinet, metallic doors or reinforced concrete between the baby and parent unit may block the radio signal.

\* The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TV, computers, cordless or mobile phones, fluorescent lights or dimmer switches.

\* Use of other 2.4GHz product, such as wireless networks (Wi-Fi routers), Bluetooth systems, or microwave ovens, may cause interference with this product, so keep the baby monitor away at least 5ft (1.5m) from these types of products, or turn them off if they appear to be causing interference.

**4. PLACEMENT OF THE CAMERA UNIT**

The camera can be placed at wall mount and desktop modes. Place the baby monitor away from heat sources such as radiators, chimneys, cookers and direct sunlight; place the baby unit away from TV sets, radiators, microwave oven and to ensure optimal reception.

**5. Getting Started**

**5.1 TURN ON THE CAMERA UNIT:**

\*Only use the A/C adapter included in this package (5V, 1A):

1. Insert the plug of the Camera Unit power adaptor into the DC socket in the back of the Camera unit.
2. Insert the other end of the power adaptor into a suitable electrical outlet.
3. Once the adapter is connected, the power LED will light up.

**5.2 TURN ON THE PARENT UNIT:**


- \* Only use the A/C adapter included in this package (6V, 600mA).
- \* The parent unit is supplied with a built-in rechargeable Li-ion battery (3.7V 950mAh). Charge the battery in the Parent Unit at least 12 hours before using for the first time or when the Parent Unit indicates that the battery is low.

1. Insert the round plug of the Parent Unit's power adaptor (Output 6V 600mA) into the DC socket of the Parent Unit.

2. Insert the other end of the power adaptor into a suitable electrical outlet.


 

 

 






3. Press and hold the power key on the top of the parent unit. The battery status indicator will light up indicates that the Parent Unit is connected to the electrical outlet.

**5.3 INFRARED NIGHT VISION (AUTOMATIC)**

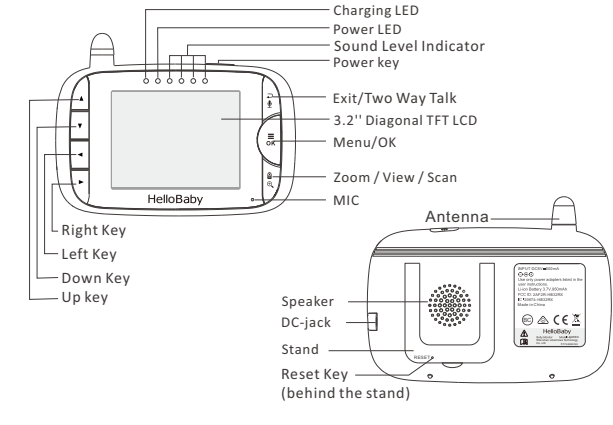
The infrared night vision function allows the camera to pick up images in dark or low light conditions. In this mode, only black and white images will be displayed on the monitor, the optimum image is 6ft (2m) distance between baby unit and object. When the camera is in night vision mode, the icon  will be displayed on the top of screen.

**6. PRODUCT OVERVIEW**

**6.1 ICONS OVERVIEW:**

	Signal Strength		Volume		Zoom
	Alarm		Brightness		Two-Way Talk
	Lullaby		Night vision		Video Off
	Camera		Battery Level		Temperature

**6.2 PARENT UNIT OVERVIEW:**

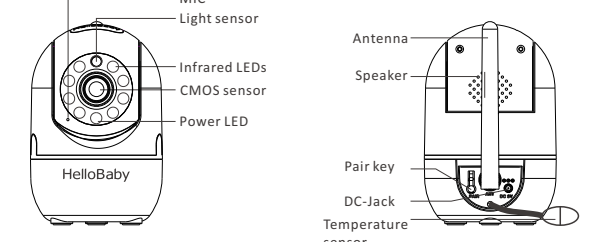


Charging LED  
Power LED  
Sound Level Indicator  
Power key  
Exit/Two Way Talk  
3.2" Diagonal TFT LCD  
Menu/OK  
Zoom / View / Scan  
MIC  
Antenna

Right Key  
Left Key  
Down Key  
Up key

 
Speaker  
DC-jack  
Stand  
Reset Key (behind the stand)

**6.3 BABY UNIT OVERVIEW:**



MIC  
Light sensor  
Antenna  
Speaker  
Infrared LEDs  
CMOS sensor  
Power LED  
Pair key  
DC-Jack  
Temperature sensor

**7. Key OPERATION**

 
 
**7.1 POWER SAVE / SCREEN OFF**  
Short press the power  key to turn on / off the screen.

 
**7.2 UP ▲ KEY**  
Press once to tilt the camera up by one step. Press and hold to tilt continuously.

 
 
**7.3 DOWN ▼ KEY**  
Press once to tilt the camera down by one step. Press and hold to tilt continuously.

**7.4 LEFT ◀ KEY**  
Press once to pan the camera left by one step. Press and hold to pan continuously.

**7.5 RIGHT ▶ KEY**  
Press once to pan the camera right by one step. Press and hold to pan continuously.

**7.6 CAMERA VIEW/SCAN**  
Press scan  key to view/scan camera; during scan mode, the scan icon  will be displayed on the top of screen, and each camera is video will be stay on the LCD around 10 seconds then change to next camera;

**7.7 DIGITAL ZOOM**  
Press and hold the  key around 2 seconds to operate zoom in/ out;

**7.8 Two Way Talk**  
Press and hold  key to enter two way talk mode. A microphone icon  will be displayed on the top of the LCD screen. Release the key to stop.  
**Note:** When you are in the two-way talk mode, the parent unit speaker is muted.

**8. MENU OPERATION**

**8.1 PAIRING THE CAMERA AND PARENT UNITS**  
The baby unit is pre-registered to your parent unit. You do not need to register it again unless the baby unit loses its link with the parent unit. To re-register your baby unit, or register a new baby unit, follow the procedure below:

**9. TECHNICAL DATA**

Frequency	2402MHz~2478MHz
Power Adaptor	Parent Unit: Input: 100-240VAC 50/60Hz Output: 6VDC 600mA
	Camera Unit: Input: 100-240VAC 50/60Hz Output: 5V 1A
Operating Range	Up to 1000ft (300m) outdoor/line of sight Up to 165ft (50m) indoor
Display	3.2" Diagonal TFT LCD
Battery (Parent Unit)	Li-ion 3.7V 950mAh (3.515Wh)
Battery Life	Up to 8 hours
Operation environment	Temperature: +32F ~+104F (0 °C ~40 °C) Relative Humidity: 15%-85%

**10. TROUBLE SHOOTING**

No reception on the monitor	<ul style="list-style-type: none"> <li>* The power adapters may not be properly connected;</li> <li>* Confirm that the camera and monitor are ON;</li> <li>* Camera may be far away from the monitor;</li> <li>* Camera and monitor may not be properly paired; follow PAIRING instructions;</li> </ul>
Interference or poor reception	<ul style="list-style-type: none"> <li>* Move the monitor close to the camera;</li> <li>* The camera or monitor may be placed too close to many metal objects;</li> <li>* Other electronic devices may be interfering with the signal;</li> <li>* The battery power may be too low;</li> </ul>
Audio feedback (high pitched noise)	<ul style="list-style-type: none"> <li>* The camera and monitor may be too close together;</li> <li>* The volume on the monitor may be set too high;</li> </ul>
Frozen Picture on Screen	<ul style="list-style-type: none"> <li>* Repower the baby unit (plug out the adapter, then plug it into the socket again);</li> <li>* Press the RESET key at the back of parent unit ( behind the support stand)</li> </ul>

**11. MAINTENANCE**

- \* Clean your baby monitor with a slightly damp or anti-static cloth.
- \* Never use cleaning agents or solvents.

**12. DISPOSAL GUIDE FOR BATTERY AND PRODUCT**

At the end of the product's life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the Product, User's Guide and / or box indicates this. Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

Dispose of the battery pack in an environmentally-friendly manner according to your local regulations.

**Warning:**

Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause personal injury or damage to property. Use only the types of the batteries which are indicated in this manual.

**Risk Group 1**

**WARNING: IR emitted from this product. Do not stare at operating lamp**

**Product tested against EN62471**

**FCC and IC regulations**

**FCC Part 15**






 
 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:**  
Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.





 


**FCC Statement:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in

**Note:** Camera icon with "\*" means it is well registered. You should select and pair with the camera icon without "\*" sign.

 

**8.1.1 ADD CAMERA**

1. Press the MENU  key then the menu will pop up;
2. Press the ◀ key or ▶ key until the camera icon  is highlighted, then press ▲ key or ▼ key to select your desired camera;
3. Press OK  key to enter into sub-menu;
4. Press ▲ key or ▼ key to select ADD CAM  then press OK  key;
5. While the  appears on the LCD screen, unplug the camera power plug first, then press and hold the PAIR button at the camera unit and re-plug the power plug at the same time until the camera's power indicator flashes.
6. Once paired,  appears on the LCD screen.
7. If fails, repeat the above steps.

 
 
 

**8.1.2 DELETE CAMERA**

1. Press the MENU  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the camera icon  is highlighted, then press ▲ key or ▼ key to select your desired camera;
3. Press OK  key, to enter into sub-menu;
4. Press ▲ key or ▼ key to select DEL CAM  then press OK  key;
5. Press ▼ key to select  key to delete the camera;
6. Press OK  key to confirm the option.

**8.2 VOLUME**






1. Press the  button and the menu bar will pop up.
2. Press the ◀ button or ▶ button until  is highlighted.
3. Press the ▲ button or ▼ button to select the desired volume level from level 1 ~ 5. (The default volume level setting is level 2 and level 0 is OFF.)

**8.3 TEMPERATURE UNIT SETTING**



 
1. Press the MENU/OK  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the temperature icon  is highlighted;
3. Press ▲ key or ▼ key to select between °F or °C ;
4. Press OK  key to confirm;
5. Press the  key to Exit.

 
**Note:** The detection range is 0~50 °C.


**8.3.1 TEMPERATURE ALARM SETTING**

1. Press ▲ / ▼ key to select  then  for alert setting.
2. Press ▲ / ▼ to select  then followed by  for confirming alarm on or  for switching off alarm function.

**8.3.2 SET TEMPERATURE HI/LO ALERT LIMITS**

1. When  is highlighted at Alarm setting then press  to enter Hi/Lo limits settings.
2. Press ▲ / ▼ keys to adjust the Hi limit then press  to confirm.






3. Then the cursor will jump to Lo limit setting.
4. Press ▲ / ▼ keys to adjust the Lo limit then press  to confirm.

To skip the setting edit, press  key to exit to last menu level.

**Note:** The High temperature alarm range is 20-40 °C, and the Low temperature alarm range is 0-19 °C. The high temperature alarm default setting is 36 °C, and the low temperature alarm default setting is 8 °C. When the temperature goes above or below the settings, the temperature icon turns red. It will flash to alert user by audio beeps. Press any key on the parent unit to stop beeping and flashing.

**8.4 LULLABY SETTING**




You can soothe the baby to sleep by playing a gentle lullaby from the Camera unit.

1. Press the MENU  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the lullaby icon  is highlighted;
3. Press ▲ key or ▼ key to select one of the 8 available lullabies, you can pick single playback, loop (all 8 lullabies) playback  or stop  ;
4. Press OK  key to confirm.

**Note:** The lullaby default setting is OFF.



**8.5 ALARM SETTING**

You can use the Parent Unit to set an alarm as a reminder for you to take care of your baby. If an alarm time is selected, the Parent Unit will beep at the end of the selected hour period from 30min to 6hrs with 30min step interval. The alarm will sound for about 1 minute when the time is reached, or can be stopped by pressing any button.



1. Press the MENU  key and the menu will pop up.
2. Press the ◀ / ▶ keys to select  is highlighted.
3. Press the ▲ / ▼ keys to select the expected timers.
4. Press OK  key to confirm.

**Note:** The alarm default setting is OFF. When the alarm is ringing, press any key on the parent unit to stop.

**8.6 DISPLAY BRIGHTNESS**

1. Press the  button and the menu bar will pop up.
2. Press the ◀ or ▶ keys until  is highlighted.
3. Press the ▲ / ▼ keys to select the desired brightness level from level 1 ~ 5. (The default brightness level setting is level 3.)

 

 
 

 
 
**8.7 VIDEO OFF TIMER SETTING**

1. Press the  button and the menu bar will pop up.
2. Press the ◀ or ▶ keys until  is highlighted.
3. Press the ▲ or ▼ keys to select for the parent unit video to turn off after 5min, 15min or 30min if no buttons have been pressed.
4. The audio will remain on, and you can press any button to turn the video screen back on.


 
 
 
 
 

**Note:** If there are multiple cameras in scan mode, the audio will switch about every 10 seconds.

**Note:** Camera icon with "\*" means it is well registered. You should select and pair with the camera icon without "\*" sign.

 

**8.1.1 ADD CAMERA**

1. Press the MENU  key then the menu will pop up;
2. Press the ◀ key or ▶ key until the camera icon  is highlighted, then press ▲ key or ▼ key to select your desired camera;
3. Press OK  key to enter into sub-menu;
4. Press ▲ key or ▼ key to select ADD CAM  then press OK  key;
5. While the  appears on the LCD screen, unplug the camera power plug first, then press and hold the PAIR button at the camera unit and re-plug the power plug at the same time until the camera's power indicator flashes.
6. Once paired,  appears on the LCD screen.
7. If fails, repeat the above steps.

 

 
 
**8.1.2 DELETE CAMERA**

1. Press the MENU  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the camera icon  is highlighted, then press ▲ key or ▼ key to select your desired camera;
3. Press OK  key, to enter into sub-menu;
4. Press ▲ key or ▼ key to select DEL CAM  then press OK  key;
5. Press ▼ key to select  key to delete the camera;
6. Press OK  key to confirm the option.

**8.2 VOLUME**

 
 
 
 

1. Press the  button and the menu bar will pop up.
2. Press the ◀ button or ▶ button until  is highlighted.
3. Press the ▲ button or ▼ button to select the desired volume level from level 1 ~ 5. (The default volume level setting is level 2 and level 0 is OFF.)

**8.3 TEMPERATURE UNIT SETTING**




1. Press the MENU/OK  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the temperature icon  is highlighted;
3. Press ▲ key or ▼ key to select between °F or °C ;
4. Press OK  key to confirm;
5. Press the  key to Exit.


**Note:** The detection range is 0~50 °C.

 
**8.3.1 TEMPERATURE ALARM SETTING**

1. Press ▲ / ▼ key to select  then  for alert setting.
2. Press ▲ / ▼ to select  then followed by  for confirming alarm on or  for switching off alarm function.

**8.3.2 SET TEMPERATURE HI/LO ALERT LIMITS**

1. When  is highlighted at Alarm setting then press  to enter Hi/Lo limits settings.
2. Press ▲ / ▼ keys to adjust the Hi limit then press  to confirm.






3. Then the cursor will jump to Lo limit setting.
4. Press ▲ / ▼ keys to adjust the Lo limit then press  to confirm.

To skip the setting edit, press  key to exit to last menu level.

**Note:** The High temperature alarm range is 20-40 °C, and the Low temperature alarm range is 0-19 °C. The high temperature alarm default setting is 36 °C, and the low temperature alarm default setting is 8 °C. When the temperature goes above or below the settings, the temperature icon turns red. It will flash to alert user by audio beeps. Press any key on the parent unit to stop beeping and flashing.

**8.4 LULLABY SETTING**




You can soothe the baby to sleep by playing a gentle lullaby from the Camera unit.

1. Press the MENU  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the lullaby icon  is highlighted;
3. Press ▲ key or ▼ key to select one of the 8 available lullabies, you can pick single playback, loop (all 8 lullabies) playback  or stop  ;
4. Press OK  key to confirm.

**Note:** The lullaby default setting is OFF.



**8.5 ALARM SETTING**

You can use the Parent Unit to set an alarm as a reminder for you to take care of your baby. If an alarm time is selected, the Parent Unit will beep at the end of the selected hour period from 30min to 6hrs with 30min step interval. The alarm will sound for about 1 minute when the time is reached, or can be stopped by pressing any button.



1. Press the MENU  key and the menu will pop up.
2. Press the ◀ / ▶ keys to select  is highlighted.
3. Press the ▲ / ▼ keys to select the expected timers.
4. Press OK  key to confirm.

**Note:** The alarm default setting is OFF. When the alarm is ringing, press any key on the parent unit to stop.

**8.6 DISPLAY BRIGHTNESS**

1. Press the  button and the menu bar will pop up.
2. Press the ◀ or ▶ keys until  is highlighted.
3. Press the ▲ / ▼ keys to select the desired brightness level from level 1 ~ 5. (The default brightness level setting is level 3.)

 

 
 

 
 
**8.7 VIDEO OFF TIMER SETTING**

1. Press the  button and the menu bar will pop up.
2. Press the ◀ or ▶ keys until  is highlighted.
3. Press the ▲ or ▼ keys to select for the parent unit video to turn off after 5min, 15min or 30min if no buttons have been pressed.
4. The audio will remain on, and you can press any button to turn the video screen back on.


 
 
 
 
 

**Note:** If there are multiple cameras in scan mode, the audio will switch about every 10 seconds.

**Note:** Camera icon with "\*" means it is well registered. You should select and pair with the camera icon without "\*" sign.

 

**8.1.1 ADD CAMERA**

1. Press the MENU  key then the menu will pop up;
2. Press the ◀ key or ▶ key until the camera icon  is highlighted, then press ▲ key or ▼ key to select your desired camera;
3. Press OK  key to enter into sub-menu;
4. Press ▲ key or ▼ key to select ADD CAM  then press OK  key;
5. While the  appears on the LCD screen, unplug the camera power plug first, then press and hold the PAIR button at the camera unit and re-plug the power plug at the same time until the camera's power indicator flashes.
6. Once paired,  appears on the LCD screen.
7. If fails, repeat the above steps.

 
 
 
 
**8.1.2 DELETE CAMERA**

1. Press the MENU  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the camera icon  is highlighted, then press ▲ key or ▼ key to select your desired camera;
3. Press OK  key, to enter into sub-menu;
4. Press ▲ key or ▼ key to select DEL CAM  then press OK  key;
5. Press ▼ key to select  key to delete the camera;
6. Press OK  key to confirm the option.

**8.2 VOLUME**

 
 
 
 

1. Press the  button and the menu bar will pop up.
2. Press the ◀ button or ▶ button until  is highlighted.
3. Press the ▲ button or ▼ button to select the desired volume level from level 1 ~ 5. (The default volume level setting is level 2 and level 0 is OFF.)

**8.3 TEMPERATURE UNIT SETTING**




1. Press the MENU/OK  key and the menu will pop up;
2. Press the ◀ key or ▶ key until the temperature icon  is highlighted;
3. Press ▲ key or ▼ key to select between °F or °C ;
4. Press OK  key to confirm;
5. Press the  key to Exit.


**Note:** The detection range is 0~50 °C.

 
**8.3.1 TEMPERATURE ALARM SETTING**

1. Press ▲ / ▼ key to select  then  for alert setting.
2. Press ▲ / ▼ to select  then followed by  for confirming alarm on or  for switching off alarm function.

**8.3.2 SET TEMPERATURE HI/LO ALERT LIMITS**

1. When  is highlighted at Alarm setting then press  to enter Hi/Lo limits settings.
2. Press ▲ / ▼ keys to adjust the Hi limit then press  to confirm.


3. Then the cursor will jump to Lo limit setting.
4. Press ▲ / ▼ keys to adjust the Lo limit then press  to confirm.

To skip the setting edit, press  key to exit to last menu level.

**Note:** The High temperature alarm range is 20-40 °C, and the Low temperature alarm range is 0-19 °C. The high temperature alarm default setting is 36 °C, and the low temperature alarm default setting is 8 °C. When the temperature goes above or below the settings, the temperature icon turns red. It will flash to alert user by audio beeps. Press any key on the parent unit to stop beeping and flashing.

**8.4 LULLABY SETTING**

You can soothe the baby to sleep by playing a gentle lullaby from the Camera unit.

1. Press the MENU  key and the menu will pop up;
2. Press the