


Hamilton Beach®

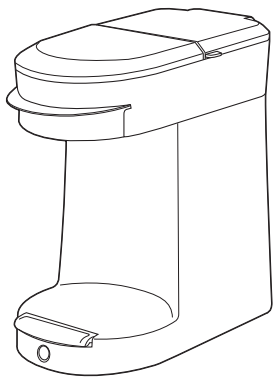

Coffeemaker Cafetière Cafetera

Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato.

Read before use.
Lire avant utilisation.
Lea antes de usar.



In an effort to reduce paper waste, Hamilton Beach Brands, Inc., has reduced the size of this Use and Care guide and made it available online. We believe strongly in doing our part to help care for the environment. To view Use and Care guides, recipes, and tips, please visit:

hamiltonbeach.com

Aidez-nous à protéger l'environnement !

Dans le but de réduire la consommation de papier, Hamilton Beach Brands, Inc., a réduit le format des manuels d'utilisation et d'entretien et offre maintenant la version complète en ligne. Nous croyons fermement que nous contribuons à sauvegarder l'environnement. Pour voir les manuels d'utilisation et d'entretien, les recettes et les conseils, veuillez consulter le site :

hamiltonbeach.ca

¡Ayude a Hamilton Beach a Hacer la Diferencia!

En un esfuerzo por reducir el papel de desecho, Hamilton Beach Brands, Inc., ha reducido el tamaño de este Uso y Cuidado y lo puso disponible en línea. Creemos fuertemente en hacer nuestra parte para ayudar a cuidar el medioambiente. Para ver guías de Uso y Cuidado, recetas y consejos, por favor visite:

hamiltonbeach.com.mx

USA: 1.800.851.8900

Canada: 1.800.267.2826

México: 01.800.71.16.100

840183801

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against electric shock, do not place cord, plug, or coffeemaker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when the coffeemaker is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Coffeemaker must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Call our toll-free technical service number for information on examination, repair, or adjustment.
8. The use of an accessory not evaluated for use with this appliance may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use appliance for other than intended use.
13. **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

SAVE THESE INSTRUCTIONS

Other consumer safety information

This appliance is intended for household use only.


WARNING! Shock Hazard: This appliance has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit, reverse the plug. If it still does not fit, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use a high-wattage appliance on the same circuit with the coffeemaker.

NOTE: For best results, allow the coffeemaker to cool for one minute between brewing cycles.

Parts and features

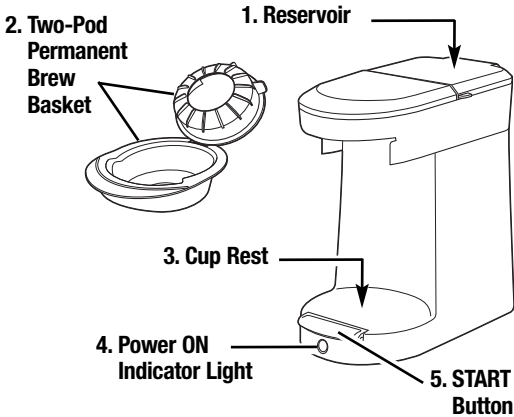

How to use the coffeemaker

⚠ WARNING Burn Hazard.

To avoid contact with hot coffee or water:

- Do not use more than 12 ounces (350 ml) of water.
- Fully insert cup under brew basket.
- Do not remove cup until light goes off.
- This coffeemaker can be used with pod-type coffee or tea pods. It is not recommended for use with espresso pods since this may decrease the flow of coffee or cause overflow.

Automatic Shutoff: The coffeemaker will automatically shut off after brew cycle is complete.

1. Plug in coffeemaker.
2. Lift reservoir lid and slide out brew basket.

For regular coffee/tea: Flip up top of basket, place ONE coffee or tea pod into brew basket, and then close the top of basket.

For stronger coffee/tea: Flip up the top of basket and place ONE coffee or tea pod into brew basket; close the top of basket and place another pod in the top of basket. Make sure pod(s) are centered and flat in brew basket or coffee may be weak from water flow around the pod.

3. Fill serving cup with up to 12 ounces (350 ml) of cold water.
NOTE: Once the START button is pressed, the unit will brew for one cycle. If the START button has been pressed with no water in the reservoir, allow the unit to complete one brew cycle and the Power ON Indicator Light will go out. If the brew cycle needs to be stopped during brewing, unplug unit. Reduce water for stronger brew.

4. Pour water carefully into reservoir (behind brew basket) and lower reservoir lid.
5. Place serving cup under brew basket.
6. Press START button. The Power ON Indicator Light will light up to show that coffeemaker is on. Coffeemaker will shut off automatically and light will go off when brew cycle is completed.

7. After you have finished your coffee and the coffeemaker has cooled, use the tab on the front of the brew basket to slide out brew basket and dispose of pod(s). If using standard tea bags, follow all directions except in step 2, remove brew basket and brew water directly into cup. Once hot water is brewed, steep tea bag in cup until desired strength is reached.

NOTE: For best results, allow coffeemaker to cool for one minute between brewing cycles.



Care and cleaning

To clean inside of coffeemaker: To prolong the life of your coffeemaker, monthly cleaning is recommended. In areas with hard water, more frequent cleaning is necessary.

1. Pour ½ cup of plain white vinegar and ½ cup of cold water into reservoir. Place cup on cup rest under brew basket. A commercial coffee cleaner, such as CleanCaf™, may also be used according to package directions.
2. Press START button once. After 30 seconds, turn OFF.
3. Wait 30 minutes to allow vinegar to clean. Then turn ON again. When brew cycle is finished, wait for unit to cool.
4. Empty cup and rinse. Pour one cup of cold tap water into reservoir. Place cup under brew basket.
5. Press START button. When brew cycle is finished, empty cup. Repeat this process with one more cup of cold tap water.
6. If necessary, repeat Step 5 to remove any remaining vinegar taste.
7. Wash cup and brew basket before making a beverage.

To clean outside of coffeemaker:

⚠ WARNING Electrical Shock Hazard. Disconnect power before cleaning. Do not immerse cord, plug, or coffeemaker in any liquid.

1. Unplug coffeemaker and allow to cool before cleaning.
2. Occasionally wipe water spreader area, above brew basket, with a clean, damp cloth to remove oils and residues.
3. Permanent brew basket may be washed in dishwasher. Discard disposable brew baskets after each use.
4. To clean all other outside surfaces of coffeemaker, use a clean, damp cloth.

Troubleshooting

Power/light is on.

Once the START button has been pressed, the unit will brew for one brew cycle and power off. After the light turns off, allow the unit one minute to cool before using again.

Weak coffee.

Make sure the pod(s) are centered in the brew basket and use two pods for stronger coffee. See "How to use the coffeemaker."

Limited warranty

This warranty applies to products purchased in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use.

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim, do not return this appliance to the store. Please call 1.800.851.8900 in the U.S. or 1.800.267.2826 in Canada or visit hamiltonbeach.com in the U.S. or hamiltonbeach.ca in Canada. For faster service, locate the model, type, and series numbers on your appliance.

CONSEILS DE SÉCURITÉ IMPORTANTS

Au moment d'utiliser des appareils électriques, on doit toujours respecter les règles de sécurité élémentaires afin de minimiser les risques d'incendie, d'électrocution et des blessures, notamment celles qui suivent :

1. Lire toutes les instructions.
2. Ne pas toucher les surfaces chaudes. Utiliser les poignées ou les boutons. Prendre toutes les précautions nécessaires pour éviter les brûlures causées par les surfaces chaudes, les déversements et le liquide chaud.
3. Pour éviter les risques d'électrocution, ne pas immerger le cordon ou la fiche ou la cafetière dans l'eau ou tout autre liquide.
4. L'utilisation de tout appareil par ou près des enfants exige une surveillance accrue.
5. Débrancher l'appareil lorsqu'il n'est pas en service ou avant de le nettoyer. Laisser refroidir la cafetière avant d'installer ou de retirer des pièces et avant de la nettoyer.
6. Toujours placer la cafetière sur une surface plane et loin des bords de comptoir pour éviter le basculement accidentel lors de son fonctionnement.
7. Ne pas faire fonctionner aucun appareil dont le cordon ou la prise sont endommagés ou suite à une défectuosité, si l'appareil est tombé ou endommagé de quelque manière que ce soit. Appeler la ligne sans frais du Service à la clientèle pour plus d'information à propos d'une vérification, réparation ou réglage.
8. L'utilisation d'un accessoire non approuvé à utiliser avec cet appareil peut provoquer des blessures.
9. Ne pas utiliser à l'extérieur.
10. Ne pas laisser pendre le cordon de la table ou du comptoir et éviter tout contact avec les surfaces chaudes incluant la cuisinière.
11. Ne pas placer sur ou près d'une cuisinière électrique ou à gaz ou dans un four chaud.
12. N'utiliser cet appareil que pour les fonctions auxquelles il est destiné.
13. **AVERTISSEMENT !** Pour éviter les risques d'incendie et d'électrocution, ne pas enlever le couvercle inférieur de la cafetière. Aucune pièce en état de service à l'intérieur. Les réparations doivent être faites par un technicien agréé seulement.

CONSERVER CES INSTRUCTIONS

Autres consignes de sécurité pour le consommateur

Cet appareil est conçu pour une utilisation domestique seulement.

AVERTISSEMENT ! Risque d'électrocution : Cet appareil est doté d'une fiche polarisée (une lame plus large) qui diminue le risque d'électrocution. Cette fiche s'insère d'une seule manière dans une prise polarisée. Ne pas modifier d'aucune manière le dispositif de sécurité de la fiche ou utiliser d'adaptateur. Si la fiche refuse de s'insérer, inversez-la. Si elle refuse toujours de s'insérer, faire remplacer la prise par un électricien.

La longueur du cordon installé sur cet appareil a été sélectionnée afin de réduire les risques d'enchevêtrement ou de trébuchement causés par un fil trop long. L'utilisation d'une rallonge approuvée est permise, si le cordon est trop court. Les caractéristiques électriques de la rallonge doivent être équivalentes ou supérieures aux caractéristiques de l'appareil. Prendre toutes les précautions nécessaires pour installer la rallonge de manière à ne pas la faire courir sur le comptoir ou sur une table et pour éviter qu'un enfant ne tire sur le cordon ou trébuche accidentellement.

Ne pas utiliser d'appareil à puissance nominale élevée sur le même circuit électrique que la cafetière pour éviter les risques de surcharges électriques du circuit.

NOTE : Laisser refroidir la cafetière pendant une minute entre les cycles d'infusion pour obtenir de meilleurs résultats.

