

### **User Manual of Product 1:**

COSORI Electric Kettle Temperature Control with 6 Presets, 60min Keep Warm 1.7L Electric Tea Kettle & Hot Water Boiler, 304 Stainless Steel Filter, Auto-Off & Boil-Dry Protection, BPA Free, Black

### **User Manual of Product 2:**


COSORI Glass Teapot Stovetop Safe Gooseneck Kettle with Removable Stainless Steel Infuser Scale Line for Blooming and Loose Leaf Tea Brewer, BPA Free Durable Borosilicate, 1000mL, Transparent

# COSORI

## User Manual

### Original Digital Glass Kettle

Model: CO117-DK

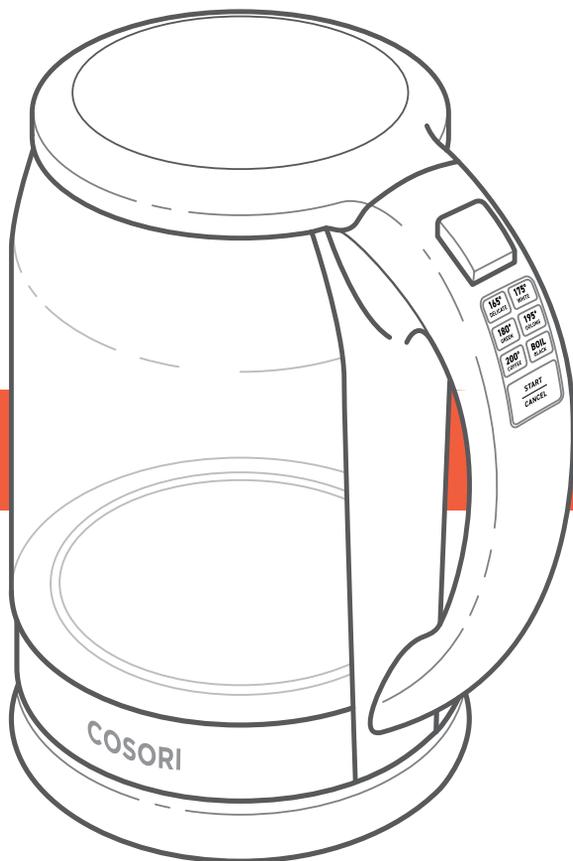

#### Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684



Thank you for  
your purchase!



(We hope you love your new glass kettle as much as we do.)



*join*

the Cosori Cooks Community on Facebook  
[facebook.com/groups/cosoricooks](https://www.facebook.com/groups/cosoricooks)



*explore*

our recipe gallery  
[www.cosori.com/recipes](http://www.cosori.com/recipes)



*enjoy*

weekly, featured recipes  
*made exclusively by our in-house chefs*



## CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)

**Toll-Free:** (888) 402-1684

M–F, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,

*Happy cooking!*

## Table of Contents

Package Contents	3
Specifications	3
Important Safeguards	4
• Plug & Cord	4
• Electric Power	4
Getting to Know Your Glass Kettle	5
• Controls	5
Before First Use	7
• Water Test	7
Using Your Glass Kettle	8
• Heating Water	8
• Boil-Dry Protection	8
• Keep Warm Mode	8
Care & Maintenance	9
• Cleaning	9
• Descaling the Kettle	9
Limited One-Year Warranty	10
Customer Support	11

## Package Contents

1 x Digital Glass Kettle
1 x Power Base
1 x User Manual

## Specifications

<b>Power Supply</b>	AC 120V, 60Hz
<b>Rated Power</b>	1500W
<b>Capacity</b>	7 US cups / 1.8 qt / 1.7 L
<b>Dimensions</b>	9.8 x 8.7 x 6.1 in / 25 x 22 x 15.6 cm
<b>Weight</b>	2.7 lb / 1.2 kg

# IMPORTANT SAFEGUARDS

---

Always follow basic safety precautions when using your kettle.  
Read all instructions.

## CAUTION!

- **Do not** touch hot surfaces. Use handle. **Do not** touch the base or glass parts of the kettle during or immediately after operation.
- **Do not** fill the kettle above the "MAX" line. This may cause water to boil over and may cause scalding.
- **Always** handle with care when there is hot water inside the kettle to avoid scalding.

- **Do not** immerse the kettle, base, cord, or plug in water or other liquids.
- Closely supervise children near the kettle. **Do not** allow children to use or play with this kettle.
- Unplug the kettle when it is not being used and before cleaning. This will avoid electric shock and prevent moisture from causing a short circuit in the power base while it is plugged in.
- Allow to cool before putting on or taking off parts, and before cleaning.
- **Do not** use the kettle if it is malfunctioning, broken or chipped, or if the power cord or plug is damaged in any way. **Do not** try to repair the kettle. Contact **Customer Support** (see page 11).
- Using accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury.
- **Do not** use outdoors.
- Place the kettle on a dry, flat surface. **Do not** place the kettle on or near heat sources such as stovetops, ovens, radiators, etc.
- **Always** make sure the lid is closed while the kettle is operating. **Do not** cover the spout opening while the kettle is operating.

- To disconnect, use the **START/CANCEL** button to turn the kettle off, then remove the plug from the wall outlet.
- **Only** use the kettle as directed in this manual.
- Household use **only**.

## SAVE THESE INSTRUCTIONS

---

### Plug & Cord


- **Do not** let the cord (or any extension cord) hang over the edge of a table or counter. **Do not** allow the cord to touch hot surfaces.
- This kettle has a 3-prong grounding plug. **Always** plug in to a grounded electrical outlet. **Do not** modify the plug in any way.
- This kettle uses a short power-supply cord to reduce the risk of entangling or tripping. Use extension cords with care.
- Any extension cord must also be a grounding-type 3-wire cord.
- The marked electrical rating of an extension cord should be at least as high as the rating of the kettle (see page 3).

### Electric Power

- If the electrical circuit is overloaded with other appliances, this kettle may not operate properly. The kettle should be operated on a separate electrical circuit from other appliances.

# GETTING TO KNOW YOUR GLASS KETTLE

---

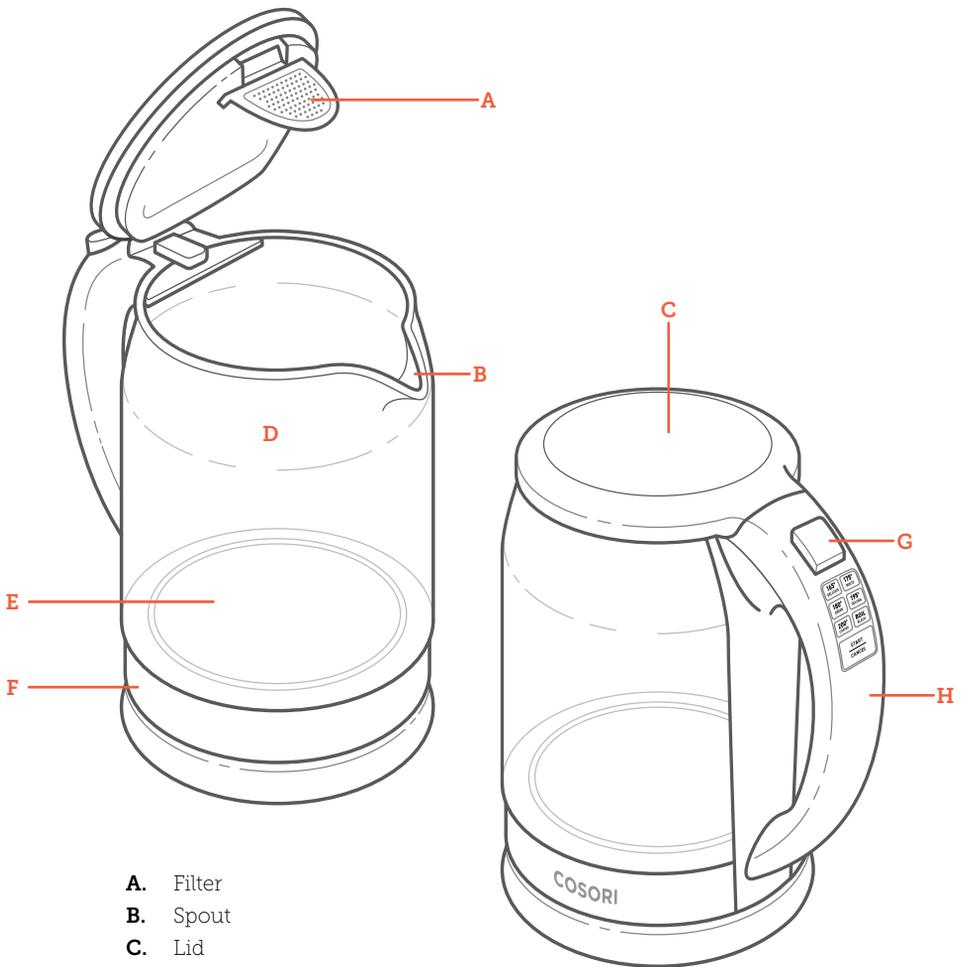

- A. Filter
- B. Spout
- C. Lid
- D. Kettle
- E. Heating Plate
- F. Power Base
- G. Lid Release Button
- H. Handle

**Note:**

- The filter is made with food-grade stainless steel.

## Controls

1. **165°F DELICATE**

Sets the kettle to 165°F / 74°C, the ideal temperature for delicate tea.

2. **175°F WHITE**

Sets the kettle to 175°F / 80°C, the ideal temperature for white tea.

3. **180°F GREEN**

Sets the kettle to 180°F / 82°C, the ideal temperature for green tea.

4. **195°F OOLONG**

Sets the kettle to 195°F / 91°C, the ideal temperature for oolong tea.

5. **200°F COFFEE**


Sets the kettle to 200°F / 93°C, the ideal temperature for coffee.

6. **BOIL BLACK**

Sets the kettle to 212°F / 100°C to bring water to a boil. This is the ideal temperature for black tea.

7. **START/CANCEL**

- Press any time to start or cancel heating.
- Press and hold for 3 seconds to turn Keep Warm Mode on/off (see page 8).

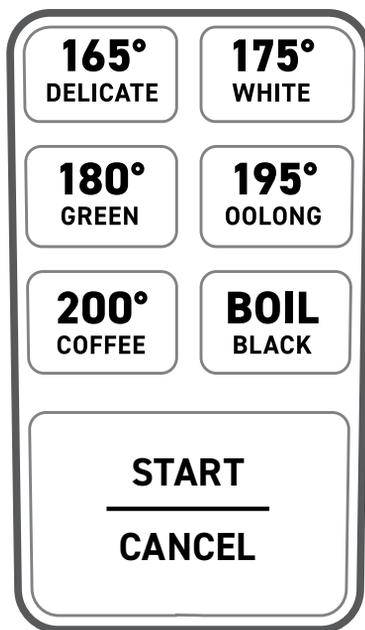

# BEFORE FIRST USE

---

## Water Test

Perform the Water Test before using your kettle to make sure it's working properly. **Do not** drink the water that is boiled during this test.

1. Remove all packaging from your kettle and its accessories.
2. Completely unravel the power cable and place the power base on a flat, level, stable surface.
3. Fill the kettle with water to the **"MAX"** line, then put the lid on the kettle. [Figure 1.1-1.2]
4. Press **BOIL BLACK**. Then, press **START/CANCEL** to begin heating.
5. Turn off the kettle once it has finished boiling the water. Allow it to cool, then pour out the water. Rinse thoroughly 2–3 times with cold water.



Figure 1.1

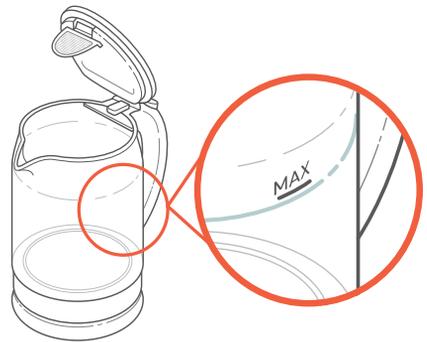


Figure 1.2

# USING YOUR GLASS KETTLE

---

## Heating Water

**Only** heat water in this kettle. Use pure, filtered water for best results.

1. Press the **Lid Release Button** to open the lid.
2. Fill the kettle to the desired level. Make sure the kettle is filled above the "**MIN**" line and below the "**MAX**" line. Wipe any excess water from the kettle's body and power base.
3. Close the lid, place the kettle onto the power base, and plug in. [Figure 2.1]
4. Press a preset temperature button. You can only select 1 preset at a time.
5. Press **START/CANCEL**. The kettle will begin heating. Press **START/CANCEL** at any time to stop heating early.
6. The kettle will automatically switch to Keep Warm Mode once it has finished heating the water.

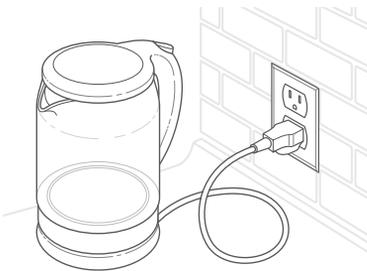


Figure 2.1

## Boil-Dry Protection

- This kettle has a boil-dry safety feature. If there is no water inside the kettle, it will automatically turn off to avoid damaging the heating element. Fill the kettle with cold water and allow it to cool before using again.

## Keep Warm Mode

- Keep Warm Mode automatically maintains the selected temperature for 60 minutes.
- If you select the Boil Black preset, the kettle will hold the temperature at 200°F as a safety feature to keep the water from boiling for too long.
- If you take the kettle off the base during Keep Warm Mode, all lights will turn off, and the kettle will pause heating. If you put the kettle back within 60 seconds, it will resume Keep Warm Mode. After 60 seconds, the kettle will turn off.
- Keep Warm Mode can be turned on/off while the kettle is in standby mode by pressing and holding **START/CANCEL** for 3 seconds. When Keep Warm Mode is turned off, the **START/CANCEL** indicator light will change from blue to white. If Keep Warm Mode is off, the kettle will automatically turn off once it has reached the preset temperature.

# CARE & MAINTENANCE

---

**Note:** **Do not** remove the filter from the lid. Doing so will break the filter.

## Cleaning

1. Unplug the kettle and allow it to cool before cleaning.
2. Wipe the kettle and base with a soft, damp cloth. Make sure the electric socket on the underside of the kettle is kept dry.
3. Dry all parts after every use.

**Note:** **Never** immerse kettle or power base in water.

## Descaling the Kettle

You should descale the kettle at least once a week if you use it frequently. Descaling removes any mineral deposits that have built up inside the kettle. **Always** descale the kettle before and after storing for long periods of time.

1. Unplug the kettle and pour out all water. Make sure the kettle is cool.
2. Squeeze half a lemon into the kettle, or add ½ US cup / 118 mL of distilled vinegar into the kettle.
3. If the kettle has thick scale buildup, scrub the inner walls with a non-scratch scrub sponge.

**Note:** **Do not** use steel wool, as this can scratch the kettle.

4. Add 2 US cups / 473 mL of water. Boil the mixture.
5. Pour out the mixture, then wipe off any remaining scale with a non-abrasive cloth, sponge, or cleaning brush.
6. Repeat as needed.

**Note:** For quick descaling, add 3 US tbsp / 44 mL of baking soda and ½ US cup / 118 mL of vinegar into the kettle. Swirl the mixture around until it coats the walls of the kettle, wipe with a non-scratch sponge, and pour the mixture out. This method will **only** work for a thin layer of scale.

# LIMITED ONE-YEAR WARRANTY

---

<b>Product</b>	<i>Original Digital Glass Kettle</i>
<b>Model</b>	CO117-DK
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
<b>Order ID</b>	
<b>Date of Purchase</b>	

## TERMS & POLICY

Arovast Corporation ("Arovast") warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of one year from the date of original purchase.

Arovast agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

### **There is no other express warranty. This warranty does not apply:**

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Arovast will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Arovast's warranty extends only to products purchased from authorized sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via [support@cosori.com](mailto:support@cosori.com). DO NOT dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

# WARRANTY INFORMATION (CONT.)

---

## Extend Your Warranty by 1 Year

Register your product within 14 days of purchase at [www.cosori.com/warranty](http://www.cosori.com/warranty) to extend your 1-year warranty by an additional year.

This warranty is made by:

Arovast Corporation  
1202 N. Miller St. Suite A  
Anaheim, CA 93806

# CUSTOMER SUPPORT

---

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

## Arovast Corporation

1202 N. Miller St., Suite A  
Anaheim, CA 92806

## Support Hours

Mon–Fri  
9:00 am–5:00 pm PST/PDT

**Email:** [support@cosori.com](mailto:support@cosori.com)

**Toll-Free:** (888) 402-1684

\*Please have your invoice and order ID ready before contacting Customer Support.







## SHOW US WHAT YOU'RE MAKING

---

We hope this has been helpful to you. We can't wait to see your beautiful results, and we think you'll want to share glam shots! Others already in the community are awaiting your uploads—just pick your platform of choice below. Snap, tag, and hashtag away, Cosori chef!

**#iCookCosori**



**@cosoricooks**



**Cosori Appliances**

Considering what to cook? Many recipe ideas are available, both from us and the Cosori community.

## MORE COSORI PRODUCTS

---

If you're happy with this kettle, the line doesn't stop here. Check out **[www.cosori.com](http://www.cosori.com)** for a line of all our beautiful and thoughtfully designed cookware. They might be right at home in your kitchen, too!

# COSORI

## **Questions or Concerns?**

Mon–Fri, 9:00 am–5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684

# COSORI

## User Manual

### Original Glass Gooseneck Teapot

Model: CO141-GT



#### Questions or Concerns?

support@cosori.com | (888) 402-1684  
Mon–Fri, 9:00 am–5:00 pm PST/PDT



(We hope you love your teapot as much as we do.)



*join*

the Cosori Cooks Community on Facebook  
[facebook.com/groups/cosoricooks](https://www.facebook.com/groups/cosoricooks)



*explore*

our recipe gallery  
[www.cosori.com/recipes](http://www.cosori.com/recipes)



*enjoy*

weekly, featured recipes  
*made exclusively by our in-house chefs*



## CONTACT OUR CHEFS

Our helpful, in-house chefs are ready to assist you with any questions you might have!

**Email:** [recipes@cosori.com](mailto:recipes@cosori.com)  
**Toll-Free:** (888) 402-1684  
M–F, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,

*Happy cooking!*

## Table of Contents

Package Contents	3
Specifications	3
Important Safeguards	4
Getting to Know Your Teapot	5
Before First Use	6
Using Your Teapot	7
Care & Maintenance	8
Warranty Information	10
Customer Support	11

## Package Contents

- 1 x Glass Teapot
- 1 x User Manual

## Specifications

<b>Capacity</b>	34 oz / 1 L
<b>Dimensions</b>	8.3 x 5.6 x 6.1 in / 21.2 x 14.2 x 15.6 cm
<b>Weight</b>	1 lb / 400 g

# READ AND SAVE THESE INSTRUCTIONS

## IMPORTANT SAFEGUARDS

Always follow basic safety precautions when using your teapot. Read all instructions.

### General Safety


- **Do not** touch hot surfaces, such as the surface of the filled glass teapot. Use the handle.
- **Do not** use the teapot if it is cracked, scratched, or chipped.
- Check for cracks or damage before using, especially if there are signs of leakage.
- **Do not** place the teapot on a wet surface. It may slip, spill hot liquid, or fall.
- **Do not** clean with steel wool, abrasive cleaners, or any other material that may scratch the teapot.
- **Do not** fill the teapot above the **"MAX"** line when heating on a stovetop. This may cause water to boil over and may cause scalding.
- **Do not** heat without water. Fill above the **"MIN"** line when heating on the stovetop.
- To avoid scalding, **always** handle with care when there is hot water inside the teapot.
- Closely supervise children near the teapot. **Do not** allow children to use or play with the teapot.
- **Only** use the teapot as directed in this manual.
- Household use **only**.

## GETTING TO KNOW YOUR TEAPOT

- A. Lid
- B. Infuser
- C. Inner Ring
- D. Glass Teapot
- E. Handle

### Note:

- The infuser, inner ring, and lid are made with grade 304 stainless steel.
- The lid handle is made with cool-touch plastic.
- The glass teapot is made of high-borate borosilicate glass for high heat resistance.

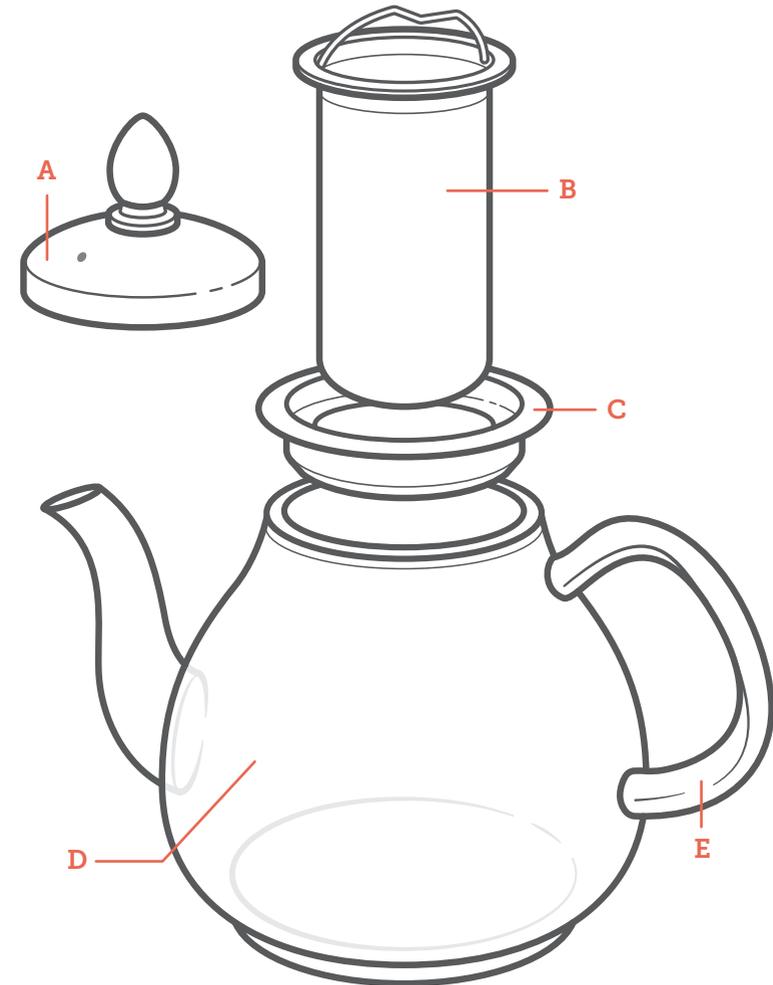

# BEFORE FIRST USE

**WARNING:** Do not remove the teapot from the packaging if it is broken. Contact **Customer Support** immediately to replace your teapot (see page 11).

1. Remove all packaging from the teapot and its accessories.
2. Carefully wash the teapot, infuser, inner ring, and lid under running water. Avoid hitting the faucet or other hard surfaces when washing, as the glass may break from impact [Figure 1.1]. Dry all parts.
3. Place the inner ring in the teapot. If it fits too loosely, you can adjust the tightness of the ring by using a tool to adjust the 3 tabs on the ring (see page 9).
4. Now, you are ready to brew tea or boil water.



[Figure 1.1]

# USING YOUR TEAPOT

## Brewing Tea

1. Add boiled water to the teapot above the "MIN" mark, or boil water in the teapot (see **Boiling Water**). Do not fill above the "MAX" line. Wipe any water from the outside of the teapot.
2. Add tea leaves to the infuser. Use 1 US tsp / 4 g of leaves per 1 US cup / 250 mL of water.

**Note:** Adjust depending on the instructions on your tea packaging or your personal preference.

3. Carefully place the infuser inside the teapot and cover with the lid.
4. Allow the tea to steep for several minutes before serving. You can adjust the steeping time for a weaker or stronger brew.

**WARNING:** Handle with care when serving to avoid scalding.

## Boiling Water

**WARNING:**

- **Only** use the teapot on a gas or electric stovetop. **Do not** use on an induction stove.
- When using on a gas stovetop, **only** use with low heat. Make sure the flames do not extend past the bottom rim of the teapot.

1. Remove the infuser and lid from the teapot and fill with water above the "MIN" mark. **Do not** fill above the "MAX" line. Wipe any water from the outside of the teapot.
2. Put the lid on the teapot and place the teapot on the stove.
3. Turn the stove on low heat. Once the water boils, turn off the stove.

**WARNING:**

- Handle the teapot carefully after boiling water as the handle may be hot.
- **Do not** leave the teapot unattended while boiling water. Turn off the stove immediately when the water boils.

# CARE & MAINTENANCE

## Cleaning

1. After every use, remove the infuser and discard the used tea leaves.
2. Carefully wash the teapot, infuser, inner ring, and lid with mild soap and hot water.

**Note:** Avoid hitting the faucet or other hard surfaces when washing, as the glass may break from impact.

3. Wipe with a damp cloth to remove superficial stains.
4. Dry all parts.

**Note:**

- You can use vinegar or lemon juice to descale the teapot.
- The teapot, infuser, and inner ring are dishwasher-safe. **Do not** place the lid in a dishwasher.

## Descaling the Gooseneck Teapot

You should descale the teapot at least once a week if you use it frequently. Descaling removes any mineral deposits that have built up inside the teapot. **Always** descale the teapot before and after storing for long periods of time.

## Descaling the Infuser with Baking Soda

1. Remove the infuser and discard the used tea leaves.
2. Wet the infuser with water, and sprinkle baking soda onto it.
3. Scrub the infuser with a brush, and wipe it with a damp cloth.
4. Rinse the infuser with water.
5. Repeat steps 2 and 3 until clean.

## Descaling the Infuser with Vinegar

1. Remove the infuser and discard the used tea leaves.
2. Fill a small container or bowl with vinegar.
3. Put vinegar and water into the infuser. The vinegar-to-water ratio should be 1:1.
4. Let the infuser soak for 2 hours.
5. Scrub the infuser with a brush, and wipe it with a damp cloth.
6. Rinse with clean water.

# CARE & MAINTENANCE (CONT.)

## Descaling the Pot

1. Squeeze half a lemon into the teapot, or add baking soda into the teapot.
2. Add ½ US cup / 118 mL of water to the teapot.
3. Scrub the teapot's inner walls with a non-scratch scrub sponge.
4. You can clean the inside of the spout with a soft brush or small cloth through it.

[Figure 2.1]



[Figure 2.1]

**Note:**

- **Do not** use steel wool, as this can scratch the teapot.
5. Pour out the mixture, then wipe off any remaining scale with a non-abrasive cloth, sponge, or cleaning brush.
  6. Repeat as needed.

## Storage

- Store the teapot in a safe place or inside of its box.
- **Do not** store the teapot where it may fall, be bumped, or knocked over. Glass may break.

- Store the teapot out of reach of children and pets.

## Adjusting Inner Ring Tightness

If the inner ring fits too loosely or is too hard to take off, you can adjust the tightness of the inner ring.

1. Take off the inner ring.
2. Use a tool to adjust the 3 tabs on the inner ring. [Figure 2.2]
  - a. If you push the tabs in, the ring will fit more loosely, and will be easier to put on and take off.
  - b. If you push the tabs out, the ring will fit more tightly, and will not come off as easily.
3. After adjusting the tabs, put the ring back on and take it off again to see if the fit is correct. If not, adjust the tabs again until the ring fits the way you prefer.



[Figure 2.2]

# WARRANTY INFORMATION

<b>Product</b>	Original Glass Gooseneck Teapot
<b>Model</b>	CO141-GT
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
<b>Date of Purchase</b>	
<b>Order ID</b>	

## TERMS & POLICY

Arovast Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Arovast Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use for which the product is not intended. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Arovast Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or use warnings included in the product packaging and manual.

## This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Arovast Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

## ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

### Extend Your Warranty by 1 Year

Register your product at [www.cosori.com/warranty](http://www.cosori.com/warranty) to extend your 1-year warranty by an additional year.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

### Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via [support@cosori.com](mailto:support@cosori.com) with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

# CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

## Arovast Corporation

1202 N. Miller St., Suite A  
Anaheim, CA 92806

## Support Hours

Monday–Friday  
9:00 am–5:00 pm PST/PDT

**Email:** [support@cosori.com](mailto:support@cosori.com)

**Toll-Free:** (888) 402-1684

\*Please have your invoice and order ID ready before contacting Customer Support.





# COSORI

## **Questions or Concerns?**

Mon–Fri, 9:00 am–5:00 pm PST/PDT  
support@cosori.com | (888) 402-1684

JJ081020GY-M1\_0820CO141-GT