

 
EXTEND-A-REACH

Extention Pole

User manual


Attaching accesories

- Screw the relevant accessory onto the threads at the end of your pole.
- The threading on all Extend-A-Reach tools is 3/4" Acme, USA Standard, and Universal.

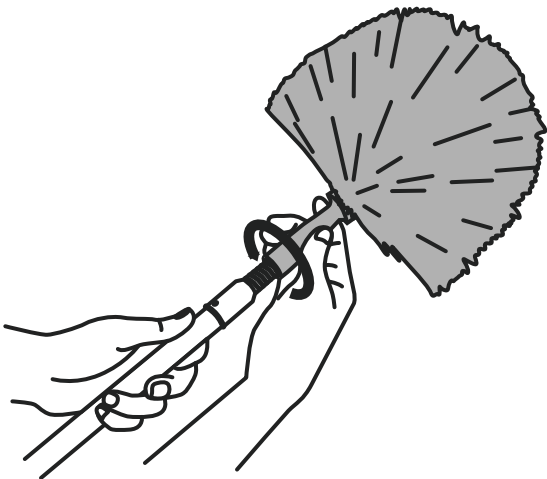

Adjust the pole


- Extend pole segments one-by-one.
- After extending each segment, lock it in place with its lever clasp.

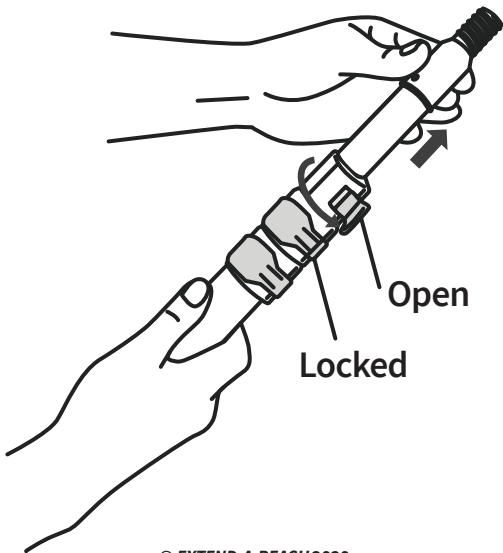

Using the dusters


The ceiling fan brush and the feather duster are bendable and can clean hard-to-reach places.

Simply bend them into the shape you need for your particular job.

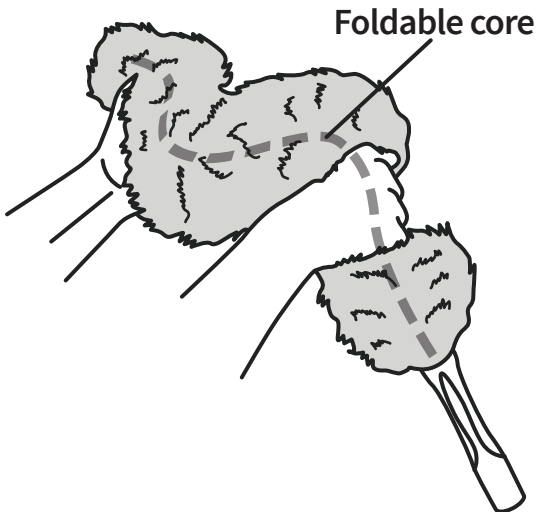

Adjusting the squeegee

Adjust the position of the squeegee by pressing on the “PUSH” button and rotating its head to the desired angle.

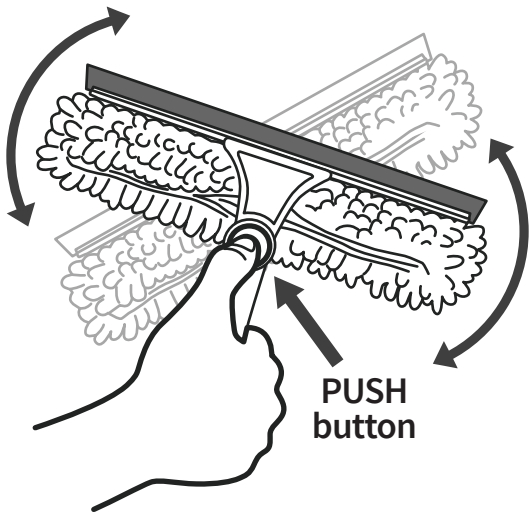

*** The extension pole and attachments
are recommended to be stored indoors.**

IF YOU HAVE ANY ISSUE

We're available 24/7

 
Don't hesitate to contact us at:

SUPPORT@Extend-A-Reach.com

Tel. (541)z 246-9509

Handling the pole

- Grab the pole by the non-slip hand grips to ensure maximum stability.
- Get the job done.

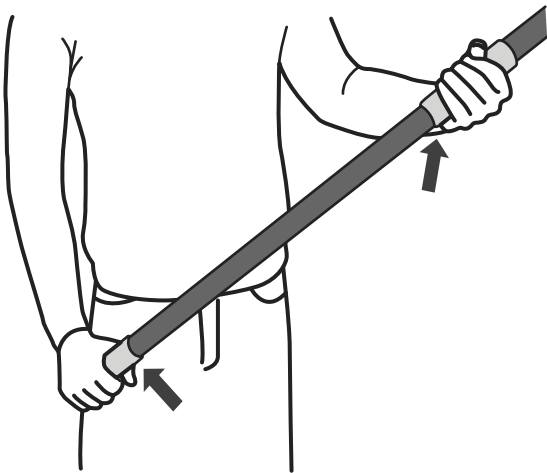

Cleaning your accessories

CEILING FAN BRUSH AND SQUEEGEE:

Cleaning cloths are removable and can be washed in your washing machine at temperatures below 86° F.

COBWEB AND FEATHER DUSTER:

Hand-wash by rinsing in warm water.

