

尺寸560x200mm 四折面 单黑 双面印

User Manual



Model：LZ-8052


Please read the manual carefully and keep it properly before use

This product is a long-handled electric cleaning brush with a toilet brush function, and comes with seven different brush heads that can be used for cleaning various areas in the home. The handle is detachable and adjustable in length for easy use.

warning

1. Do not immerse the electric cleaning brush in water or other liquids to avoid electric shock or damage to the equipment.
2. Before using the electric cleaning brush, please make sure your hands are dry to avoid electric shock accidents.
3. Do not use the electric cleaning brush to remove hard objects such as stones or metals to avoid damaging the equipment or causing danger.
4. During the cleaning process, do not bring the electric cleaning brush close to the eyes, ears, or other sensitive areas to avoid injury.
5. Do not wear loose clothing or long hair when using the electric cleaning brush to avoid being entangled or stuck by the cleaning brush.
6. When replacing the electric cleaning brush head, be sure to turn off the power and unplug the plug to avoid electric shock accidents.
7. Do not place the electric cleaning brush in a place where children can easily access it to avoid causing accidental injuries.
8. When using the electric cleaning brush, do not exceed the recommended use time to avoid overuse that may lead to equipment damage or danger.
9. If any faults or abnormalities are found in the electric cleaning brush, stop using it immediately and contact the after-sales service center for repair.
10. Do not disassemble or repair the electric cleaning brush by yourself to avoid causing equipment damage or danger.

Product construction

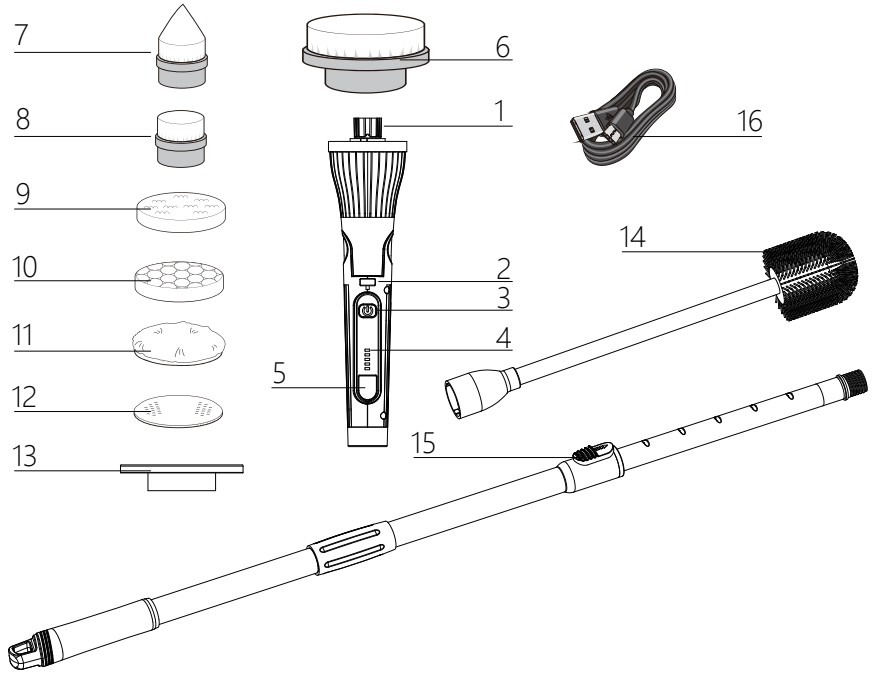

- | | |
|---------------------------|------------------------------|
| 1. rotary shaft | 11. Faux wool brush |
| 2. Gear shift pin | 12. Polishing cloth |
| 3. power switch | 13. Felt disc |
| 4. Power indicator light | 14. Toilet brush |
| 5. Charging port cover | 15. Length adjustment switch |
| 6. Big brush | 16. TYPE-C charging cable |
| 7. pointed brush | |
| 8. small brush | |
| 9. Rough cloth | |
| 10.Sponge polishing brush | |

Charging Precautions

Wireless electric cleaning brush is a convenient and practical cleaning tool, but it is important to pay attention to the charging method to ensure its normal use. Here are the charging instructions for the wireless electric cleaning brush:

1. First, turn off the power switch of the wireless electric cleaning brush to avoid accidents during charging.
2. Find a power adapter with a USB interface and an output voltage of DC5V, and insert the USB charging cable into the USB interface of the power adapter. (Fig1)
3. Insert the other end of the USB charging cable into the charging port of the electric cleaning brush. (Fig2)
4. Place the wireless electric cleaning brush on a flat surface during charging to avoid tilting or falling.
5. Confirm that the charging indicator light of the electric cleaning brush is on, indicating that it is charging.
6. Wait for about 3-4 hours until all the charging indicator lights of the electric cleaning brush are on, indicating that charging is complete.
7. Remove the USB charging cable and take the electric cleaning brush off the charger for use.



Please note the following points

1. Do not use non-original chargers or charging cables to avoid damaging the electric cleaning brush or affecting the charging effect.
2. Do not immerse the wireless electric cleaning brush in water or expose it to a damp environment during charging.

3. Do not let the wireless electric cleaning brush come into contact with metal objects during charging to avoid short circuits.
4. Do not place the wireless electric cleaning brush in a high or low temperature environment during charging to avoid affecting the battery life.

Product User Manual

- Preparation :
- Ensure that the electric cleaning brush is fully charged and that the brush head is installed on the electric cleaning brush.(Fig3)
 - Prepare the cleaning solution.
 - Press the switch of the electric cleaning brush to ensure that the brush head is working properly.(Fig4)

Here is an introduction to the usage methods and applicable scenarios of each brush head:

1. Large flat brush: Suitable for large area cleaning. Install the large flat brush head on the electric cleaning brush, turn on the power, gently press the brush head, and move it to the surface that needs cleaning to achieve the cleaning effect.
- 2.Small flat brush: Suitable for small area cleaning. Install the small flat brush head on the electric cleaning brush, turn on the power, gently press the brush head, and move it to the surface that needs cleaning to achieve the cleaning effect.
3. Pointed brush head: Suitable for hard-to-clean areas such as corners. Install the pointed brush head on the electric cleaning brush, turn on the power, align the tip of the brush head with the area that needs cleaning, gently press the brush head to achieve the cleaning effect.
4. Sponge brush head: Suitable for cleaning and polishing delicate surfaces. Install the sponge brush head on the electric cleaning brush, turn on the power, gently press the brush head, and move it to the surface that needs cleaning and polishing to achieve the cleaning and polishing effect.

5. Wool-like brush head: Suitable for cleaning leather, glass, and painted surfaces. Install the wool-like brush head on the electric cleaning brush, turn on the power, gently press the brush head, and move it to the surface that needs cleaning to achieve the cleaning effect.
6. Scouring cloth brush head: Suitable for deep cleaning and polishing of heavily greased surfaces. Install the scouring cloth brush head on the electric cleaning brush, turn on the power, gently press the brush head, and move it to the surface that needs cleaning to achieve deep cleaning and polishing effect.
7. Polyester cloth brush head: Suitable for surface polishing and waxing. Install the polyester cloth brush head on the electric cleaning brush, turn on the power, gently press the brush head, and move it to the surface that needs polishing and waxing to achieve the polishing and waxing effect.

Usage precautions:

- When replacing the brush head, please make sure that the electric cleaning brush is turned off and disconnected from the power.
- During use, please ensure that the brush head maintains proper contact with the surface for optimal cleaning effect.
- After use, please clean the brush head and let it dry to maintain its cleanliness and durability.



Installation and Usage Instructions for Toilet Brush

1. Preparation: Ensure that the battery is fully charged. Install the toilet brush spindle into the slot of the connector head and tighten the positioning ring. Make sure there are no other chemicals inside the toilet.(Fig5)

2. Instructions:

- a. Turn on the power switch of the electric toilet brush and make sure the brush head is installed on the brush head base.
- b. Gently place the electric toilet brush into the toilet, ensuring that the brush head fully contacts the surface of the toilet.
- c. Press the start button of the electric toilet brush to begin the cleaning process. The brush head will rotate automatically and release the cleaning agent.
- d. Move the electric toilet brush back and forth in the toilet to ensure that the brush head covers all areas that need cleaning. You can adjust the angle and position of the brush head as needed.

3. Cleaning brush head:

- a.After use, immerse the electric toilet brush in clean water, activate the switch, and let the brush head rotate automatically for a few seconds to complete the cleaning.
- b. Do not soak the brush head of the electric toilet brush in water to avoid damaging the electric components.
- c. Regularly replace the brush head to maintain cleanliness.

4. Precautions:

- a. Do not immerse the electric toilet brush in water or expose it to water to avoid electric shock or damage to the electric components.
- b. Do not allow the brush head of the electric toilet brush to come into contact with the skin or eyes during use to avoid injury or discomfort.
- c. Please keep the electric toilet brush out of reach of children to prevent accidents.
- d. Do not use the electric toilet brush for cleaning tasks other than the toilet.



Angle adjustment

1. First, make sure the electric cleaning brush is in the closed position.
2. Locate the angle adjustment button on the electric cleaning brush and push it downward with your thumb.(Fig6)
3. With the other hand, rotate the head of the machine and the angle of the brush head will change.(Fig7)
4. Adjust the angle of the brush head according to the cleaning needs, you can choose horizontal, vertical, or any other suitable angle.
5. Release the angle adjustment button and the brush head will lock into the selected angle.



Disposal methods for abandoned products.

1. Firstly, separate built-in lithium battery products from other waste for collection. Built-in lithium batteries are considered special waste and should not be mixed with regular garbage.
2. Hand over the built-in lithium battery products to professional electronic waste recycling organizations or designated collection points. These organizations have specialized equipment and technology to safely handle and environmentally friendly dispose of the waste lithium battery products.
3. Before disposal, deplete the battery power of the built-in lithium battery products. This can be done by using the product until the battery is fully drained or by connecting it to appropriate devices for discharge.
4. Before disposal, package the built-in lithium battery products securely to prevent damage or leakage.
6. Avoid throwing built-in lithium battery products into fire or causing physical damage to prevent battery explosions or leaks.
7. When disposing of built-in lithium battery products, comply with local laws, regulations, and environmental requirements to ensure proper handling and disposal.