

Rechargeable Fan

AC DC Table Fan User Manual

Model No: BR - 3437

***Before operating the appliance, please read this manual and all the safety instructions thoroughly and retain it for future reference.**

CONTENT	PAGE
SAFETY INSTRUCTION	3
OPERATION INSTRUCTION	4
CHARGING INSTRUCTION	4
MAINTENANCE INSTRUCTION	4
SPECIFICATION	4
WARRANTY	5
NOTE	5

SAFETY INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

1. To avoid electric shock, fire or injury, please read the user manual carefully before using the appliance and keep it for future reference.
2. This appliance is for household use only. Please use suitable power source (Please refer to SPECIFICATION).
3. Never immerse the appliance in water or other liquids.
4. Do not use the appliance under direct sunshine because of lithium battery.
5. Please turn off the appliance when not in use otherwise it may result in danger.
6. Please turn off the appliance and unplug the socket when unattended otherwise it may result in danger.
7. Keep the appliance away from children.
8. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. With any indication of damage or malfunction, please stop using the appliance immediately to avoid hazards. Take it to the authorized service center for repair. Do not attempt to repair or change any parts by yourself.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.
12. Please turn off and unplug the appliance before cleaning or maintenance.
13. Clean the surface of the appliance with a dry cloth. Do not use corrosive detergent or solvent to clean. Do not swash the appliance with water.
14. Please turn off and unplug the appliance when not in use. Make sure the power is off before pulling out the plug and do not pull the cord.
15. When the appliance is not in use for a prolonged period, please turn it off, unplug it, pack it well, and store it in dry cool place, but charge the product once in a 3 month.
16. Forbid to put flammable and explosive objects around the appliance, and do not use the appliance in an environment full of flammable gas and powder. Keep away from any fire and heat sources.
17. Please put the power cord in the right place in order to avoid tripping the appliance over.
18. Please keep the air inlet and the air outlet unblocked to minimize the risk of fire or malfunction.
19. Ensure no water or raindrop leaks into the appliance in order to avoid electric shock. Do not put flammable objects or wet clothes on the air outlet in order to avoid short circuit or fire.
20. Please do not place the air inlet or the air outlet near to curtains or walls when operation because it will block the air current and cause fire. The appliance should be installed at minimum distant of 10 cm from the wall or other obstacles.
21. Please do not insert any objects into the air inlet or the air outlet in order to avoid electric shock.
22. After a period of operation, abnormal noise and uneven air volume may appeared because of dust blocking airflow. It will disappear after cleaning the air inlet and outlet.
23. Do not insert any objects in the fan to prevent any injury or damage.
24. Do not hang any objects on the louver to prevent destabilizing the fan and impairing its operation.

OPERATION INSTRUCTION

1. Power on / speed adjustment:

Press fan ON to turn on the fan
OFF / Stop the fan
speed button for speed adjustment :
Press ON 1: Low Speed
Press ON 2: Medium Speed
Press ON 3: High Speed

2. Night lamp Power on / off:

Press fan ON switch to turn on the lamp
Off / Stop the lamp

3. Phone Charging:

Direct plug in USB on back side of fan to charge
your phone

4. AC/Electric Supply Working:

- Fan can work on AC/electric supply by connecting the USB/adaptor continuously.
- For AC purpose, Fan can't work on Baliraja adapter. Adapter is provided to charge the battery not to use on AC supply.
- To use fan on 2nd or 3rd speed with AC/electric supply, use high ampere (2 to 3 Ah) adapter or connect the USB to laptop/PC to use the fan continuously.

(In case, the fan stops running after few hours of uses, it means the battery goes too down, please charge the fan at least for half an hour and then use as AC or DC fan by connecting the USB/adaptor.

Fan stops after continuous uses that doesn't mean that there is any problem in fan or battery. That's the automatic stop function for better battery life.)

CHARGING INSTRUCTION

- Please turn off and unplug the appliance after 10 hours of charging.
- Do not charge the product more than 10 hours
- For fast charging, you may use high ampere adapter (2 to 3Ah) on your own risk.
- Charge the product once in 3 months for better battery performance.
- After fully charge, the power supply indicator will glow continuously (will stop blinking)

MAINTENANCE INSTRUCTION

Attention:

- Please turn off and unplug the appliance before cleaning or maintenance.
- Clean the surface of the appliance with a dry cloth.
- Do not use corrosive detergent or solvent to clean the appliance to avoid any discolouration or damage.
- Do not swash with water.
- Do not use hard objects to clean the fan.
- Regular cleaning is suggested to avoid dirt blockage that may result in mechanical failure.

SPECIFICATION

Model No.	BR - 3437
Product Name	Mini AC/DC Table Fan
Rated Voltage	220V-240V~ 50Hz
Rated Power	10W
Dimension (WxHxD)	210 x 210 x 75 mm
Battery capacity	mah
Battery type	Lithium ion battery
Max RPM of motor	2100 RPM

WARRANTY

1. The product has 6 months warranty from the date of purchase.

2. The warranty shall not apply:

A.to any product subjected to misuse, alteration, act of God, improper handling, improper transport, improper testing or unauthorized repair;

B.to cosmetic problems or defects which result from normal wear and tear under ordinary use yet not affecting the performance or use of the product;

C. if the product is disassembled or altered;
D. to any packing, transportation, export / import tax or any related expenses.

Within warranty coverage period, all checking, repair and spare parts cost will be waived for those defects arising from normal usage. Free replacements of spare parts do not include the following:

- Any circuit, outer cabinet, plastics accessories

NOTES

- To prevent circuit overload and fire, no more than one safety compliant adaptor or extension unit should be inserted into a socket outlet. (Do not connect other appliances to the socket outlet supplying an electric heater.) No adaptor should be inserted into any extension unit or vice versa.
- Stop using an adaptor or an extension unit or a socket if its socket holes cannot firmly hold a plug if it is too hard to insert a plug into it.
- This appliance must be plugged into a specific 220-240V~ socket. Please make sure the plug is fully plugged-in before use. Do not use any adapter or extension cord; never use the same supply socket for this appliance and other appliances at the same time, in order to avoid damage to this appliance.
- THE APPLIANCE IS FOR HOUSEHOLD USE ONLY.

ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help preserving the environment.

IMPORTANT NOTICES

IN NO EVENT SHALL OUR COMPANY OR THE SUPPLIER BE LIABLE TO YOU OR ANY OTHER PARTY FOR ANY DIRECT, INDIRECT, GENERAL SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR OTHER DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR INJURY, LOSS OF PROPERTY, BUSINESS PROFITS, BUSINESS INTERRUPTION) OR FROM ANY BREACH OF WARRANTY, EVEN IF OUR COMPANY OR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO CASE SHALL OUR COMPANY OR SUPPLIER'S LIABILITY EXCEED THE AMOUNT YOU PAID FOR THE PRODUCT.

Specifications, designs and dimensions are subject to change without prior notice.

