

Frequently Asked Questions

Set up notifications on the K400 Plus keyboard with Logitech Options

You can use Logitech Options to set up on-screen notifications for your K400 Plus keyboard:

Start Logitech Options:

Start > All Programs > Logitech > Logitech Options

If you have more than one product displayed in the Logitech Options window, select Wireless Touch Keyboard K400 Plus.

In the lower left corner, click More.

In the More Settings window, under Notifications, you can enable and disable on-screen notifications for when:

a lock key is pressed

the battery level is getting low

Set K400 Plus pointer speed and scrolling with Logitech Options

You can use Logitech Options to set the pointer speed.

Set pointer speed

Adjust scrolling

If you don't have Logitech Options, you can get the latest version of the software from the Wireless Touch Keyboard K400 Plus Download page.

To configure your pointer speed:

Start Logitech Options:

Start > All Programs > Logitech > Logitech Options

If you have more than one product displayed in the Logitech Options window, select Wireless Touch Keyboard K400 Plus.

Click the Point and scroll tab in the upper left corner of the window.

Under Pointer speed, adjust the slider to your preferred DPI value.

- **To adjust the scrolling:**

1. Start Logitech Options:

Start > All Programs > Logitech > Logitech Options

2. If you have more than one product displayed in the Logitech Options window, select **Wireless Touch Keyboard K400 Plus**.


3. Click the **Point and scroll** tab in the left hand corner of the software window.

4. You can adjust the following options for scrolling:

Set the scroll direction


There are two options for scrolling direction:

- **Traditional** — the contents of the window scroll up and down, left and right, depending on the direction you swipe
- **Content tracks fingers** — the contents of the window scroll down when you swipe your fingers up, and scroll up when you swipe your fingers down

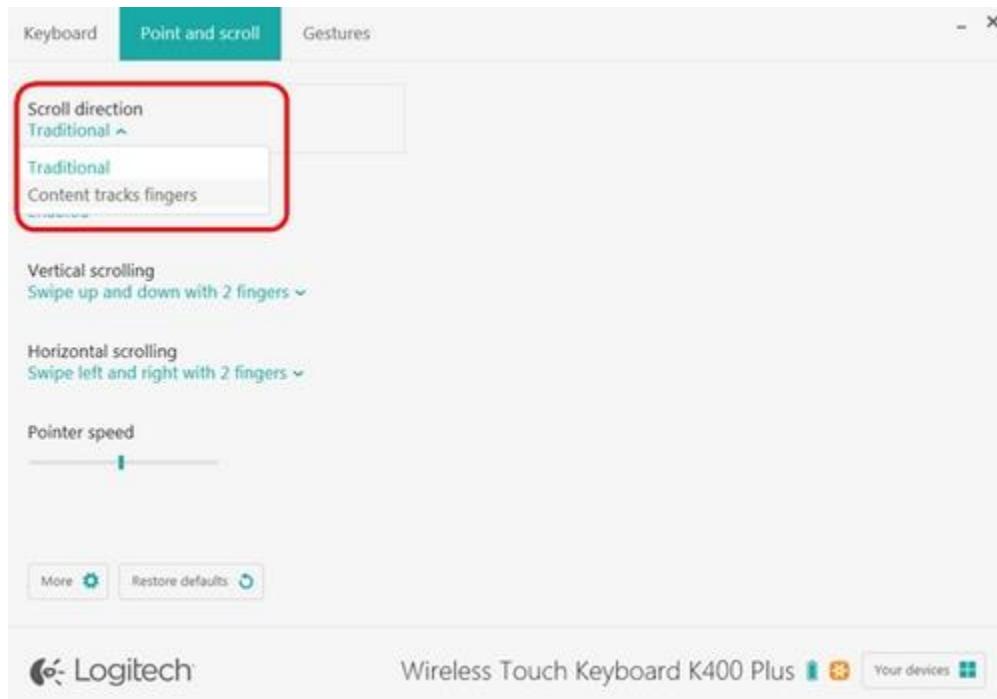


Smooth scrolling

This option can be enabled or disabled based on your preference.

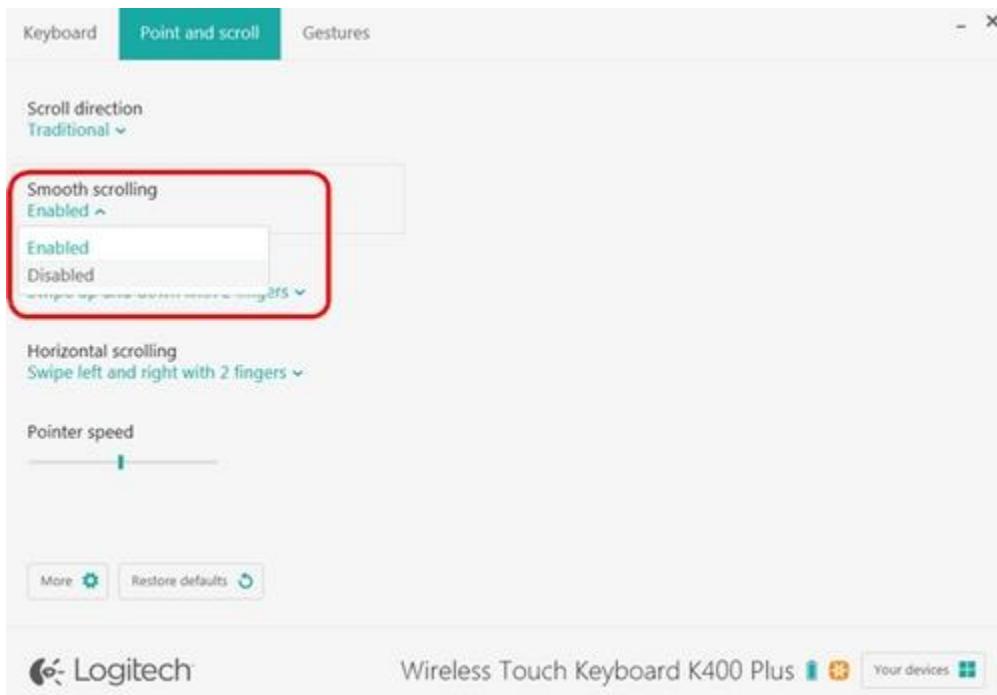


Vertical scrolling

The default for vertical scrolling is **Swipe up and down with 2 fingers**. You can scroll up or down by swiping up and down on the touchpad with two fingers. Select **Disabled** to turn off this feature.

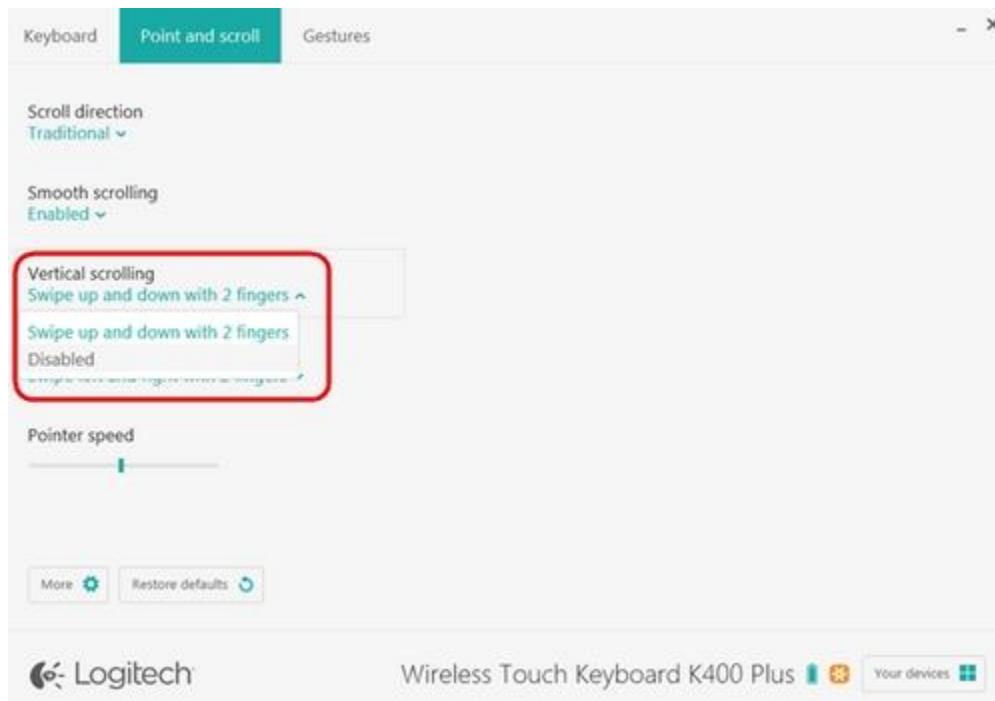

Horizontal scrolling

By default, horizontal scrolling is set to **Swipe left and right with 2 fingers**. This lets you scroll left and right on a page by swiping left or right with two fingers on the touchpad. Select **Disabled** to turn off this feature.

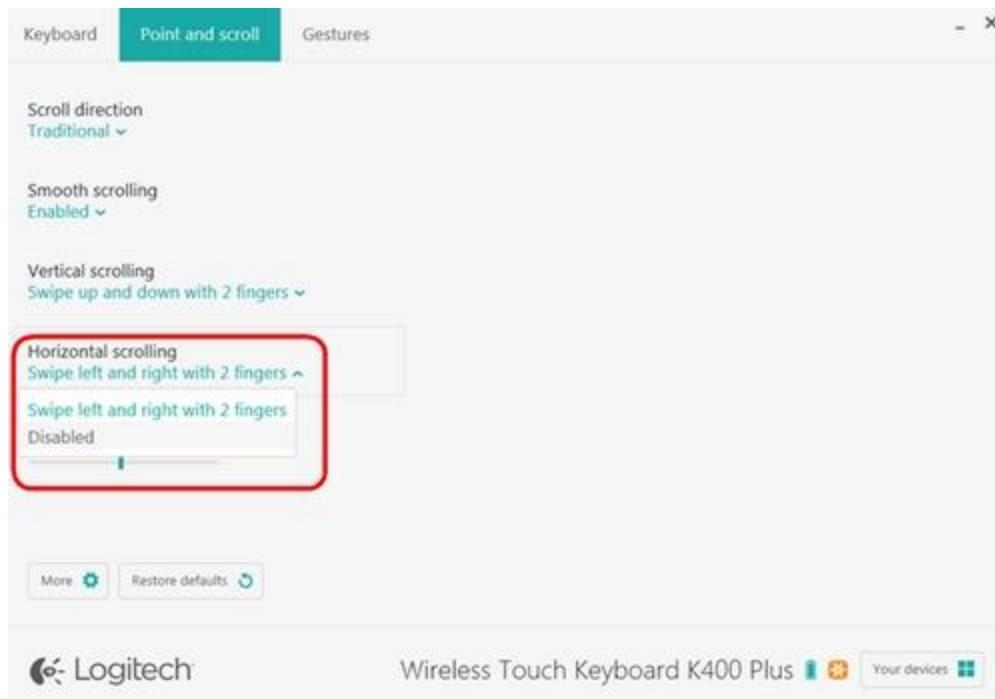

Tap and scroll on the K400 Plus keyboard

Touch tapping


Press the **FN** key and the left mouse button to disable and enable touch tapping.



When touch tapping is enabled:

- tap on the touchpad once to generate a single click
- tap on the touchpad twice to generate a double-click
- tap once with two fingers to generate a right-click

NOTE: You can also use the left mouse-click button on the upper left side of the keyboard. This lets you navigate on the touchpad with your right hand and select with your left.

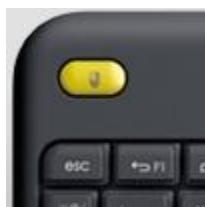

Scrolling



By default, swiping up and down on the touchpad with two fingers scrolls up and down. Swiping left and right with two fingers scrolls left and right.

NOTE: You can also press the **FN** key and slide one finger anywhere on the touchpad to simultaneously scroll in that direction.

Shortcut and function keys on the K400 Plus keyboard

The Wireless Touch Keyboard K400 Plus keyboard comes with pre-assigned shortcut and function keys. These streamline navigation, media control and keyboard functions.

Key	Shortcut / Function
	Back
	Home
	Switch application
	Menu
	Search
	Show/hide desktop
	Maximize window
	Switch screen
	Media
	Previous track
	Play/Pause
	Next track
	Mute

  Key	Shortcut / Function
	Volume down
	Volume up
	FN + ins: PC sleep
	FN + backspace: print screen
	FN + caps lock: scroll lock
	FN + left arrow: home
	FN + right arrow: end
	FN + up arrow: page up
	FN + down arrow: page down

To select a function key, hold down the **FN** key, and then press one of the keys listed in the table above.

For example, to use F5, hold down **FN** and then press the **Search** key



You can also set the keyboard to only use standard F1 - F12 functions. See [Set the K400 Plus keyboard to use standard function keys](#) for more information.