



Model: TFM01

## User Manual

## Description

This 400W Theefun Fog Machine is used to produce dense, unscented and long lasting fog, ideal for live concerts, stages, theaters, DJ's, parties, weddings, KTV, pubs, balls and family entertainment gatherings. Just hide the machine in a place where it can't be seen and then click the remote to send out a blast of fog.

## Caution

- Use indoors only.
- Non-waterproof. If there are water drops or fog fluid on its surface, please switch off the device at once and wipe it out.
- Put it in horizontal direction. Don't incline it or place it upside down.
- Do not put it on the wood materials, carpets or other inflammables.
- Often check whether there has enough fog fluid in the tank before use to avoid damages.
- There may be burnt odor for the first use. That's normal. About 10 minutes later, this odor will die away.
- Keep over 1m away from this fog machine because of high temperature(surface temperature: 40-80 C) of fog nozzle.
- Put the machine at a drafty place to keep the best cooling effect.
- Do not spray fog to people directly and far away from fire or other heat resources.
- Use professional fog fluid. Do not add any flammable liquid such as oil, natural gas, explosives, perfume etc. in its tank.

## Specifications

- Voltage: AC 100-120V 60Hz, AC 220-240V 50Hz
- Power: 400W
- Tank Capacity: 300ml(0.079 gal)
- Output: 1500 cfm
- Fluid Consumption: 7.5 ml/min
- Warm up Time: 3-5 min
- Output Distance: 2-3 m
- Remote Length: 3m/9.8ft
- Dimension: 23 x 11 x 11.5 cm / 9.06 x 4.33 x 4.53 in (L\*W\* H)
- Weight: 1.8kg

## Package Contents

- 1 x Fog Machine
- 1 x Remote Console
- 1 x Handle
- 2 x Screw
- 2 x Gasket
- 1 x User Manual

## Operational Instruction

- Add a certain volume of professional fog fluid into its tank and screw tightly the cover of liquid can.
- Connect the remote console to this fog machine and then plug power cable to an appropriate power socket(red indicator lights on).
- Press down the rocker switch on fog machine to let it warm up. 4-5 minutes later, a "DI" sound indicates completing warm up process(green indicator lights on).
- Press down and hold red button on remote console for about 60s until it sprays fog.
- It will spray fog continuously for 10-20s, then stop spraying for preheating again.
- 2-3 minutes later, another "DI" sound indicates completing warm up process.
- Press down and hold red button on remote console to continue spraying fog.
- Press the rocker switch again to power off fog machine and unplug power cable from power socket.

## Maintenance

- Please use mixed liquid of 80% distilled water and 20% vinegar to clean the dirty in refractory pipe before and after each use.
- Reequip the spray nozzle after cooling and add fog fluid for next use.
- Use dry cloth to clean machine and keep it dry for storage.