
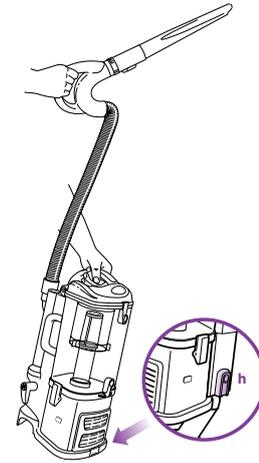
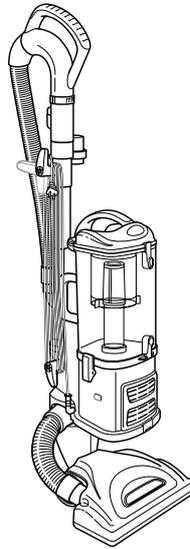


Shark

Navigator[™] Lift-Away[™] PRO

QUICK START GUIDE: ASSEMBLY
Simple steps to get you cleaning with your new Shark Navigator[®] Lift-Away[®] Pro vacuum.

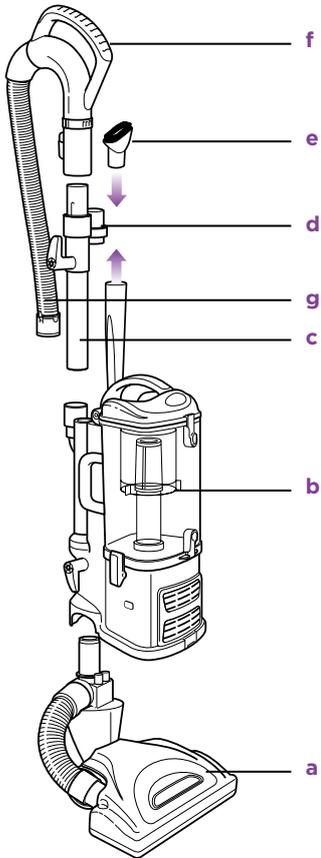

CARPET AND BARE FLOOR CLEANING:

- 1 Attach floor nozzle (a) into the bottom of the canister (b).
- 2 Insert extension wand (c) into the back of the canister, slide on the accessory holder (d) and place the onboard tools on the holder (e).
- 3 Insert handle (f) into the top of the extension wand and connect the hose (g) to the back of the canister.

PORTABLE LIFT-AWAY:

- 1 Detach handle (or handle with extension wand) by pressing the handle release button.
- 2 To detach the canister, place foot on floor nozzle, press red nozzle release button (h), then lift the canister off the nozzle.
- 3 Attach desired tools to handle to clean.




Shark

Navigator[™] Lift-Away[®] PRO

QUICK START GUIDE: USE AND CARE

▲ IMPORTANT: Loss of Suction may occur if foam filters are not cleaned every 3 months. Rinse and allow to air-dry completely. Also, tap loose dirt off filter between washes as needed. Foam filters may appear dirty after use - this is normal. Please refer to the maintenance section of the Owner's Guide for instructions on cleaning the filters.

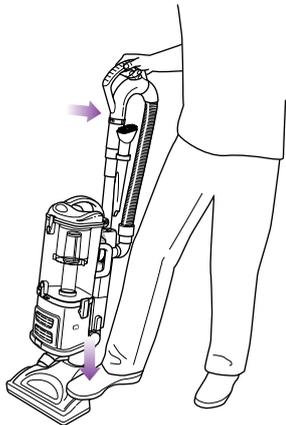


- || = Carpet Cleaning
- | = Bare/Above Floor
- = OFF



BRUSHROLL ON/OFF:


- 1 Press the **ON/OFF** switch at the top of the canister to the **/** position to vacuum bare floors (straight suction only) or use **Lift-Away[®]** mode. To vacuum carpets and rugs, set the switch to the **||** position to engage the motorized floor brush.
- 2 Press the floor nozzle down with your foot and tilt the handle back towards you to engage the brushroll.

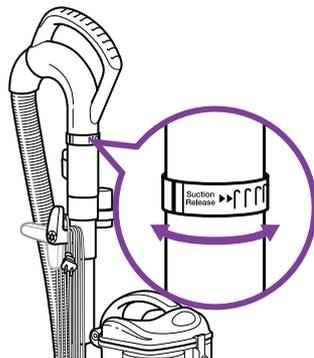

SUCTION CONTROL


This vacuum has huge suction power. The suction can be adjusted to make the vacuum easier to push and pull on certain types of carpets as needed.

Adjust the amount of suction by rotating the suction release collar on the handle counterclockwise to reduce the suction or clockwise for maximum suction.

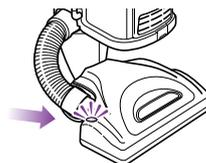

INDICATOR LIGHT

The motorized brush indicator light will illuminate **Green** when motorized floor brush is on. If there is a blockage or jam, the light will turn **Red** (see page 9 of the Owner's Guide).

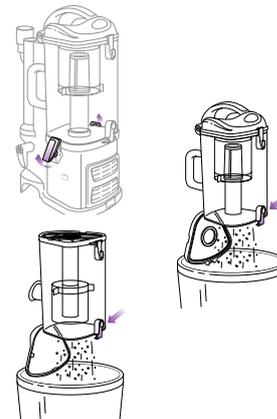

EMPTYING THE DUST CUP

- 1 Pull up the latches on the sides of the dust cup to release.
- 2 Hold the dust cup over a trash receptacle and press the bottom door release button.
- 3 If needed, turn the dust cup upside down over the trash and press the top door release button.