


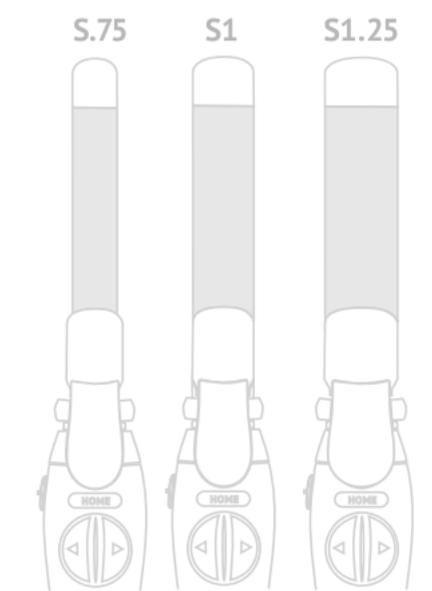

# BEACHWAVER®

## CERAMIC ROTATING CURLING IRON

### USER MANUAL



## USER MAINTENANCE

The BEACHWAVER® is virtually maintenance-free. If surface becomes dirty, unplug iron and, when it is cool, wipe the exterior with a cloth. If anything abnormal occurs, contact an authorized service representative. Do not attempt to repair iron yourself.

**Attempting to repair iron yourself voids warranty.**

## STORAGE

When not in use, turn off and unplug the curling iron. Allow the iron to cool, and store out of reach of children in a safe, dry location. Never wrap the cord around the iron as this may cause premature wear of the cord and may lead to cord damage that is not covered under manufacturer's warranty. Handle the cord carefully to extend cord life, and avoid jerking, bending or twisting the cord, especially at the plug connection.

## WARRANTY

At The Beachwaver Co.™ we want you to be thrilled with our tools. We want you to look and feel beautiful. We believe in the quality of our tools and test each iron thoroughly. We welcome your feedback and, in the event of any problem, we welcome the opportunity to make it right!

The Beachwaver Co.™ will replace your styling iron for one year from the date of purchase if the product is defective in materials or workmanship. In no event shall The Beachwaver Co.™ be liable for any special, incidental or consequential damages for breach of this or any other warranty, express or implied, whatsoever. Any implied warranties, obligations or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose shall, be limited to the one-year duration of this written limited warranty. The warranty does not apply in the following scenarios: any unauthorized party opened the product in an attempt to fix the product, normal wear and tear, purchasing from an unauthorized seller, damage caused by misuse or mishandling, or due to user error. Warranty application is determined in the sole discretion of The Beachwaver Co.™

### YOU MUST REGISTER YOUR TOOL TO BE ELIGIBLE FOR WARRANTY!

Please contact [customerservice@beachwaver.com](mailto:customerservice@beachwaver.com) for information on how to register your iron or to make a warranty claim.

Stay connected! @TheBeachwaver

## OPERATION

To turn the BEACHWAVER® on, press and hold the ON/OFF button for 1 second. The temperature will illuminate to 350°F and can be adjusted by pressing the +/- buttons. It is important to always select the proper heat settings for your hair type. To unlock and adjust temperature, press the Power button until it beeps and use the +/- buttons.

**Fine or damaged hair:** 290°F - 330°F

**Medium or normal hair:** 330°F - 370°F

**Thick or coarse hair:** 370°F - 410°F

## CHANGING ROTATION SPEED

Switch button upward for *normal speed*.

Switch button downward for *slow speed*.

## ERROR MESSAGES

Error messages indicate an issue with the iron. After error displays and beeps all functions will stop. Error display will continue until unplugged from outlet.

**Please see below error messages:**

Error No. 1 With Alarm	Error No. 2 With Alarm	Error No. 3 With Alarm	Error No. 4 With Alarm
Err no1	Err no2	Err no3	Err no4
Temperature Defect	Button Arrest (Button continuously pressed)	Temperature Overheating	Low Temperature

**If any of the above error messages occur, please do the following:**

1. Stop use at once.
2. Turn off and unplug from outlet. This will stop the power to the heaters. Retry in 10 minutes.
3. Press power button to reset.
4. If error message displays, ask the distributor for check and service.

# IMPORTANT SAFETY INSTRUCTIONS

When using iron, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

### KEEP AWAY FROM WATER!

**DANGER**— As with most electrical appliances, parts are live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug it immediately after use.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in water or other liquids.
5. If the appliance falls into water, unplug it immediately.

DO NOT REACH INTO WATER!

**WARNING**— To reduce the risk of burns electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used on or near children or individuals with certain disabilities.
3. This iron is only intended for use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or it has been damaged or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.

7. Never use while sleeping.
8. Never drop or insert any object into opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Connect this appliance to a properly grounded outlet only. (See section "Grounded, cord-connected appliances")
11. Do not use an extension cord with this appliance.
12. This curling iron and clip are hot when in use. Do not let eyes and bare skin touch heated surfaces.
13. Do not place the heated curling iron directly on any surface while it is hot or plugged in. Use the stand provided.
14. Do not use if hair has been treated with flammable products, like hairspray.
15. Iron will be hot when in use.
16. Do not allow children to use.
17. Do not use iron when you are impaired in any way.
18. Iron must be completely cooled before storing.
19. Do not attempt to touch the surface of the iron, as it is hot and can cause injury, burns or pain.
20. Do not use with voltage converter.
21. Do not use without the assistance of a mirror.
22. Do not pull, twist or wrap cord around iron.



## SAVE THESE INSTRUCTIONS

### DO NOT USE WITH ADAPTERS OR CONVERTERS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to alter this safety feature.

**WARNING:** The BEACHWAVER® has a motorized function that, if impaired, could cause serious pain or burns to the scalp. If used improperly or if product malfunctions, the digital temperature screen will display the letters ERR. (See section "ERROR MESSAGES") Discontinue use immediately. If the motor continues to rotate without the control of the Rotation Button, immediately release the clamp, slide hair out and/or turn off and unplug unit.


**WARNING:** POSSIBLE ELECTRIC SHOCK. DO NOT IMMERSE IN WATER OR USE WHILE BATHING.

**WARNING:** The BEACHWAVER® is an electrical appliance and reaches high temperatures. Use of iron requires constant supervision and should be kept away from water.

### Grounded, cord-connected appliances:

This appliance is for use on a circuit with a nominal rating of (or more than) 120 volts and is factory equipped with a specific electrical cord and plug to permit connection to a proper electrical circuit. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance. Do not modify the plug provided if it doesn't fit the outlet.

**This appliance is for household use.**

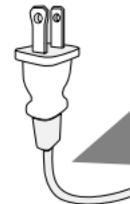

120V~ 60Hz  
OUTLETS WITH TYPE  
A/B PLUGS ONLY  
Do not use with a  
voltage converter

MADE IN SOUTH KOREA



120V~ 60Hz - OUTLETS WITH TYPE A/B PLUGS ONLY.  
DO NOT USE WITH A VOLTAGE CONVERTER.