

User Manual of Product 1:

Etekcitey Scale for Body Weight and Fat Percentage, Smart Digital Bathroom BMI Measurement, Accurate Bluetooth Weighing Machine, Body Composition Analyzer, 400lb

User Manual of Product 2:

Etekcitey Food Kitchen Scale, Digital Grams and Ounces for Weight Loss, Baking, Cooking, Keto and Meal Prep, Medium, Silver Stainless Steel



Smart Fitness Scale

Model: FIT 8S

User Manual



Questions or Concerns?

Mon–Fri, 9:00 am–5:00 pm PST/PDT
support@etekcity.com • (855) 686-3835

Thank you for purchasing the Smart Fitness Scale by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**.
We hope you enjoy your new smart fitness scale!

Table of Contents

Package Contents	4
Specifications	4
Safety Information	5
Function Diagram	7
Digital Display	8
VeSync App Setup	9
Before First Use	10
Using the Smart Scale	10
Using the App	13
Maintenance	14
Troubleshooting	17
Warranty Information	21
Customer Support	26

Package Contents

- 1 x Smart Fitness Scale
- 3 x 1.5V AAA Batteries (Pre-Installed)
- 1 x Quick Start Guide

Specifications

Weight Capacity	400 lb / 28 st / 180 kg
Increments	0.1 lb / 0.05 kg
Weight Units	lb / st / kg
Platform	Tempered glass
Dimensions	10.2 x 10.2 x 0.8 in / 26 x 26 x 2.1 cm
Battery	3 x 1.5V AAA Batteries
Auto-Off	30 seconds



READ AND SAVE THESE INSTRUCTIONS

Safety Information

Please read and follow all instructions and safety guidelines in this manual.

Medical

- This scale should not be used to diagnose or treat any medical condition.
- Scale data should not be used as a substitute for medical advice from a healthcare professional.
- This scale uses a harmless electrical current to measure body fat. Consult a healthcare professional before using the smart scale if you use medical electronic equipment such as a pacemaker.

General Use

- Check the scale before using. **Do not** use the scale if it is damaged in any way.
- **Do not** strike or hit the scale. **Do not** use the scale if the glass is cracked or broken. Due to the nature of tempered glass, the glass will shatter if there is even a slight crack. If you see a crack, contact **Customer Support** immediately (page 26).




- The glass platform is slippery when wet. **Always** make sure the platform and your feet are dry before stepping on for measurement.
- Place the scale on a hard, flat surface to avoid tipping.
- To weigh safely and accurately, stand with your feet shoulder-width apart while on the scale. **Do not** stand on the edge of the scale or jump on the scale.
- Avoid standing on the scale for a long period of time, or when not weighing yourself.
- **Do not** overload the scale. Maximum weight capacity is 400 lb / 28 st / 180 kg.
- Keep the scale in a cool area with low humidity. Keep the scale away from heat sources, such as ovens or heaters. Avoid temperature fluctuations. Store the scale in a horizontal position, not a vertical position.
- Handle with care.
- Not for commercial use. Household use **only**.

Batteries

- **Do not** mix new and old batteries.
- If the low battery indicator (“Lo”) appears on the display, replace the batteries.
- If the scale is not in use for a long period of time, remove the batteries to extend the lifetime of the scale.



Function Diagram

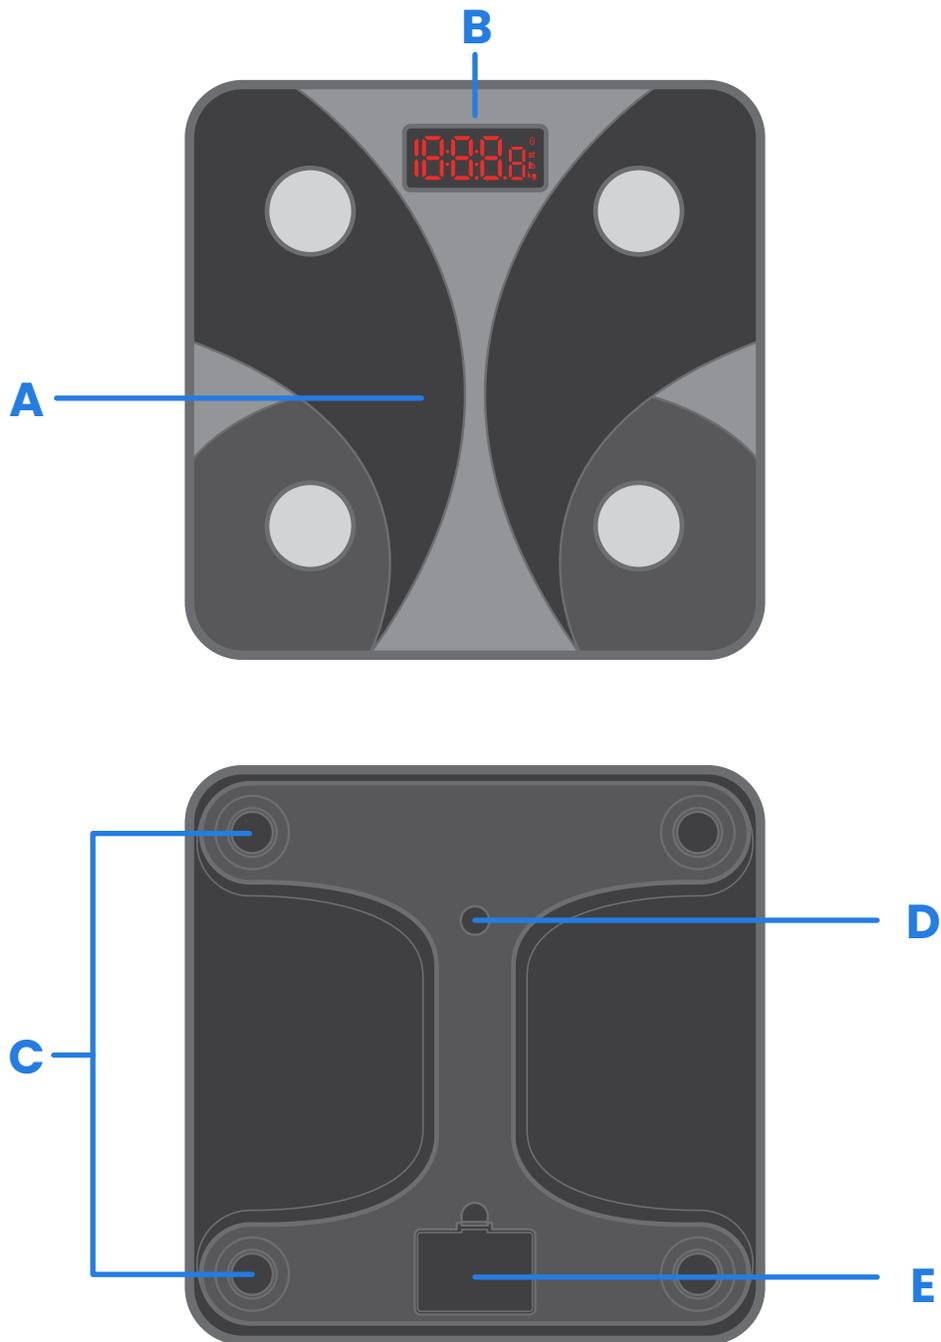


- A.** Weighing Platform
- B.** Display
- C.** Anti-Skid Padding

- D.** Unit Switching Button
- E.** Battery Compartment



Digital Display

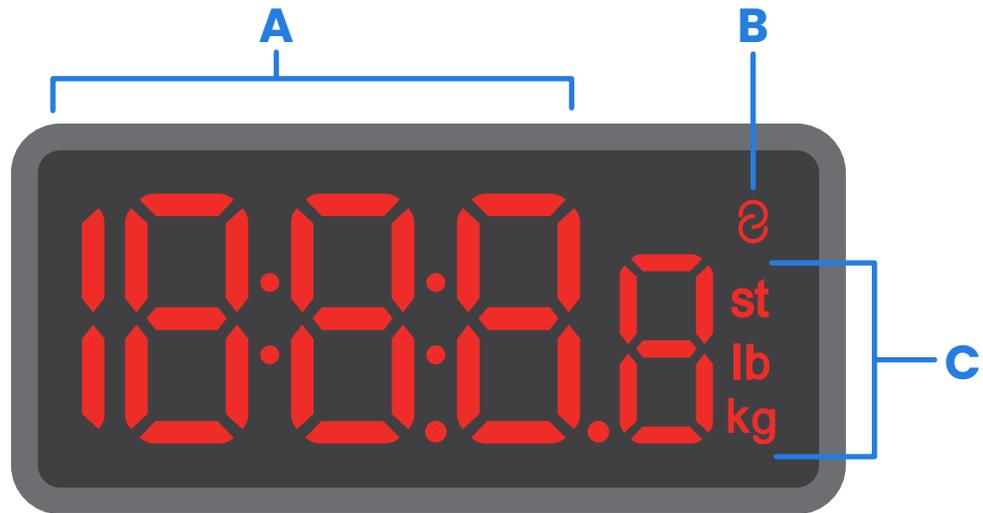

- A.** Weight Measurement
- B.** Wireless Connection Icon
- C.** Weight Units



VeSync App Setup

Note: Due to app updates and improvements, the contents of this manual may change without notice. The VeSync app user interface may appear slightly different.

1. To download the VeSync app, scan the QR code or search “VeSync” in the Apple App Store® or Google Play™ Store.

Note:

- This scale uses the VeSync app, not the VeSyncFit app.
- For Android™ users, you may need to select **Allow** to use VeSync.

2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.



3. Make sure your phone has Bluetooth® turned on.
4. Tap **+** in the VeSync app and select your smart fitness scale.

Note:

- Make sure to choose the right device model (you can find it on the back of the scale), or it will lead to a connection failure.

5. Follow the in-app instructions to connect to your smart fitness scale.



Before First Use

1. Open the battery compartment on the underside of the scale. Remove the included AAA batteries.
2. Remove the plastic insulator strip from the battery compartment.
3. Replace the batteries. Follow the guidelines in the battery compartment to match the **+** and **-** terminals.

Using the Smart Scale


Note:

- *If you are pregnant, scale measurements will not be accurate.*
- *If you want to measure the weight of your baby or pet, you can click the “” (Expand) button in the lower right corner of the home page and click the “” (Baby Mode) button to enter the baby measurement mode and measure according to the prompts. In baby mode, the APP will only measure weight and BMI.*




Weighing Without the VeSync App

1. Place the scale on a hard, flat surface. [\[Figure 1.1\]](#)
2. Step on the scale, then step off. Wait for the screen to display “0.0” before using.
3. Place dry, bare feet on the scale’s conductive areas. Stand on the scale until the display flashes several times, showing your final measurement. [\[Figure 1.2\]](#)

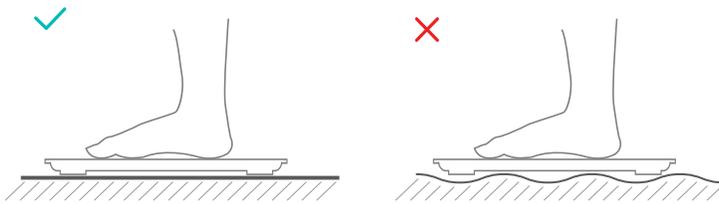

[\[Figure 1.1\]](#)

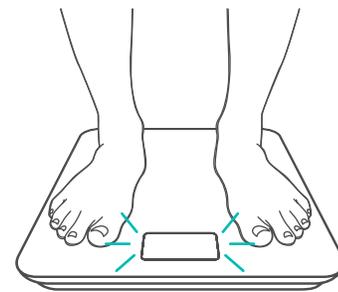


[\[Figure 1.2\]](#)



Switching Units

1. To change the unit of measurement (kg, lb, or st), step on the scale to turn it on. Then, turn the scale over and press the unit conversion button on the underside. To keep the settings consistent, make sure the scale is connected to the VeSync app. [\[Figure 1.3\]](#)
2. The default unit is pounds (lb). After changing units, the scale will show the new unit of measurement.

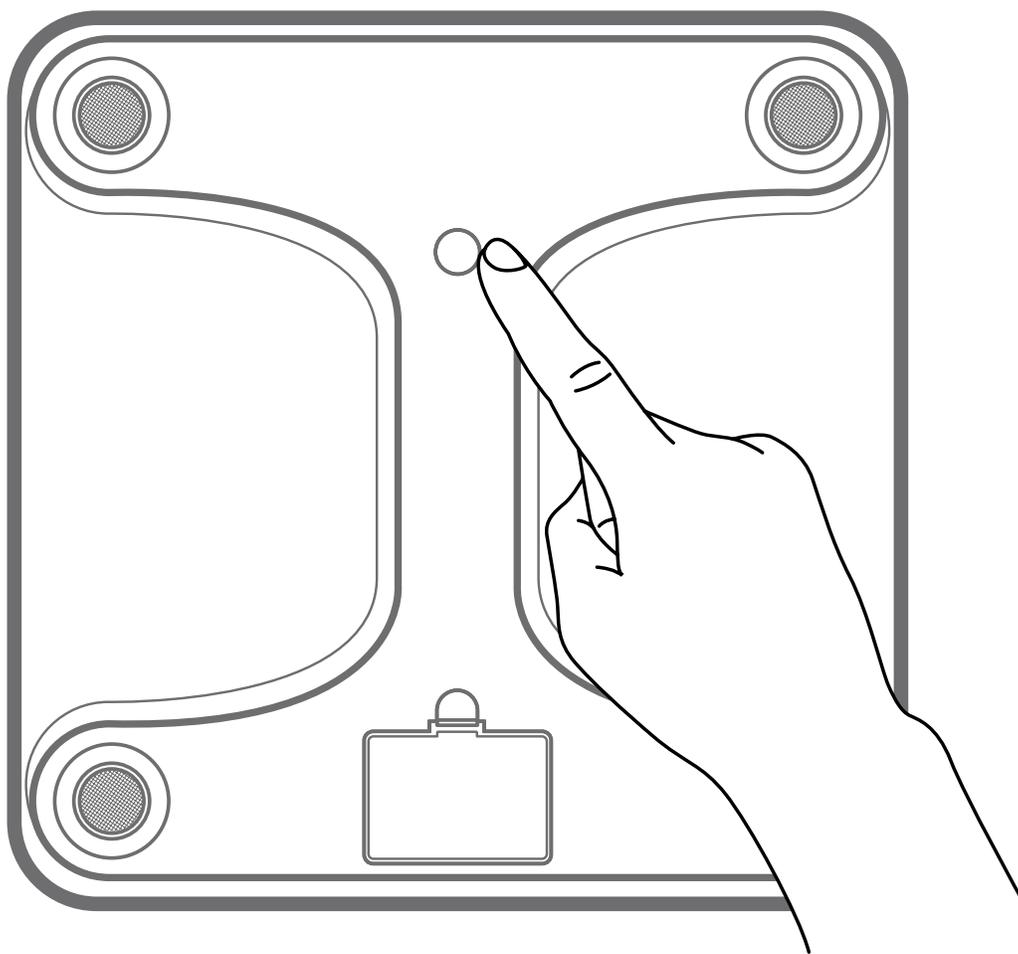

[\[Figure 1.3\]](#)



Using the App

Creating a User

If you are a new user, you will need to enter your physical information before weighing yourself for the first time so the scale can calculate your body metrics.

Note:

- *Entering inaccurate information will make the scale's measurements less accurate.*
- *If you don't identify with the available gender options, or are unsure, pick the choice that you think best physically matches you. This choice is used for physical measurements, such as body fat percentages.*




Maintenance

Clearing the Scale

If the scale has been moved or flipped upside down, it must be cleared to ensure accurate results.

1. Place the scale on a hard, flat surface.
2. Step on the scale until digits appear on the display, then step off. [\[Figure 2.1\]](#)
3. The scale will show “0.00” when cleared. [\[Figure 2.2\]](#)

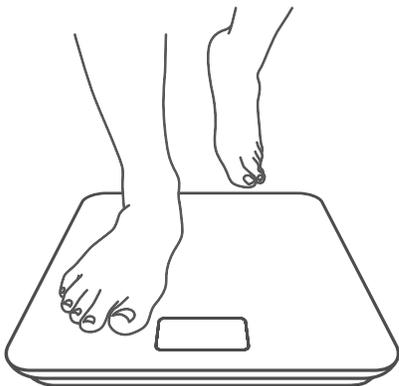

[\[Figure 2.1\]](#)



[\[Figure 2.2\]](#)



Cleaning the Scale

- Use a slightly damp cloth to clean the surface of the scale, followed by a soft, dry cloth to wipe away any remaining moisture.
- **Do not** use chemical or abrasive cleaning agents to clean the scale.


Replacing the Batteries

The display will show “**Lo**” when the batteries need to be replaced.

1. Open the battery compartment on the underside of the scale.
2. Remove the old batteries and dispose of them properly.
3. Install 3 new 1.5V AAA batteries. Follow the guidelines in the battery compartment to match the **+** and **-** terminals.
4. After closing the battery compartment, clear the scale (see **Clearing the Scale**, page 13).




Display Messages

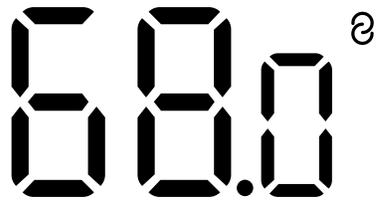A 7-segment display showing the number '68.0'. The first digit is '6', the second is '8', and the third is '0'. A small 'e' symbol is positioned above the top-right corner of the '0'.

Wireless Connection

A 7-segment display showing the characters 'Lo'. The 'L' is formed by the left vertical bar, the bottom horizontal bar, and the bottom-right vertical bar. The 'o' is formed by the top horizontal bar, the top-right vertical bar, the bottom-right vertical bar, and the bottom horizontal bar.

Change Battery

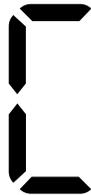A 7-segment display showing the character 'E'. It is formed by the left vertical bar, the top horizontal bar, the bottom horizontal bar, and the right vertical bar.

Clearing

A 7-segment display showing the characters 'Err'. The 'E' is formed by the left vertical bar, the top horizontal bar, the bottom horizontal bar, and the right vertical bar. The first 'r' is formed by the top horizontal bar, the top-right vertical bar, the bottom-right vertical bar, and the bottom horizontal bar. The second 'r' is formed by the top horizontal bar, the top-right vertical bar, the bottom-right vertical bar, and the bottom horizontal bar.

Overload



Troubleshooting

The scale doesn't turn on.

- Check if the batteries are properly installed. If using the scale for the first time, remove the plastic insulator strip from the battery compartment.

Information flashes on the screen and then disappears.

- The batteries are low and may need to be replaced.

The smart scale can't be added to the VeSync app.

1. Please confirm the following things before pairing.

- The scale should only be connected to your phone via the VeSync App. Please do not connect the scale to your phone's Bluetooth® settings.
- Allow VeSync to access your Bluetooth® in your phone settings.
- Your scale and phone are within 30 ft (10 m) of each other.
- The scale is not currently connected to any other phone or app.
- Your phone's operating system is running on iOS® 12.0+ or Android 6.0+.
- You're using the latest version of the VeSync App.
- Turn off VPN (please ignore it if you are not using it).

Note:

- *For Android 12+ users, make sure that you turn on the nearby device permission and Bluetooth® to scan the target device. For users whose Android system is below Android 12, make sure that turn on location and Bluetooth® to scan the target device.*



2. Try the following steps to pair your scale and your phone.
 - Enable Bluetooth® on your Phone.
 - Light up the scale and keep it on.
 - Open the Vesync App, and click “Add Device” or “+” on the top right corner of the home page. Choose “Health” to select your device model, and then follow the APP guides.

Note:

- *Make sure to choose the right device model (you can find it on the back of the scale), or it will lead to a connection failure.*

The data can't be synced to the VeSync app.

1. When the scale turns off, it will enter into power-saving mode and the scale and app will be disconnected. To sync data to the app properly, you need to reconnect the scale and the app through the following steps.
 - Restart the Bluetooth® of your phone.
 - Light up the scale and keep it on, then open the APP to enter the weighing homepage, wait for the Bluetooth® connection to be successful, then weigh on the scale.
2. Reset your scale or restart the Bluetooth® of your Phone.
 - Remove the batteries for 5-10 seconds, then put them back in.
 - Try restarting your phone's Bluetooth® after restarting the phone.
 - Try the methods in solution 1 again.
3. Bluetooth® detection.
 - Open the APP to enter the weighing homepage, click “Setting” on the top right corner, then “Troubleshooting”, and “Start Testing” to detect Bluetooth® anomalies.



My scale only measures my weight, not my body fat or other metrics.

- Set up your smart scale in the VeSync app. Your weight will show on the scale display, and more results will show on the app.
- Make sure Bluetooth is turned on.
- If you're wearing shoes or socks, the scale cannot measure health metrics such as body fat. Step on the scale with bare feet.
- If your feet are too dry or too wet, the biometrics may not be detected. Since skin can become very dry during winter, please also try to apply some lotion or have a foot soak when it cannot measure other measurement values.

Note: *If the scale has errors on the display, will not turn off automatically, or has a problem not listed here, try removing the batteries for 3 seconds, then replacing them.*

If you still need help, please contact **Customer Support** (page 26).



Federal Communication Commission

Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.



Warranty Information

Product	Smart Fitness Scale
Model	FIT 8S
For your own reference, we strongly recommend that you record your order ID and date of purchase.	

Etekcitey Limited Product Warranty

Register your products at <https://warranty.etekcity.com/warranty> to stay up to date with important product information such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

Two (2) Year Limited Consumer Product Warranty

Etekcitey Corporation (“Etekcitey”) warrants that the product shall be free from defects in material and workmanship for a period of **2 years from the date of original purchase** (“Limited Warranty Period”), provided the product was used in accordance with its use and care instructions (e.g. in the intended environment and under normal circumstances).

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Etekcitey will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Etekcitey store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers.

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Etekcity's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Etekcity's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Etekcity or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support via support@etekcity.com.

What's Not Covered?

- Normal wear and tear, including parts that might wear out over time (e.g. batteries, filters, cleaning brush, essential oil pads, etc.).
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcity.



- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. **DO NOT** dispose of your product before contacting us.
4. Contact our Customer Support team via support@etekcity.com.
5. Once our Customer Support team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy.

THE FOREGOING LIMITED WARRANTY CONSTITUTES ETEKCITY CORPORATION'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF ETEKCITY CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

Disclaimer of Limited Warranties.

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, ETEKCITY CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM ETEKCITY CORPORATION "AS IS" AND ETEKCITY CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY



WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL ETEKCITY CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM ETEKCITY CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF ETEKCITY CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, ETEKCITY CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

OTHER RIGHTS YOU MAY HAVE

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE



LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

CHANGES TO THIS POLICY

We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

Etekcity Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806
USA



Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcitey Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806
USA

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

**Please have your order invoice and order ID ready before contacting Customer Support.*



Attributions

Google, Android, and Google Play are trademarks of Google LLC.

App Store[®] is a trademark of Apple Inc.

iOS is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Etekcify Corporation is under license. Other trademarks and trade names are those of their respective owners.







User Manual

Digital Kitchen Scale

Model: EK7090



Questions or Concerns?

Mon-Fri, 9:00 am-5:00 pm PST/PDT
support@etekcity.com • (855) 686-3835

Thank you for purchasing the Digital Kitchen Scale by Etekcity.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**.
We hope you enjoy your new kitchen scale!

Table of Contents

Specifications	4
Important Safety Information	5
Function Diagram	6
Before First Use	7
Using Your Scale	8
• General Operation	8
• Unit Conversion	8
• Automatic Power Off	8
• Manual Power Off	9
• Zero / Tare Function	9
Replacing the Batteries	10
Troubleshooting	11
Warranty Information	12
Customer Support	14

Specifications

Weight Capacity	176 oz / 11 lb / 5000 g / 5000 mL
Units	oz / lb:oz / fl oz (water/milk) / g / mL (water/milk)
Increments	0.05 oz / 1 g / 1 mL
Auto-Off	3 minutes
Battery	3 x 1.5V AAA batteries
Dimensions	7.9 x 5.6 x 0.5 in / 200 x 141 x 12.5 mm



READ AND SAVE THESE INSTRUCTIONS

Important Safety Information

To avoid damage to this scale, please read and follow all instructions and safety guidelines in this manual.

Scale

- **Do not** exceed the 11 lb / 5000 g weight capacity as it will damage the scale. An error indicator will appear on the LED display if the limit is exceeded.
- **Do not** immerse the scale in water or any liquid. If liquid is spilled on the digital display or buttons, immediately wipe the scale clean with a soft cloth to avoid internal damage.
- Handle with care. This scale is not intended for commercial or heavy-duty use.
- Keep the scale in a cool, dry place. Avoid exposure to damp environments or extreme temperatures.
- Household use **only**.


Batteries

- **Do not** mix new and old batteries.
- If the low battery indicator (“Lo”) appears on the display, replace the batteries.
- If the scale is not in use for an extended period of time, remove the batteries to conserve battery life and extend the lifetime of the scale.



Function Diagram

- A. Unit Selection Button
- B. LED Display
- C. Power/Tare Button
- D. Anti-Skid Pads
- E. Battery Compartment

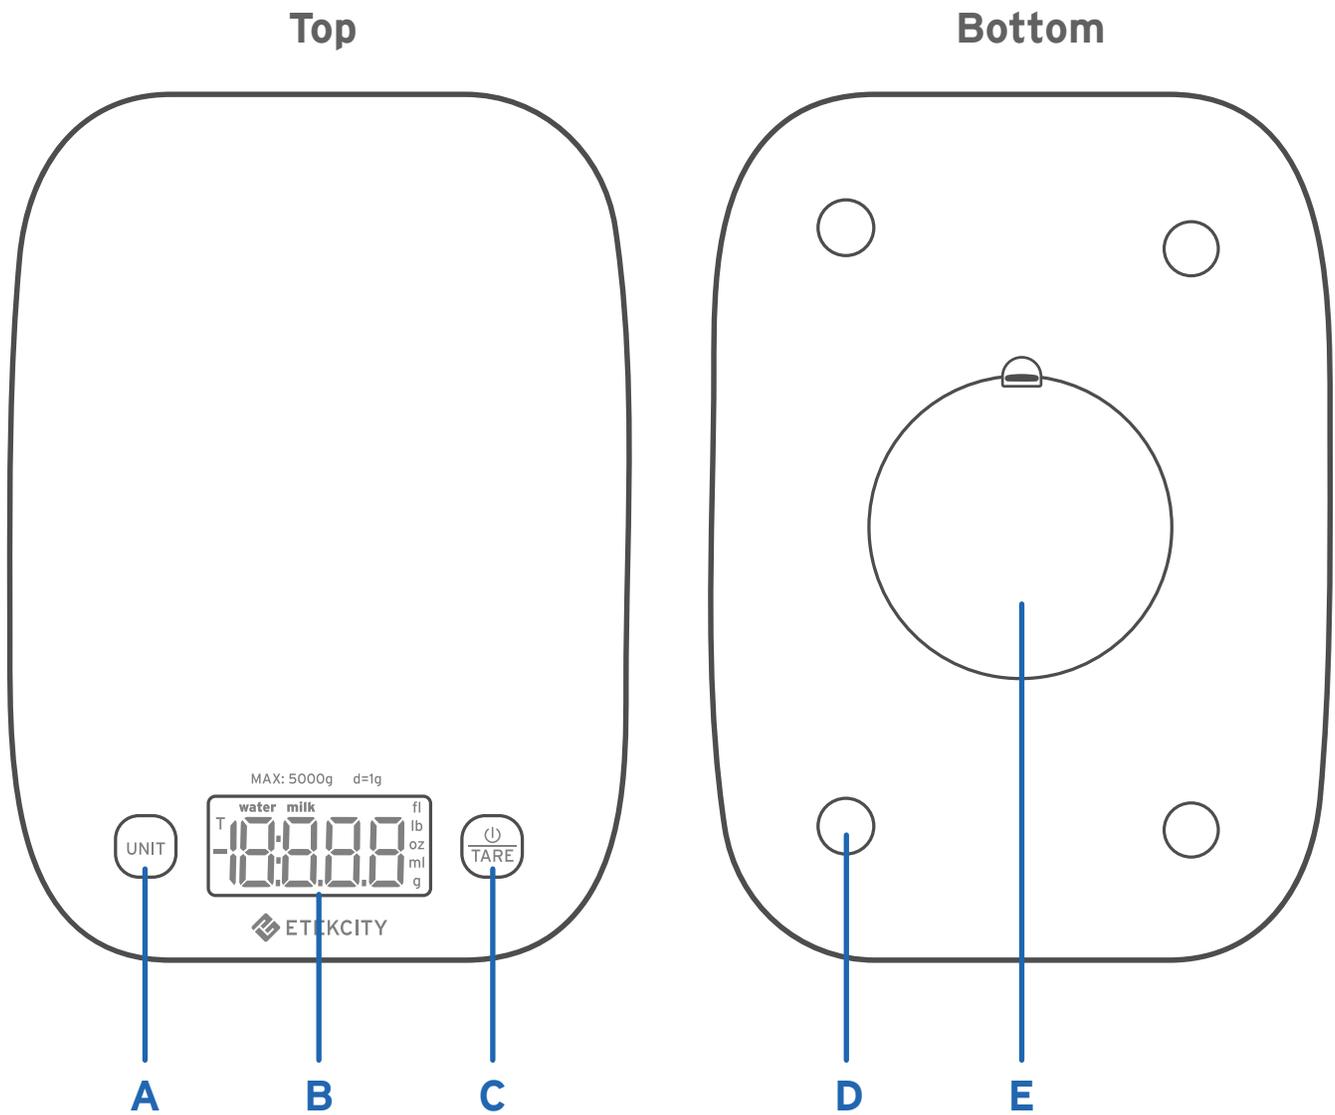

Before First Use

The batteries are pre-installed in the scale.

1. Turn the scale over and open the battery compartment.
2. Remove the plastic strip from the battery compartment.
[**Figure 1.1**]
3. Replace the battery compartment cover.
4. Turn the scale over again and place on a hard, dry, flat surface.
5. Tap  **TARE** to turn on the scale.

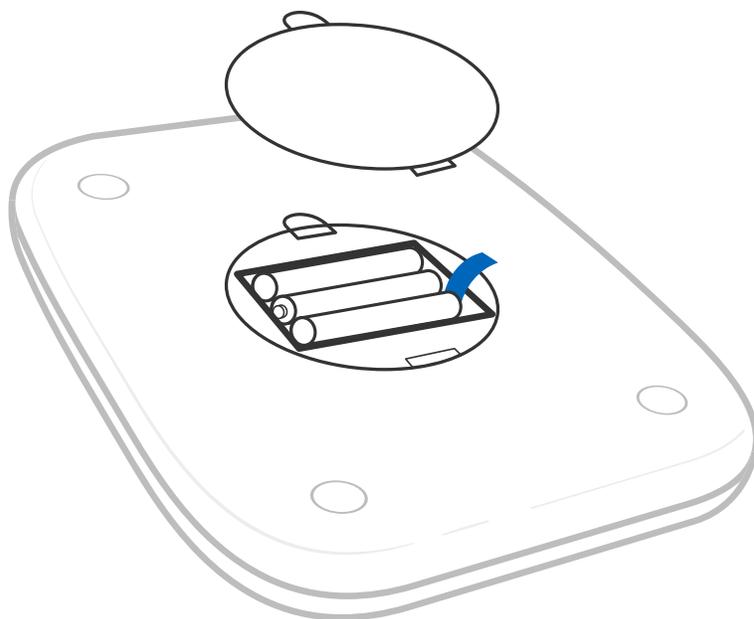


Figure 1.1



Using Your Scale

Note:

- For accurate results, always place the scale on a hard, dry, flat surface, and keep the scale away from dirt, dust, vibrations, wind, air currents, and electromagnetic interference.
- When you turn on the scale, choose units, or use the tare function, wait for the scale to read “000” again before measuring.

General Operation

1. Place the scale on a hard, flat, level surface for measurement.
2. Tap  to turn on the scale. Make sure the scale shows “000”. Tap **UNIT** to select your desired measuring unit, which will show on the right of the display.
3. Place your item on the scale.
4. Wait for the reading on the display to stabilize.

Unit Conversion

To change the unit of measurement, tap **UNIT** until the display shows the desired unit of measurement.

Automatic Power Off

To save battery power, the scale will automatically power off after 180 seconds of inactivity.



Manual Power Off

Press and hold  for 2 seconds to turn off the scale.

Zero / Tare Function

Whenever you measure items inside a container, you can use the tare function to remove the container's weight from the final measurement.

1. Tap  to turn on the scale. Make sure the scale shows "000". If the screen does not display "000" automatically, tap  to auto-adjust to zero.
2. Place the container on the center of the scale.
3. Wait for the reading on display to stabilize. The screen will display the container's weight.
4. Tap  to tare the weight of the container. The screen should now display "000".
5. Place the item in the container. The scale will measure the liquid or items, without including the weight of the bowl. [Figure 2.1]
6. When you're done, reset the scale by removing all weight and tapping  again.

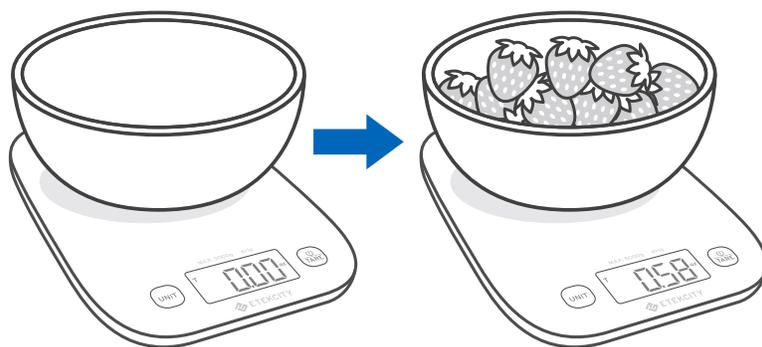


Figure 2.1



Replacing the Batteries

1. Turn the scale over and open the battery compartment.
2. Take out the used batteries and replace them with 3 new 1.5V AAA batteries.
3. Replace the battery compartment cover.



Troubleshooting

Problem	Possible Cause
Scale does not turn on.	Open the battery compartment cover and remove the plastic strip.
	Replace the batteries (see page 10).
	Make sure batteries are inserted under the correct polarity as marked on battery compartment.
Reading is inaccurate.	Place scale on a level surface.
	Make sure the screen displays "000" before measuring (see Zero / Tare Function , page 9).
	Remove the batteries for 45 seconds, then replace them to reset the scale.
Display shows "Err"	Item is too heavy. Remove item from scale to protect its weight sensors. Use a different scale with a higher weight range.
Display shows "unSt"	Turn the scale off and on again. Avoid moving the scale while measuring.
Display shows "Lo"	Battery power is low. Replace the batteries (see page 10).

If your problem is not listed, please contact **Customer Support** (see page 14).



Warranty Information

Product	<i>Digital Kitchen Scale</i>
Model	<i>EK7090</i>
Default Warranty Period	<i>2 years</i>
For your own reference, we strongly recommend that you record your order ID and date of purchase.	

Terms & Policy

Etekcitey Corporation (“Etekcitey”) warrants this product to the original purchaser to be free from defects in material and workmanship, under normal use and conditions, for a period of 2 years from the date of original purchase.

Etekcitey agrees, at our option during the warranty period, to repair any defect in material or workmanship or furnish an equal product in exchange without charge, subject to verification of the defect or malfunction and proof of the date of purchase.

There is no other express warranty. This warranty does not apply:

- If the product has been modified from its original condition;
- If the product has not been used in accordance with directions and instructions in the user manual;
- To damages or defects caused by accident, abuse, misuse or improper or inadequate maintenance;
- To damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Etekcitey;
- To damages or defects occurring during commercial use, rental use, or any use for which the product is not intended;
- To damages or defects exceeding the cost of the product.

Etekcitey will not be liable for indirect, incidental, or consequential damages in connection with the use of the product covered by this warranty.

This warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product regardless of whether the product is transferred during the specified term of the warranty.

This warranty does not extend to products purchased from unauthorized sellers. Etekcitey's warranty extends only to products purchased from authorized sellers that are subject to Etekcitey's quality controls and have agreed to follow its quality controls.

All implied warranties are limited to the period of this limited warranty.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

If you discover that your product is defective within the specified warranty period, please contact Customer Support via **support@etekcity.com**. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Every Etekcitey product automatically includes a 2-year warranty. To make the customer support process quick and easy, register your product online at www.etekcity.com/warranty.

This warranty is made by:

Etekcitey Corporation
1202 N. Miller St., Suite A
Anaheim, CA 92806



Customer Support

If you encounter any issues or have any questions about your new product, please contact our helpful Customer Support Team. Your satisfaction is our goal!

CUSTOMER SUPPORT

Etekcitey Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

SUPPORT HOURS

Mon-Fri, 9:00 am-5:00 pm PST/PDT

**Please have your order invoice and order ID ready before contacting Customer Support.*



Connect with us @Etekcity



