

User Manual of Product 1:

Instant Milk Frother, 4-in-1 Electric Milk Steamer, 10oz/295ml Automatic Hot and Cold Foam Maker and Milk Warmer for Latte, Cappuccinos, Macchiato, From the Makers of Instant Pot 500W, Black

User Manual of Product 2:

Instant Pod, 3-in-1 Espresso, K-Cup Pod and Ground Coffee Maker, From the Makers of Instant Pot with Reusable Coffee Pod for Ground Coffee, 2 to 12oz. Brew Sizes, 68oz Reservoir

InstantTM MILK FROTHERTM



User Manual

- 01** Get Started
- 02** Make Some Foam
- 03** Warranty and Contact Info



For more information and how-to videos,
visit instantappliance.com/milkfrother

IMPORTANT SAFEGUARDS



(Yes, we have to)

At Instant Brands, your safety always comes first. Enjoy using your Instant™ Milk Frother, knowing it was designed to be quick, easy, and completely safe to use.

As always, be cautious when using electrical appliances and follow basic safety precautions.

READ ALL INSTRUCTIONS, SAFEGUARDS AND WARNINGS BEFORE USE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

- 01** For countertop use only. Always operate the appliance on a stable, non-combustible, level surface.
- 02** For household use only. Not for commercial use. DO NOT use the appliance for anything other than its intended use.
- 03** Make sure that your outlet voltage corresponds to the voltage stated on the rating label, located on the sticker under the base.
- 04** DO NOT operate the appliance while the pitcher is empty.
- 05** Avoid spillage on the connector.
- 06** To protect against fire, electric shock and injury to persons, DO NOT immerse the power cord, plug, pitcher or the appliance base in water or other liquid.
- 07** Unplug from outlet when not in use and before cleaning. After using a program that heats, there will be residual heat within the pitcher. Allow the appliance to cool before putting on or taking off parts, and before cleaning.

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

- 08 Regularly inspect the appliance and power cord. DO NOT operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care at support@instantappliances.com, [instantappliances.com/#chat](https://www.instantappliances.com/#chat), or by phone at 1-800-828-7280.
- 09 DO NOT let the power cord hang over the edge of tables or counters, and DO NOT allow it to touch hot surfaces.
- 10 DO NOT place the appliance on or near a hot gas or electric burner, or in a heated oven.
- 11 Fill the pitcher with only milk or non-dairy milk alternatives. Never fill the pitcher with oil or other liquids. DO NOT fill past the appropriate **MAX** fill lines for your desired setting, as hot liquid may be ejected.
- 12 Always operate the appliance with the lid in place. DO NOT remove the lid while frothing to avoid scalding injury.
- 13 Avoid contacting moving parts. Keep hands and utensils out of the pitcher while frothing to reduce the risk of personal injury and/or property damage.
- 14 Some parts of the appliance are hot when the appliance is in operation. Only use the handle to move or carry the pitcher.
- 15 Extreme caution must be used when moving the appliance when it contains hot liquids.

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

- 16 To disconnect, press the **Start/Cancel** button and ensure the unit is off, then unplug the base from the power source. To unplug safely, grasp the plug and remove from the outlet. Never pull from the power cord.
- 17 DO NOT use the appliance outdoors. Never leave the appliance exposed to sun, wind, rain and/or snow.
- 18 DO NOT leave the appliance unattended when in use.
- 19 This appliance is NOT to be used by children or by persons with reduced physical, sensory or mental capabilities. Close supervision is necessary when any appliance is used near children and these individuals. Children should not play with this appliance.
- 20 The use of accessories not recommended by the manufacturer may result in fire, electric shock or injury to persons.
- 21 The appliance is only to be used with the base provided.
- 22 Extension cords are available and may be used if care is exercised in their use:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS.

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

WARNING

To avoid injury, read and understand the instructions in this user manual before attempting to use this appliance.

WARNING

Electrical shock hazard.

- DO NOT use an adapter.
- DO NOT remove the bottom cover. No user-serviceable parts inside. Repair should be done by authorized service personnel only.

Failure to follow these instructions may result in electric shock and/or death.

WARNING

THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND/OR THE INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.

Special cord set instructions

As per safety requirement, a short power supply cord (0.6 m to 0.9 m / 24" to 35") is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

This appliance has a polarized plug and one blade is wider than the other. To reduce the risk of electric shock, the plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

DO NOT attempt to modify the plug in any way.

WARNING

Read this manual carefully and completely and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

Table of contents

Product specifications.....6

Let’s get started!.....7

 So, what’s in the box?.....7

Product, parts and accessories8

Initial setup.....9

Initial cleaning.....9

Making drinks 10

 Set up the frother for use.11

 Settings12

 Frothing tips.....13


Care, cleaning and storage 14

Troubleshooting 15

Warranty 16

Contact us..... 18

 Product specifications

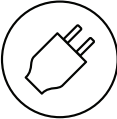
					
Model: Instant Milk Frother	10 oz. 296 mL	120 V~60 Hz	500 W	lbs: 1.7 kg: 0.77	in: 6.2 L x 4.7 W x 8.8 H cm: 15.8 L x 12 W x 22.3 H

Let's get started!

So, what's in the box?

Before using your new milk frother, make sure everything is present and accounted for.

 - Instant Milk Frother
- Frothing paddle
- Lid
- Base with cord
- User manual

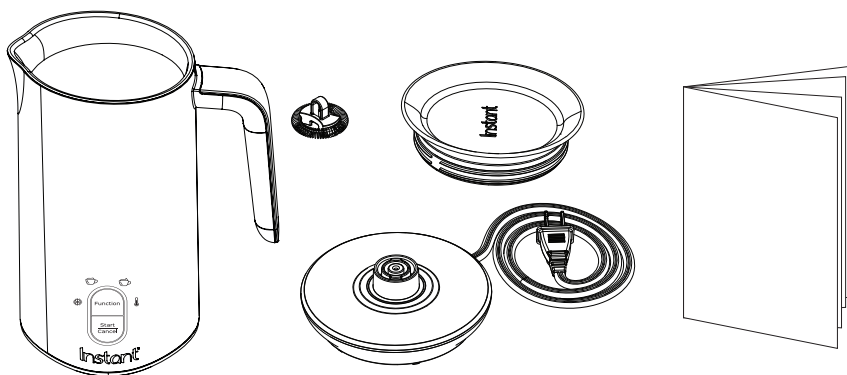

See **Product, parts and accessories** for a full parts breakdown.

For more information and how-to videos, visit instantappliances.com/milkfrother.

 
Is something missing or damaged?

Contact a Customer Care Advisor by chat at instantappliances.com/#chat, by e-mail at support@instantappliances.com, or by phone at 1-800-828-7280.

Product, parts and accessories

Instant Milk Frother

Make sure everything is installed properly before use.

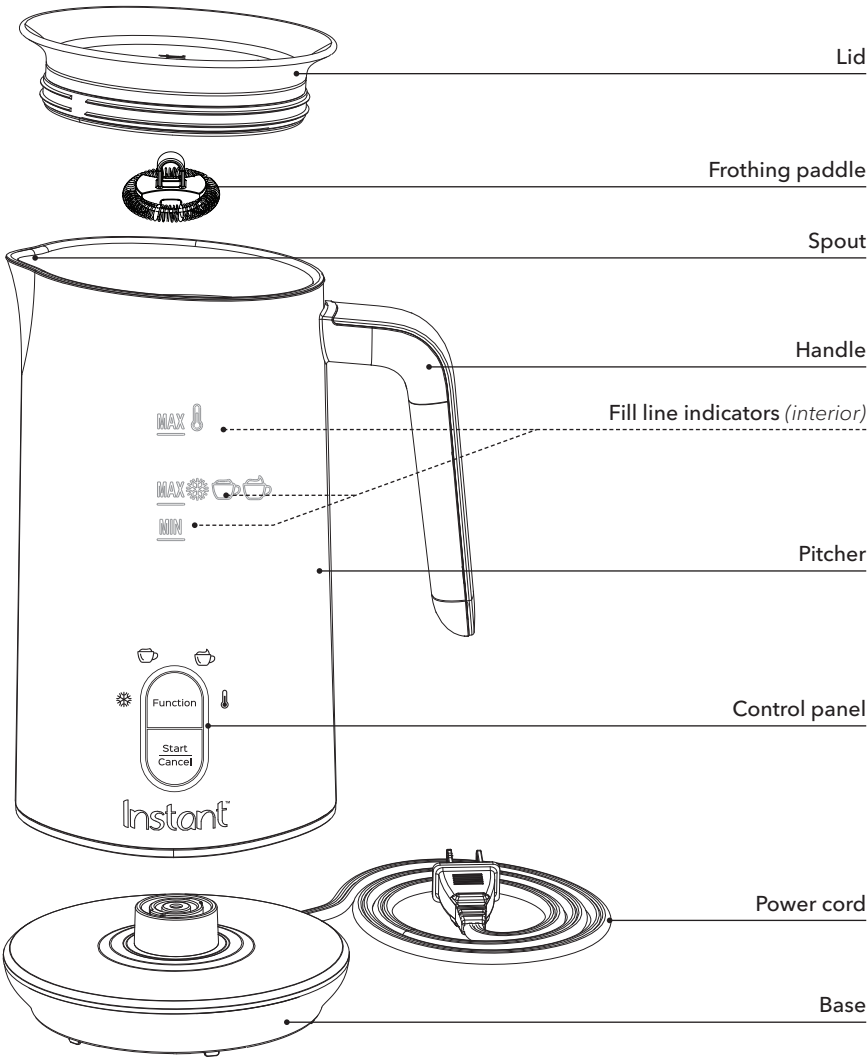

Illustrations in this document are for reference only and may differ from the actual product. Always refer to the actual product.

Initial setup

Is your drink missing a little somethin' somethin'? Get this little guy going and start showing off your foam flair.

- 01** Pull your new milk frother out of the box!
- 02** Remove all the packaging material and accessories from in and around the appliance. Make sure to check inside the pitcher!
- 03** Place the milk frother base on a stable, level surface.
- 04** Follow the instructions in **Initial cleaning** before frothing for the first time.

 
Initial cleaning

Before using your milk frother, it's important to clean the components.

- 01** Disassemble the milk frother into 3 parts:
 - The lid
 - The frothing paddle (pull up gently to remove)
 - The pitcher
- 02** Hand wash the lid, the frothing paddle, and the inside of the pitcher with hot water and dish soap. Do not immerse the pitcher in water or other liquid.
- 03** Rinse the lid, the frothing paddle, and the inside of the pitcher with clear, warm water, then dry them thoroughly with a soft cloth.


That's it! Start whipping up that fresh, fluffy foam.

WARNING

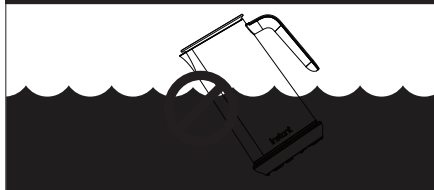

The pitcher and base contain electrical components. To avoid fire, electric shock or personal injury, **DO NOT** machine wash, rinse or immerse the milk frother base, pitcher, power cord or plug in water or other liquids.

 Making drinks

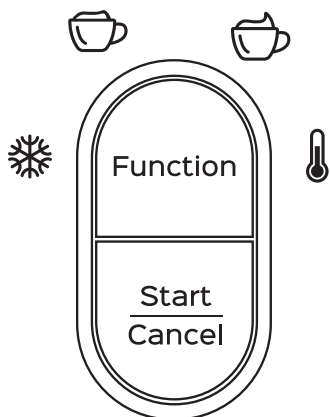

The Instant Milk Frother was designed with 2 easy-to-use button controls.

Function

Toggles through the preset programs to create various types of foam to suit your tastes.

Start/Cancel

Starts and stops the selected program.



The **cold foam** setting creates a luscious, silky microfoam filled with millions of tiny bubbles. Use milk and coconut milk for the perfect cold brew topper.



The Milk Frother does not chill when frothing. Use chilled liquid.



The **warm foam** setting heats and froths, and with a gentle swirl of the pitcher at the end, creates a loose style of warm microfoam – like a cloud floating on your café au lait and lattes.



The **warm, thick foam** setting heats and froths your liquid to create a rich, dense style of warm microfoam. The crowning touch for your cappuccino.



 
The **warm, no foam** setting heats your drink without generating any foam. This setting automatically slow-stirs your drink to keep it from scorching, for amazing steamed milk, hot chocolate and more!

Making drinks

Set up the Milk Frother for use

- 01** Remove the lid from the pitcher.
- 02** Position the square end of the frothing paddle over the shaft at the bottom of the pitcher.

Rotate the frothing paddle until it aligns with the shaft, then push the frothing paddle down until it is secure.

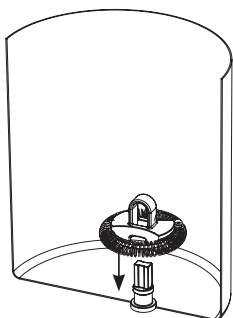

- 03** For cold foam, warm foam, or warm, thick foam, fill the pitcher to between the **MIN** and **MAX** ☼☕☕ lines.

To warm without creating foam, fill the pitcher to between the **MIN** and **MAX** 🌡 lines.

 Overfilling may cause the milk frother to overflow when using a foaming setting. Do not overfill the pitcher.

- 04** Place the lid on the pitcher and press down until it is secure.
- 05** Place the pitcher on the base.
- 06** Connect the power cord to a 120 V outlet.

NOTICE

Do not attempt to froth if the liquid level is below the **MIN** fill line as indicated on the inside of the pitcher.

⚠ WARNING

DO NOT remove the lid while the frothing paddle is in operation to avoid risk of electric shock, personal injury and/or property damage.

Making drinks

Settings

 
01 Press **Function** to toggle between all settings.

 Cold foam

 Warm foam

 Warm, thick foam

 Warm, no foam

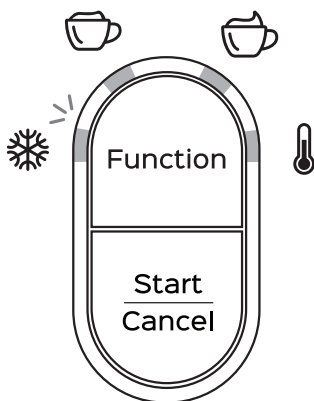

The light that corresponds to the selected program blinks.

02 Press **Start/Cancel**.

The light stays illuminated and the program starts after a few seconds.

03 To stop the program at any time, press **Start/Cancel**.

When the program ends, the milk frother stops.



Programs will only run for a maximum of 3 minutes.

Frothing tips

Follow these tips and tricks to make sure you're treating yourself to the best drink possible.

Tip	How to do it and why
The colder the liquid the better.	Always use the coldest, freshest milk or milk alternative possible before frothing. When frothing, millions of tiny air bubbles are introduced into the liquid. The longer it takes to heat up, the more air can be infused into the liquid. This immediately enhances the quality of your foam, and reduces your chances of scalding. No more bad froth days! Note: Warm milk will not foam up properly.
Not all milk alternatives produce foam.	Oat and soy milk will create foam using either the warm or cold foaming settings. Coconut milk will only froth using the cold foam setting.
Infuse your foam with flavor.	Before frothing, add aromatic spices to the pitcher, like cinnamon, cardamom or nutmeg, or other fragrant items like lavender. The longer you allow your ingredients to steep, the stronger the flavors will be. It's a tasty mix and match! Join the official Instant Pot® Facebook Community to let us know your favorite bevv's unique flavor profile.
Give your milk frother a break!	When frothing big batches, allow the milk frother to rest for about 3 minutes after every 2 frothing cycles.
Making latte worthy foam.	As soon as the frother finishes whipping up your warm foam, lift the pitcher off the base, put your thumb on the lid and give it a good swirl! This helps give your latte foam the glossiness it deserves.

Care, cleaning and storage

Clean your Instant Milk Frother after every use to ensure the best possible flavor and to prevent milk from baking onto the inside of the pitcher.


Always unplug the milk frother and let it cool to room temperature before cleaning. Never use metal scouring pads, abrasive powders or harsh chemical detergents on any of the milk frother's parts or components.

Let all parts dry thoroughly before use or before storage.

Parts	Cleaning methods and instruction
Lid	Remove from the pitcher before cleaning. Dishwasher safe.
Pitcher	Remove the pitcher from the base before cleaning. With a cloth, hand wash the inside of the pitcher with hot water and dish soap and rinse it with clean, warm water. With a barely-damp cloth, hand wash the outside of the pitcher and wipe dry to prevent streaking. DO NOT rinse the pitcher's exterior. DO NOT store liquid in the pitcher.
Frothing paddle	Remove from the pitcher before cleaning. Dishwasher safe.
Base	With a barely damp cloth, wipe visible particles from the base as needed. Allow to dry thoroughly before placing the pitcher.
Power cord	With a barely damp cloth, wipe visible particles from the power cord as needed. DO NOT fold the power cord when storing.



 WARNING

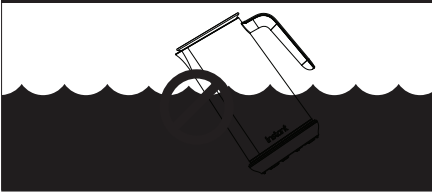

The pitcher and base contain electrical components. To avoid fire, electric shock or personal injury, **DO NOT** machine wash, rinse or immerse the milk frother base, pitcher, power cord or plug in water or other liquids.

Troubleshooting

Register your Instant Milk Frother today at instantappliances.com/support/register.

Contact a Customer Care Advisor by chat at instantappliances.com/#chat, by e-mail at support@instantappliances.com, or by phone at 1-800-828-7280.

For more troubleshooting tips go to instantappliances.com/milkfrother.

Resolution table

Problem	Possible reason	Try this
Milk is not frothing.	The frothing paddle is not installed correctly.	Remove the liquid from the pitcher. Position the square end of the frother paddle over the shaft at the bottom of the pitcher and push down until it is secure.
	Milk is too hot.	Put your milk in the fridge or freezer to bring the temperature down.
	The inside of the pitcher or the frothing paddle contains milk residue.	Clean the pitcher and frothing paddle according to Care, cleaning and storage instructions.
	Different types and brands of milk and non-dairy milk alternatives may froth differently.	Experiment to find your favorite foam.
The Warm Foam and the Warm Thick Foam lights blink repeatedly.	The milk frother has overheated.	Unplug and wait up to 10 mins for the milk frother to cool before further use.
All four LEDs blink repeatedly.	The unit is defective or damaged.	The unit needs to be serviced by an authorized service representative. Contact Customer Care.

Any other servicing should be performed by an authorized service representative.

Warranty

Limited Warranty

This Limited Warranty is effective for one year from the date of original consumer purchase. Proof of original purchase date and, if requested by an authorized representative of Instant Brands Inc. ("Instant Brands"), return of your appliance, is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with written instructions attached to or furnished with the appliance, Instant Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

This Limited Warranty extends only to the original purchaser and use of the appliance in the United States of America and Canada. This warranty does not cover units that are used outside of the United States of America and Canada.

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified unless such alterations or modifications were expressly authorized by an Instant Brands representative.

Limitation and Exclusions

The liability of Instant Brands, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

This Limited Warranty does not cover:

1. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone unless directed by an Instant Brands Representative;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to published user or operator instructions; or
3. Use of unauthorized parts and accessories, or repairs to parts and systems resulting from unauthorized repairs or modifications made to this appliance.

The cost of repair or replacement under these excluded circumstances shall be paid by you.

Warranty

Disclaimer of Implied Warranties

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY LAW, INSTANT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for the exclusion of implied warranties of merchantability or fitness, so this limitation may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law.

Limitation of Remedies; Exclusion of Incidental and Consequential Damage

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE APPLIANCE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. INSTANT BRANDS SHALL NOT BE LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE OR KIND.

Warranty Registration

Please visit www.instantappliances.com/support/register to register your new Instant Brands™ appliance and validate your warranty within thirty (30) days of purchase. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments, recipes and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain service under this warranty, please contact our Customer Service Department by phone at 1-800-828-7280 or by email to support@instantappliances.com. You can also create a support ticket online at www.instantappliances.com/support. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance from Canada or within the 48 contiguous states and the District of Columbia of the United States of America, as provided herein. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Instant™

Instant Brands Inc.

11–300 Earl Grey Dr., Suite 383
Ottawa, Ontario
K2T 1C1
Canada

Register your product today

instantappliances.com/support/register

Contact us

1-800-828-7280

support@instantappliances.com

instantappliances.com/#Chat



instantappliances.com

store.instantpot.com



Copyright © 2020 Instant Brands™ Inc

697-0102-01

get started

MULTI-FUNCTION
COFFEE MAKER

Instant®

Welcome

Welcome to your new Multi-function coffee maker!

Brew cafe-quality coffee at home using your favorite Keurig K-Cup®* pod, espresso capsule, or pre-ground coffee loaded into the included reusable coffee pod.

⚠ WARNING

Before using your Instant Multi-function coffee maker, read all instructions, including the Safety Information on pages 4-6 and Warranty on pages 18-19. Failure to follow the safeguards and instructions may result in injury and/or property damage.

** K-Cup is a registered trademark of Keurig Green Mountain, Inc. Use of the K-Cup trademark does not imply any affiliation with or endorsement by Keurig Green Mountain, Inc.*

Table of Contents

Welcome	2
Safety Warnings	4
What's in the box	7
Your Multi-function coffee maker	8
Before you brew	11
Brewing Coffee	13
Care, Cleaning, Storage	15
Learn more	17
Warranty	18

IMPORTANT SAFEGUARDS

SAFETY WARNINGS

⚠ WARNING

Read all instructions before using and only use this appliance as directed. Failure to follow these Important Safeguards may result in injury and/or property damage and will void your warranty.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

Placement

- **DO** operate the appliance on a stable, non-combustible, level surface.
- **DO NOT** place the appliance on or near a hot gas or electric burner, or in a heated oven.

General Use

- **DO NOT** use this coffee maker outdoors.
- **DO NOT** fill the water tank with mineral water, milk or other liquids. Only fill the water tank with clean, cold water.
- **DO NOT** let the coffee maker operate without water.
- **DO NOT** use the appliance for anything than its intended use. Not for commercial use. For household use only.
- **DO** regularly inspect the appliance and power cord.
- **DO** only fill the water tank with clean, cold water.
- **DO NOT** fill the water tank with mineral water, milk or other liquids.
- **DO NOT** leave the appliance exposed to sun, wind, and/or snow.
- **DO** operate and store the appliance above 32°F / 0°C
- **DO NOT** leave the appliance unattended when in use.
- **DO NOT** allow children operate the appliance; close supervision is required when any appliance is used near children.
- **DO NOT** let children play with this appliance.
- **DO NOT** force the pod into the appliance. Only use pods intended for this appliance.
- To avoid the risk of extremely hot water, **DO NOT** open the top cover during the brew process. There is extremely hot water in the brewing chamber during the brew process.
- **DO NOT** touch hot surfaces. Use handles or knobs.
- The use of an accessory not evaluated for use with this appliance may cause injuries.
- See instructions regarding closing the Brew Chamber on Page 14.

SAFETY WARNINGS

Care and Storage

- **DO** unplug from outlet when not in use before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning the appliance.
- **DO NOT** store any materials in the brewing chamber when not in use.

Power Cord

- A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

WARNING

Spilled liquids from this coffee maker can cause serious burns. Keep appliance and cord away from children.

Never drape cord over edge of counter, and never use outlet below counter.

- **DO NOT** let the power cord touch hot surfaces or open flame, including the stovetop.
- **DO NOT** use with power converters or adapters, timer switches or separate remote-control systems.
- **DO NOT** let the power cord hang over the edge of tables or counters.
- **DO** unplug your coffee maker by grasping the plug and pull from the outlet. Never pull from the power cord.
- **DO NOT** attempt to modify the plug. If the plug does not fit full into the outlet, reverse the plug.
- **DO** contact a qualified electrician if the plug does not fit in the outlet.
- **DO** plug this appliance into a polarized outlet one way. This appliance has a polarized plug, and one blade is wider than the other.

This appliance has a polarized plug, and one blade is wider than the other. To reduce the risk of electrical shock:

- **ONLY** plug the appliance into a polarized outlet. If the plug does not fit into the outlet properly, reverse the plug
- If the plug does not fit, contact a qualified electrician.
- **DO NOT** attempt to modify the plug in anyway.

SAFETY WARNINGS

⚠ WARNING

Electrical Warning

The coffee maker contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock.

 
To protect against electrical shock:

- To reduce the risk of fire or electric shock, do not remove the bottom cover. No user-serviceable parts inside. Repair should be done by authorized service personnel only.
- To disconnect, turn any control to the off position, remove plug from power source. Always unplug when not in use, as well as before adding or removing parts or accessories, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- **DO** regularly inspect the appliance and power cord. **DO NOT** operate the appliance if the power cord or plug is damaged, or after the appliance malfunctions or is dropped or damaged in any manner. For assistance, contact Customer Care by email at support@instanthome.com or by phone at 1-800-828-7280.
- **DO NOT** attempt to repair, replace or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.
- **DO NOT** tamper with any of the safety mechanisms, as this may result in injury or property damage.
- **DO NOT** immerse power cord, plug or the appliance in water or other liquid.
- **DO** plug this appliance into a polarized outlet one way. This appliance has a polarized plug, and one blade is wider than the other.
- **DO NOT** use the appliance in electrical systems other than 120 V ~ 60 Hz for North America.
- If a long detachable power-supply cord or extension cord is used:
 - The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

SAVE THESE INSTRUCTIONS

What's in the box

Instant Multi-function coffee maker

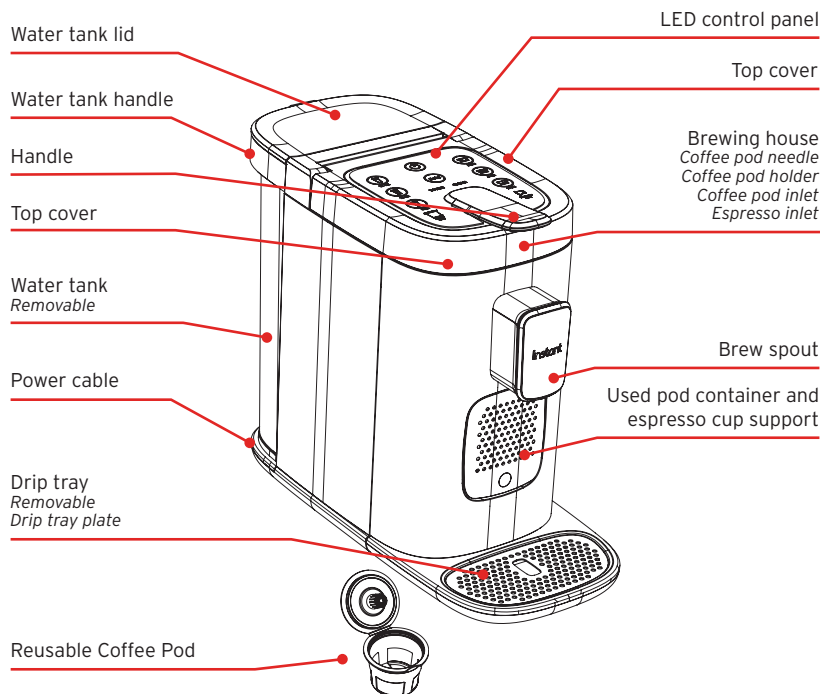

Illustrations are for reference only and may differ from the actual product.

 
Your Multi-function coffee maker

Remember to recycle!

We designed this packaging with sustainability in mind. Please recycle everything that can be recycled where you live. Be sure to keep this User Manual for reference.

Control panel

Here's a look at the simple-to-use, easy-to-read Instant Multi-function coffee maker control panel.

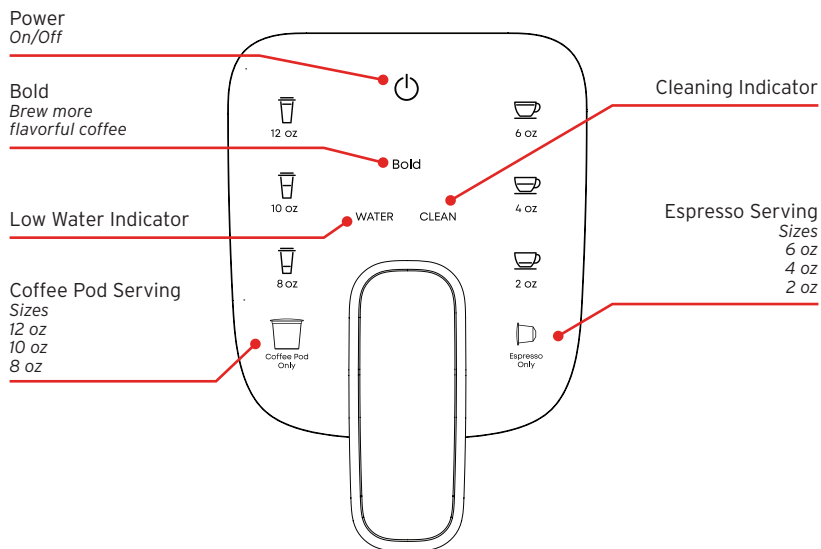

Your Multi-function coffee maker

Plugging in your Multi-function coffee maker

Before you plug in your Multi-function coffee maker, make sure your Multi-function coffee maker is on a dry, stable, and level surface. Once the Multi-function coffee maker is plugged in, press the power button, located above the **Bold** button. Your device is now in Function Selection mode. From here, you can begin brewing. See page 13 for brewing instructions.

To turn off the Multi-function coffee maker, press the **Power Button**.

After 30 minutes of inactivity, your coffee maker will enter standby mode. The LED control panel will dim. After another 2 hours of inactivity, the LED panel will shut off.

Sound Settings

You can turn button-pressing sounds and reminder beeps on or off.

1. Make sure your Instant Multi-function coffee maker is on.
2. Press and hold the **4 oz** and **6 oz** espresso buttons at the same time for 3 seconds.
3. Wait for the **4 oz** and **6 oz** buttons to blink twice. *To turn button-pressing sounds on, repeat the above instructions – the **4 oz** and **6 oz** buttons will blink three times.*

Note: The device failure sound cannot be deactivated

Altitude Mode

If you're using the Instant Multi-function coffee maker at +5,000 feet sea level, enable **Altitude Mode** before you brew.

To turn **Altitude Mode** on

1. Make sure your Instant Multi-function coffee maker is on.
2. Press and hold the **8 oz** and **10 oz** buttons at the same time for 3 seconds.
3. Wait until the **8 oz** and **10 oz** buttons blink three times.

Your Multi-function coffee maker

To turn **Altitude Mode** off

1. Make sure your Instant Multi-function coffee maker is on.
2. Press and hold the **8 oz** and **10 oz** buttons at the same time for 3 seconds.
3. Wait until the **8 oz** and **10 oz** buttons blink twice.

Low water alert

While or after brewing, your coffee maker will notify you the water tank is nearly empty. If this happens during a brewing cycle, the Water LED on the control panel will start flashing and the brewing program will continue.

While in this low water state, both the Water LED and Power button will remain lit. You cannot run another brewing program until you add water to the tank.

Adding water

1. Either remove the water tank from the coffee maker or leave the tank on the unit.
2. Fill the water tank with clean, cold water.
3. Place the water tank back onto the coffee maker or close the water tank lid.
4. Begin brewing your next cup of coffee.

You must add water before brewing your next cup of coffee.

DO NOT operate this coffeemaker without water in the water tank.

Before you brew

Initial set up

1. Pull the Instant Multi-function coffee maker and all accessories out of the box.
2. Remove all packaging materials from within and around the Instant Multi-function coffee maker.
3. Place your Multi-function coffee maker on a dry, stable, and level surface.
4. Place water tank back on the coffee maker base.
5. Plug in your Instant Multi-function coffee maker.

Clean before use

1. Handwash the water tank and reusable coffee pod with warm water and dish soap. Rinse with warm, clear water.
2. Lift the water tank up and remove the foam cushion from underneath the water tank. Stickers on the water tank may be removed.
3. Place the water tank back on the base and press down to secure it.
4. Wipe the water tank and accessories with a clean, dry cloth.
5. With a damp cloth, wipe down the coffee maker base and control panel.

Before you brew

Initial Cleaning

Before you brew your first cup of coffee, clean your Instant Multi-function coffee maker. Run the following cleaning program without a coffee pod or the reusable coffee pod.

1. Lift the water tank from the back of the coffee maker and remove the water tank lid.
2. Fill the water tank with cold water to the **MAX** fill line as indicated on the water tank.
3. Put the lid back onto the water tanks and place the water tank back onto the coffee maker.
4. Place a large mug which can hold at least 10 oz of liquid beneath the brew spout and onto the drip tray.
5. Close the brewing lid and ensure it's securely latched. Press **8 oz** button. The key flashes as the water heats.
6. The **8 oz** button will illuminate and the coffee maker begins a brewing cycle, and hot water will pour from the brew spout. After the brewing cycle ends or is cancelled and the water stops dripping from the spout, discard the water in the mug. *To **stop brewing at any time**, touch **8 oz** again.*
7. Place the mug back on the drip tray.
8. Touch **10 oz**. The button flashes as the water heats.
9. The **10 oz** button will illuminate and the coffee maker begins a brewing cycle, and hot water will pour from the brew spout. After the brewing cycle ends or is cancelled and the water stops dripping from the spout, discard the water in the mug. *To **stop brewing at any time**, touch **10 oz** again.*

WARNING

Be careful: Brewing reaches high temperatures. **DO NOT** touch the brewing housing unit or spout during the brewing process. Touching hot surfaces may result in personal injury and/or property damage.

Brewing Coffee

Brewing Coffee

Once you've cleaned your Instant Multi-function coffee maker and accessories, and you've run the initial cleaning program, you can begin brewing a delicious cup of coffee.

Bold

This program lets you brew a more flavorful cup of coffee by increasing brewing time, allowing the water to extract more flavor from a coffee pod or espresso pod.

Altitude Mode

If you live at higher altitudes (over 5,000 feet above sea level) be sure you follow these instructions, so your coffee maker works properly. See page 9 for instructions.

Coffee pods and espresso capsules

With the Instant® Multi-function coffee maker, you can brew coffee with a K-Cup® pod, espresso capsules or brew your favorite coffee grounds using the included reusable coffee pod.

Brewing Coffee

How to brew coffee

Prep

1. Fill the water tank up to the **MAX** fill line. ***DO NOT** attempt to brew if the water level is below the **MIN** fill line.*
2. Choose your favorite K-Cup* pod, espresso capsule, or fill the reusable coffee pod with two tablespoons of medium or medium-fine ground coffee.

Brew

1. Lift the latch to the brewing house.
2. Place your desired brewing pod into its appropriate inlet.
Close the brewing lid and ensure it is securely latched.
3. For a stronger cup of coffee, press **Bold** before selecting serving size.
4. Select the desired amount of coffee you would like to brew by pressing the **8 oz**, **10 oz** or **12 oz** buttons for coffee pods, or **4 oz**, **6 oz**, **8 oz** for espresso capsules. The selected button will flash while water heating cycle begins. *You can stop brewing at any time by pressing the selected cup size again.*
5. The selected brewing button will flash and remain illuminated when the coffee maker starts brewing. Soon, hot coffee will pour from the brew spout.
6. When the coffee stops dripping from the spout, remove your cup of coffee.

⚠ WARNING

Be careful: Brewing reaches high temperatures. **DO NOT** touch the brewing housing unit or spout during the brewing process. Touching hot surfaces may result in personal injury and/or property damage.

Care, Cleaning, Storage

Regularly clean your Instant Multi-function coffee maker and included accessories to ensure the best possible flavor and to prevent mineral deposits from building up in the coffee maker.

Always unplug the coffee maker and let it cool to room temperature before cleaning. Never use metal scouring pads, abrasive powders, or harsh chemical detergents on any of the coffee maker's parts.

Let all parts dry thoroughly before use, and before storage.

Instant Multi-function coffee maker Part/Accessory	Cleaning methods and instructions
Water tank	Remove the tank and handwash with dish soap and warm water.
Coffee pod holder	Remove and handwash with dish soap and warm water or place in the top rack of a dishwasher.
Stainless steel drip tray	Can be removed and washed by hand with dish soap and warm water or placed in the top rack of a dishwasher.
Coffee maker / LED panel	Use a damp dish cloth to clean the outside of the coffee maker and LED panel
Power cord	DO NOT fold power cord when storing.
Used pod container	Open the used pod container by folding down the cup support and pulling back on the cup support. Recycle the used pods. Holds up to 10 used pods at a time. Empty weekly, or more as needed. DO NOT allow pods to sit for longer than 7 days. Hand wash container with warm soapy water. Let air dry before placing back into the coffee maker.

⚠ WARNING

Be careful: The coffee maker contains electrical components.

To avoid fire, electric shock, or personal injury:

- Hand wash only.
- **DO NOT** rinse or immerse the coffee maker, power cord, or plug in water or other liquids.

Care, Cleaning, Storage

Descaling / Removing Mineral Deposits

With regular use, mineral deposits may accumulate in the coffee maker, which can affect the temperature and strength of your brew.

To make sure your coffee maker stays in tip top shape, descale it regularly to keep minerals deposits from building up.

After 300 cycles, the 10 oz and 12 oz keys flash to remind you to clean and descale your coffee maker.

Descaling Solution Ratio

Cleaner	Cleaner to water ratio
Household descaler	1 : 4
Citric acid	3 : 100

1. Combine cleaner and water as shown in the table above.
2. Make sure the reusable pod is in the brewing housing unit.
3. Fill the water tank to the **MAX** line with the cleaning mixture.
4. Place a large container beneath the drip nozzle.
5. Touch and hold the **10 oz** and **12 oz** keys for 3 seconds. *The cleaning mixture runs through the appliance until the water tank is empty.*
6. Discard the cleaning mixture from the container and place the emptied container beneath the drip nozzle.
7. Rinse the water tank and fill to the **MAX** line with cool, clean water.
8. Touch and hold the **10 oz** and **12 oz** keys for 3 seconds. *The cleaning mixture runs through the appliance until the water tank is empty.*
9. Discard water produced from coffee maker.

⚠ WARNING

Be careful: Hot water is used for descaling. To avoid risk of personal injury and/or property damage, the container must be large enough to hold the **entire contents of the water tank** (68oz / 2000 mL).

Any other servicing should be performed by an authorized service representative.

Learn more

There's a whole world of Instant Multi-function coffee maker information and help just waiting for you. Here are some of the most helpful resources.

Register your product

Instanthome.com/register

Contact Consumer Care

Instanthome.com

support@instanthome.com

1-800-828-7280

Replacement parts and accessories

Instanthome.com

Connect and Share



Get started online with your new product!



Product specifications

Model	Volume	Wattage	Power	Weight	Dimensions
DPCM-1100	68 oz / 2011 mL water tank	1500 watts	120V/ 60Hz	12.0 lb / 5.4 kg	in: 13.0 H X 7.0 W X 15.4 D cm: 33.0 H X 17.8 W X 39.1 D

Warranty

One (1) Year Limited Warranty

This One (1) Year Limited Warranty applies to purchases made from authorized retailers of Instant Brands Inc. ("Instant Brands") by the original appliance owner and is not transferable. Proof of original purchase date and, if requested by Instant Brands, return of your appliance, is required to obtain service under this Limited Warranty. Provided the appliance was used in accordance with the use & care instructions, Instant Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire twelve (12) months from the date of receipt. Failure to register your product will not reduce your warranty rights. The liability of Instant Brands, if any, for any allegedly defective appliance or part will not exceed the purchase price of a comparable replacement appliance.

What is not covered by this warranty?

1. Products purchased, used, or operated outside of the United States and Canada.
2. Products that have been modified or attempted to be modified.
3. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God, or repair by anyone unless directed by an Instant Brands representative.
4. Use of unauthorized parts and accessories.
5. Incidental and consequential damages.
6. The cost of repair or replacement under these excluded circumstances.

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, INSTANT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Warranty

Some states or provinces do not allow for: (1) the exclusion of implied warranties of merchantability or fitness; (2) limitations on how long an implied warranty lasts; and/or (3) the exclusion or limitation of incidental or consequential damages; so these limitations may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law. The limitations of warranties, liability, and remedies apply to the maximum extent permitted by law. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

Product Registration

Please visit www.instanthome.com/register to register your new Instant Brands™ appliance. Failure to register your product will not diminish your warranty rights. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments, recipes and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain warranty service, please contact our Customer Care Department by phone at 1-800-828-7280 or by email to support@instanthome.com. You can also create a support ticket online at www.instanthome.com. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.

Instant Brands Inc.
495 March Road, Suite 200
Kanata, Ontario, K2K 3G1 Canada

instanthome.com

© 2021 Instant Brands Inc.
140-6013-01-0101