



INSTRUCTION MANUAL

VARIABLE TEMPERATURE ELECTRIC KETTLE



MODEL 300104OSX

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE
OPERATING YOUR PRODUCT AND RETAIN IT FOR FUTURE USE

IMPORTANT SAFEGUARDS

1. Read the instruction manual carefully before using this kettle.
2. Keep the instruction manual, guarantee certificate, sales receipt, and, if possible, the box with inner packaging for future reference.
3. This kettle is intended exclusively for private use and not for commercial use
4. Switch off the kettle and remove the plug from the socket when it is not in use. Grasp and pull the plug, not the cord/cable, to unplug.
5. Switch off the kettle before cleaning.
6. This appliance can be used by children aged 8 years and above if they have been given supervision or instruction concerning how to do so safely and understand the hazards involved. Cleaning and user maintenance may only be carried out by children if they are over the age of 8, and supervised. Keep the appliance and its cord out of reach of children aged under the age of 8.
7. Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning how to use them safely and understand the hazards involved.

8. Children must not play with the appliance.
9. Check the kettle and cord/cable regularly for damage. If there is damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.
10. Do not attempt to repair the kettle yourself; only authorized and qualified personnel may repair this kettle.
11. Keep the kettle and cord/cable away from heat, direct sunlight, water, moisture, sharp edges, and the like.
12. Use only original accessories; do not use incompatible products to connect the appliance.
13. Do not use the kettle outdoors.
14. The base and exterior of the kettle are not water-resistant and must be kept dry at all times.
15. Under no circumstances may the kettle be placed in water or any other liquid, or come into contact with liquid. Do not handle the kettle with wet or damp hands. If the kettle becomes wet or damp, remove the main plug from the socket immediately.
16. Do not touch the contents of the kettle.
17. The kettle is only to be used with the power


base provided.

18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid danger.
19. **WARNING:** If the kettle is overfilled, boiling water may spurt out.
20. **WARNING:** Always ensure that the lid is tightly closed. Do not remove the lid while the water is boiling.
21. **CAUTION:** Position the lid so that steam is directed away from the handle.
22. **CAUTION:** Ensure that the appliance is switched off before removing it from the power base.
23. **WARNING:** Avoid spillage on the connector.
24. **WARNING:** Only use the appliance as recommended to avoid potential injury from misuse.
25. The heating element surface is subject to residual heat after use.
26. The body of the kettle must match with the power base. Switch the kettle off before removing it from the base.
27. Only use cold water when filling the device. The water level must be between the MAX. and MIN. marks.

28. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices, and other working environments;
- farmhouses;
- by clients in hotels, motels, and other residential-type environments; and
- bed and breakfast-type environments.

PRODUCT STRUCTURE DIAGRAM

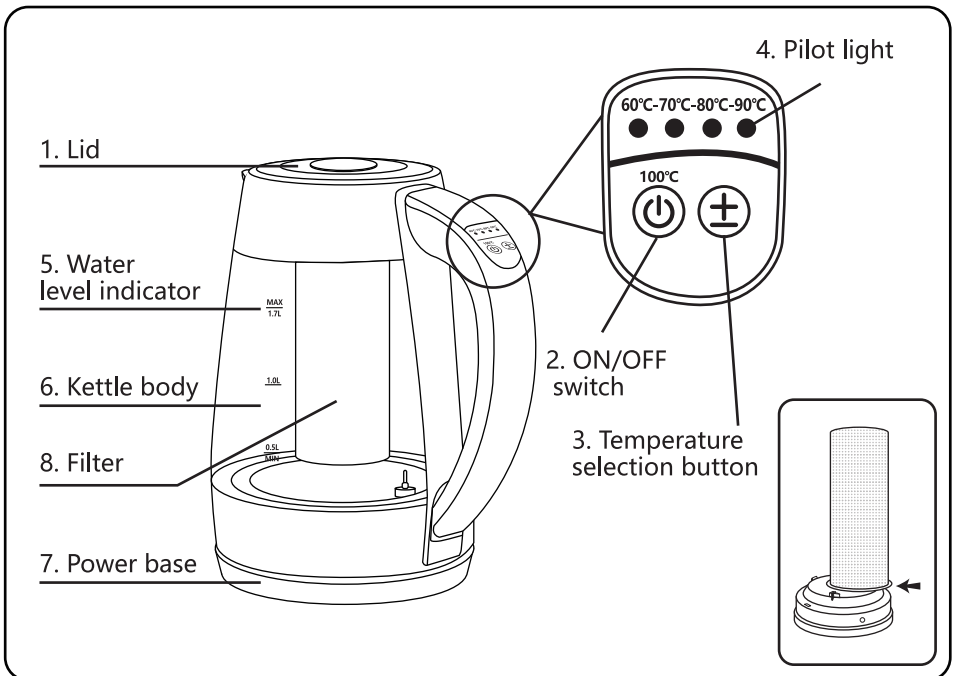

TECHNICAL SPECIFICATION

Model No.	300104OSX
Power Supply	220-240V ~ 50-60Hz
Power Consumption	1850-2200W
Capacity	1.7L

FUNCTION DESCRIPTION

1. Before using the kettle for the first time, fill it with cold water and boil twice without adding anything else.

NOTE: A newly bought kettle has a slight smell which is caused by the mold opening during manufacturing. This is normal and does no harm to your health.

2. Fill the kettle with water according to the water level indicator. Do not overfill. Heat to the desired temperature or boil tea by filter as indicated below.

NOTE: If you don't use direct drinking water, the water must be boiled for drinking.

BASE OPERATION

Press the  key briefly. The "Ding" sound indicates it has turned on, as does the red LED light. After the water boils, the indicator turns off and the buzzer sends out another "Ding" sound at the same time.

100 °C (Oolong)	Press  once: the red indicator light comes on.
90 °C (Make Coffee)	Press  4 times, the indicator light for 90°C and purple LED light come on.
80 °C (Green Tea)	Press  3 times: the indicator light for 80°C and yellow LED light come on.
70 °C (White Tea)	Press  twice: the indicator light for 70°C and blue LED light come on.
60 °C (Scented Tea)	Press  once: the indicator light for 60°C and green LED light come on.
Keep Warm	Press  for 3 seconds: The water temperature will remain at 85°C-100°C for 2 hours with the red indicator light flashing.

MAINTENANCE AND DESCALING

1. Always remove the plug from the mains supply before cleaning the kettle.
2. Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powers.
3. Never immerse the kettle and power base in water or other liquids.
4. Descale the kettle regularly (at least twice a year) as indicated below.
 - Fill the kettle up to MAX. with a mixture of ordinary vinegar and water in a ratio of 1:2. Switch on and wait until the appliance switches off automatically.
 - Keep the mixture inside the kettle overnight. Discard the mixture the following morning.
 - Fill the kettle with clean water up to MAX. and boil again.
 - Discard the boiled water to remove any remaining scale and vinegar.
 - Rinse the inside of the kettle with clean water.

DISPOSAL

Disassemble and recycle the kettle in accordance with local regulations.

Correct disposal of this product	
	This mark indicates that this product should not be disposed of in the same way as typical household waste in Europe. To prevent possible harm to the environment and human health, we suggest that you dispose of any unwanted kettles by delivering them to an appropriate waste disposal centre. Disposal should be carried out in an environmentally-friendly manner and the product should be made available to any applicable recyclable material collection service.

WARRANTY: 2 YEARS



AIGOSTAR INTERNATIONAL LIMITED
UNIT 4 TEES VALLEY COURT GLENARM ROAD
WYNYARD TS22 5FE GB
GB311003583

[HTTP://WWW.AIGOSTAR.COM](http://www.aigostar.com)

MADE IN CHINA